

**vtech**<sup>®</sup>  
Baby

User's Manual

# Sing & Discover Story Piano™



© 2007 VTech  
printed in China

91-02228-001-000 (美)

**Dear Parent:**

*Ever notice the look on your baby's face when they learn something new through their own discovery? These self-accomplished moments are a parent's greatest reward. To help fulfill them, VTech® created the **Infant Learning** series of toys.*

*These unique interactive learning toys directly respond to what children do naturally – play! Using innovative technology, these toys react to baby's interactions, making each play experience fun and unique as they learn age-appropriate concepts like first words, numbers, shapes, colors and music. More importantly, VTech®'s **Infant Learning** toys develop baby's mental and physical abilities by inspiring, engaging and teaching.*

*At VTech®, we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting VTech® with the important job of helping your child learn and grow!*

*Sincerely,*

 
*Your Friends at VTech®*

*To learn more about **Infant Learning** and other VTech® toys, visit [www.vtechkids.com](http://www.vtechkids.com)*

# INTRODUCTION

Thank you for purchasing the **VTech® Sing & Discover Story Piano™** learning toy.

The **Sing & Discover Story Piano™** is an interactive musical toy for toddlers. Turning the book pages changes the curriculum of the piano keys and twinkling music notes in the two modes of play. Create music with the piano keys, tap to the beat on the drum pad or sing along with one of the many songs with the real working microphone. The fun and music never ends!

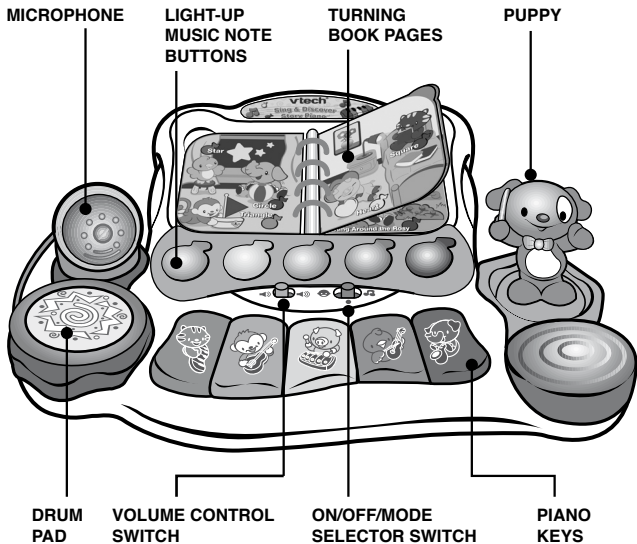

# INCLUDED IN THIS PACKAGE

 
- One VTech® Sing & Discover Story Piano™ learning toy
- One instruction manual

**WARNING:** All packing materials, such as tape, plastic sheets, wire ties and tags are not part of this toy, and should be discarded for your child's safety.

## GETTING STARTED

### BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit. Use a coin or screwdriver to loosen the screw.
3. Install 3 new 'AA' size (UM-3/LR6) batteries following the diagram inside the battery box.
4. Replace the battery cover and tighten the screw to secure the battery cover.

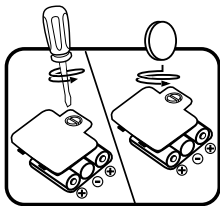

### BATTERY NOTICE

- The use of new alkaline batteries is recommended for maximum performance.
- Install batteries correctly observing the polarity (+, -) signs to avoid leakage.
- Do not mix old and new batteries.
- Do not mix batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Remove the batteries from the equipment when the unit will not be used for an extended period of time.
- Always remove exhausted batteries from the equipment.

 
- Do not dispose of batteries in fire.
- Do not attempt to recharge ordinary batteries.
- The supply terminals are not to be short-circuited.
- Only batteries of the same and equivalent type as recommended are to be used.

**WE DO NOT RECOMMEND THE USE OF RECHARGEABLE BATTERIES.**

## PRODUCT FEATURES


### 1. ON/OFF/MODE SELECTOR SWITCH

To turn the unit **ON**, slide the **ON/OFF/MODE SELECTOR SWITCH** to the **LEARNING MODE** ( 🧠 ) or the **MUSIC MODE** ( 🎵 ) position. To turn the unit **OFF**, slide the **ON/OFF/MODE SELECTOR SWITCH** to the **OFF** ( ● ) position.

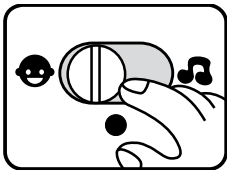


### 2. VOLUME CONTROL SWITCH

 To adjust the volume, slide the **VOLUME CONTROL SWITCH** to the ( 🔊 ) position for **LOW VOLUME** or to the ( 🔊 ) position for **HIGH VOLUME**.

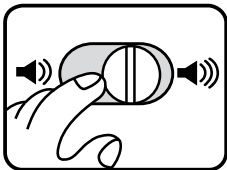

### 3. MODES OF PLAY

 The two modes of play include **LEARNING** and **MUSIC**. Within each mode of play there are three activities. Turn the book pages to change the button responses.

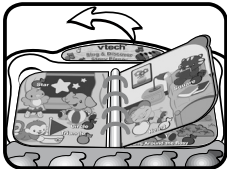


## 4. AUTOMATIC SHUT-OFF


To preserve battery life, the **VTech® Sing & Discover Story Piano™** will automatically power-down after approximately 30 seconds without input. The unit can be turned on again by pressing any button.

## ACTIVITIES

 
1. Slide the **on/off/mode selector switch** to turn the unit on and select a mode of play. You will hear a fun song and a variety of phrases. The lights will flash with the sound.

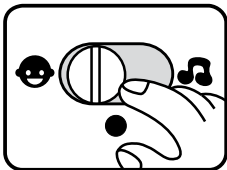

 
2. Turn the **book pages** to change all the button responses. You will hear a magical sound and phrase when the page is turned. The lights will flash with the sound.

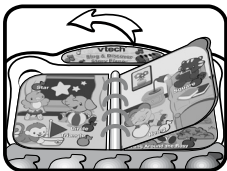

 
3. Press the **piano keys** to learn colors, animals, instruments and hear short tunes in the learning mode. In the music mode, press the piano keys to hear piano notes. Press the piano keys while a melody is playing to hear the melody play one note at a time. Stop pressing the piano keys to hear the melody resume normal play. The lights will flash with the sound.

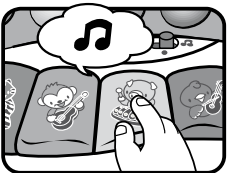

 4. Press the **light-up music note buttons** to hear a variety of songs, animal names and sounds, shapes and vocabulary words in the learning mode. In the music mode, you will hear a variety of melodies. Press the light-up music note buttons while a melody is playing to hear the related animal sound play over the melody. The lights will flash with the sound.

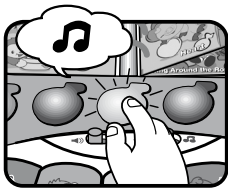

 
5. Move the **puppy** to hear fun sounds. If a melody is playing, move the puppy to increase the tempo of the melody or hold the puppy in one position to decrease the tempo of the melody. Stop moving the puppy to hear the melody resume normal play. The lights will flash with the sound.

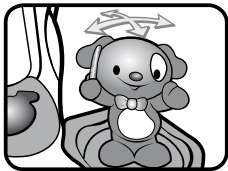

6. Press the **drum pad** to hear a musical phrase and a variety of drum beats. Press the drum pad while a melody is playing to hear drum sounds play over the melody. The lights will flash with the sound.



 7. Use the **microphone** to sing along with the many songs and melodies.

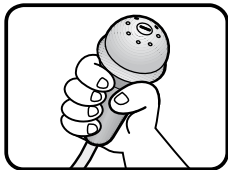

## MELODY LIST

1. Pop! Goes the Weasel
2. Row, Row, Row Your Boat
3. Old MacDonald Had a Farm
4. Alouette
5. Shoo Fly, Don't Bother Me
6. Glow Worm
7. Rondo
8. London Bridge
9. It's Raining, It's Pouring
10. Turkey in the Straw
11. Polly Wolly Doodle
12. Hickory Dickory Dock
13. Frère Jacques
14. Twinkle, Twinkle, Little Star
15. Oh Where Has My Little Dog Gone?

## SUNG SONG LYRICS: (to the tune of Skip To my Lou)

Come play with your animal friends.

The fun and music never ends.

Play the piano and sing too,

There's so much for us to do!

## CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.



3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

## TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

### **IMPORTANT NOTE:**

Creating and developing **Infant Learning** products is accompanied by a responsibility that we at **VTech**® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

## Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

THIS CLASS B DIGITAL APPARATUS COMPLIES WITH CANADIAN ICES-003.

CET APPAREIL NUMÉRIQUE DE LA CLASSE B EST CONFORME À LA NORME NMB-003 DU CANADA.

Caution : Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.