

vtech[®]

User's Manual

Spin & Learn Top™



© 2012 VTech
Printed in China
91-002436-012  

Dear Parent,

Ever notice the look on your baby's face when they learn something new through their own discovery? These self-accomplished moments are a parent's greatest reward. To help fulfill them, **VTech®** created the **Infant Learning®** series of toys.

These unique interactive learning toys directly respond to what children do naturally – play! Using innovative technology, these toys react to baby's interactions, making each play experience fun and unique as they learn age-appropriate concepts like first words, numbers, shapes, colors and music. More importantly, **VTech®'s Infant Learning®** toys develop baby's mental and physical abilities by inspiring, engaging and teaching.

At **VTech®**, we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting **VTech®** with the important job of helping your child learn and grow!

Sincerely,

Your friends at **VTech®**

To learn more about the **Infant Learning®** series and other **VTech®** toys, visit www.vtechkids.com

INTRODUCTION

Thank you for purchasing the **VTech® Spin & Learn Top™** learning toy!

Learning makes waves with the **VTech® Spin & Learn Top™**. Baby develops an awareness of cause-and-effect while spinning the top and pushing the buttons. 3D characters and color buttons teach animals, colors and counting. Fun music and friendly phrases encourage discovery in the deep sea!

STARFISH PLUNGER

4 SEA ANIMAL BUTTONS



MODE SELECTOR SWITCH

3 COLORFUL BUTTONS

INCLUDED IN THIS PACKAGE

- One VTech® Spin & Learn Top™
- One user's manual


WARNING: All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

ATTENTION : Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches et étiquettes. Ils ne font pas partie du jouet.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit. Use a screwdriver to loosen the screw.
3. Install 2 new 'AA' (AM-3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure.

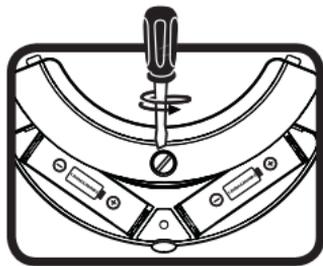

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

PRODUCT FEATURES

1. MODE SELECTOR SWITCH

To turn the unit **ON**, slide the **MODE SELECTOR SWITCH** to the Music Mode (🎵) or the Learning Mode (📖) position. To turn the unit **OFF**, slide the **MODE SELECTOR SWITCH** to the **OFF** position.



2. AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech® Spin & Learn Top™** will automatically power-down after approximately 45 seconds without input. The unit can be turned on again by pressing any button.

ACTIVITIES

1. Slide the **MODE SELECTOR SWITCH** to the Learning Mode or Music Mode position to turn the unit **ON**. You will hear a fun sing-along song and friendly phrases. The light will flash with the sound.
2. In Learning Mode, press the **starfish plunger** to spin the top and hear a variety of phrases and sounds. In Music Mode, press the **starfish plunger** to spin the top and hear music. When a melody is playing, press the plunger continuously to increase the




tempo. Stop pressing the plunger and the melody will return to the original tempo. When a melody is playing, press the sea animals to jam the corresponding animal sounds on top of the melody. Press the color buttons to jam other fun sounds too. The light will flash with the sound.

3. In Learning Mode, press the **sea animals** to hear fun sounds and to learn about their colors. In Music Mode, press the **sea animals** to hear their sounds and music. The light will flash with the sound.



4. In Learning Mode, the 3 color buttons teach colors. Press the yellow button for a fun counting phrase. Press the orange button for a question about animals. Press the purple button for a question about colors. In Music Mode, press the color buttons to hear music. The light will flash with the sound.

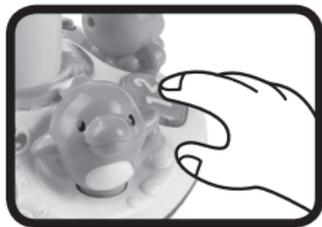

5. In Learning Mode, when a question is asked, if there is no answer after 5 seconds, the question will repeat. If there is no answer for another 5 seconds, you will hear the corresponding animal sound and its color. The light will flash with the sound.

MELODY LIST:

1. Row, Row, Row, Your Boat
2. Sailing, Sailing
3. Animal Fair
4. My Bonnie Lies Over the Ocean
5. Twinkle, Twinkle, Little Star
6. Alouette
7. Bingo
8. Hickory Dickory Dock

SUNG SONG LYRICS (to the tune of “London Bridge”)

Take a spin around the sea!

Meet new friends,

Feel the breeze.

Take a spin around the sea!

Come, let's play!

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working, please follow these steps:

1. Please turn the unit OFF.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit ON. The unit should now be ready to play again.
5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

For information on this product's warranty, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada.

IMPORTANT NOTE:

Creating and developing **Infant Learning** products is accompanied by a responsibility that we at **VTech**[®] take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S., or 1-877-352-8697 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

FCC Information:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

