


vtech[®]

User's Manual

Roll & Surprise Animal Train™



© 2014 VTech
Printed in China
91-009680-000 

Dear Parent,

*Ever notice the look on your baby's face when they learn something new through their own discovery? These self-accomplished moments are a parent's greatest reward. To help fulfill them, VTech® created the **Infant Learning**® series of toys.*

*These unique interactive learning toys directly respond to what children do naturally – play! Using innovative technology, these toys react to baby's interactions, making each play experience fun and unique as they learn age-appropriate concepts like first words, numbers, shapes, colors and music. More importantly, VTech®'s **Infant Learning**® toys develop baby's mental and physical abilities by inspiring, engaging and teaching.*

At VTech®, we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting VTech® with the important job of helping your child learn and grow!

Sincerely,

 
Your friends at VTech®

*To learn more about the **Infant Learning**® series and other VTech® toys, visit www.vtechkids.com*

INTRODUCTION

Thank you for purchasing the **VTech® Roll & Surprise Animal Train™** learning toy!

All aboard! Join the animal characters on the **VTech® Roll & Surprise Animal Train™** on a fun journey while learning about animals, animal sounds and colors. Press the button, flip the switch and turn the gear for fun animal surprises. The train is ready to go, all aboard!

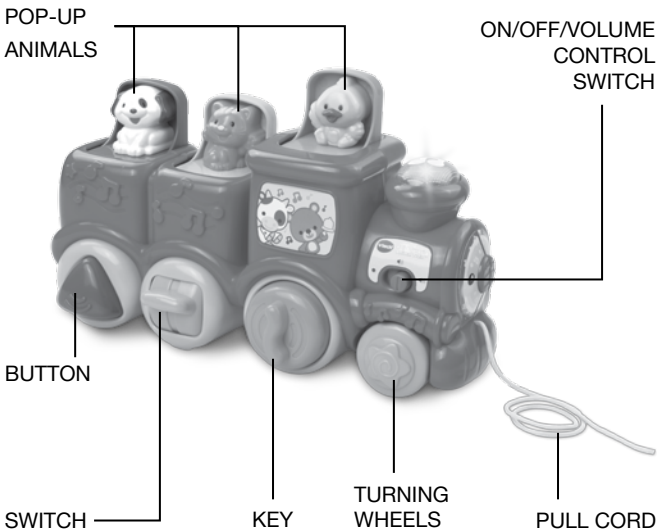

INCLUDED IN THIS PACKAGE

- One VTech® Roll & Surprise Animal Train™ learning toy
- One user's manual

 
WARNING: All packing materials, such as tape, plastic sheets, wire ties and tags are not part of this toy, and should be discarded for your child's safety.

ATTENTION : Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches et étiquettes. Ils ne font pas partie du jouet.

NOTE: Please keep this instruction manual as it contains important information.

BATTERY INSTALLATION

1. Make sure the unit is turned OFF.
2. Locate the battery cover on the back of the unit. Use a coin or a screwdriver to loosen the screw.
3. Install 2 new "AAA" (AM-4/LR03) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure.

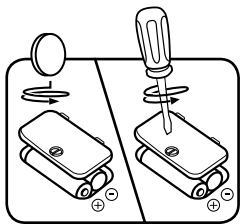

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

PRODUCT FEATURES

 
1. ON/OFF/VOLUME CONTROL SWITCH

To turn the unit **ON**, slide the **ON/OFF/VOLUME CONTROL SWITCH** to the **LOW VOLUME** (🔊) or **HIGH VOLUME** (🔊) position. To turn the unit **OFF**, slide the **ON/OFF/VOLUME CONTROL SWITCH** to the **OFF** (●) position.



2. PULL CORD

To convert the unit from a push toy to a pull toy, remove the pull cord from the storage compartment on the bottom of the train. For your child's safety we suggest you store the pull cord in the compartment until your child is walking.

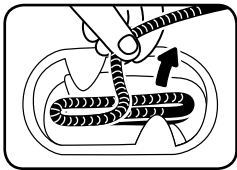

3. AUTOMATIC SHUT-OFF

 
To preserve battery life, the **VTech® Roll & Surprise Animal Train™** will automatically power-down after approximately 30 seconds without input. The unit can be turned on again by pressing any button.

ACTIVITIES


1. Slide the **on/off/volume control switch** to turn the unit on. You will hear train sounds, a phrase and a song. The light will flash with the sounds.



2. Press the **button** to pop up the dog. You will hear the animal name and color identified as well as a fun song, sounds and tunes. Press the button when the animal is already popped up to hear a playful tune. The light will flash with the sounds.

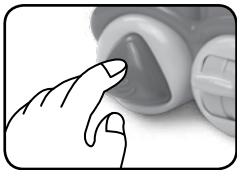

 3. Flip the **switch** to pop up the cat. You will hear the animal name and color identified as well as a fun song, sounds and tunes. Press the button when the animal is already popped up to hear a playful tune. The light will flash with the sounds.

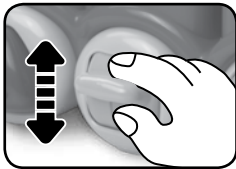

4. Turn the **key** to pop up the bird. You will hear the animal name and color identified as well as a fun song, sounds and tunes. Press the button when the animal is already popped up to hear a playful tune. The light will flash with the sounds.



5. Press the animals down into the train to hear a playful phrase. The light will flash with the sounds.



6. Pull or push the train to hear fun train sounds and random melodies. The light will flash with the sounds.



MELODY LIST

1. London Bridge
2. Yankee Doodle
3. Where Has My Little Dog Gone?
4. Pop! Goes the Weasel
5. Turkey in the Straw
6. Animal Fair
7. A-Tisket, A-Tasket
8. Here We Go Round the Mulberry Bush
9. Pussy Cat, Pussy Cat
10. Skip to My Lou
11. Three Blind Mice
12. Grandfather's Clock
13. Toyland
14. I've Been Working on the Railroad
15. Ring Around the Rosy
16. Aiken Drum

SUNG SONG LYRICS

SONG 1

Are you ready?

Here comes the train.

Chugga-chugga, choo-choo,

Chugga-chugga, choo-choo.

Off we go!

SONG 2

I'm popping up to say,
We're going on a trip,
Don't forget to pack your things!

SONG 3

I'm popping up to say,
Clickety-clack, I love riding down the track!

SONG 4

I'm popping up to say,
I'm always ready for an adventure.
Where should we go?

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.
5. This toy works best indoors on smooth surfaces.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit OFF.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit ON. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

For information on this product's warranty, please call **VTech**® 1-800-521-2010 in the U.S., or 1-877-352-8697 in Canada.

IMPORTANT NOTE:

Creating and developing Infant Learning products is accompanied by a responsibility that we at **VTech**® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

CAN ICES-3 (B)/NMB-3(B)

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



CLASS 1
LED PRODUCT