

vtech[®]

User's Manual

2-in-1 Shop & Cook Playset™



© 2013 VTech
Printed in China
91-009650-000 

Dear Parent,

At **VTech**[®], we know how important the first day of school is for your child. To help prepare preschoolers for this important event, **VTech**[®] has developed the **Preschool Learning**[™] series of interactive toys.

Preschool Learning[™] features fun characters and inviting school themes that use technology to capture a child's attention and teach important preschool skills like spelling, counting and the alphabet. These vital skills are taught in a way that's both fun and highly engaging to maintain a child's interest. Children will also be introduced to fun school subjects such as art class, music class and even recess! With **Preschool Learning**[™], learning is fun from day one!

At **VTech**[®], we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting **VTech**[®] with the important job of helping your child learn and grow!

Sincerely,

Your friends at **VTech**[®]

To learn more about **Preschool Learning**[™] series and other **VTech**[®] toys, visit www.vtechkids.com

INCLUDED IN THIS PACKAGE

- One user's manual
- One main unit



- Four wheeled legs



- One left panel



- One front panel



- 20 Kitchen & food play pieces



- One right panel



- One back panel



WARNING:

All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches et étiquettes. Ils ne font pas partie du jouet.

NOTE: Please keep the user's manual as it contains important information.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is **OFF**.
2. Locate the battery cover on the bottom of the unit.
3. Use a screwdriver to open the battery cover.
4. Install 2 new AA size (AM3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
5. Replace the battery cover and tighten the screw to secure.




BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.


- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

ASSEMBLY INSTRUCTIONS


To ensure your child's safety, adult assembly is required.

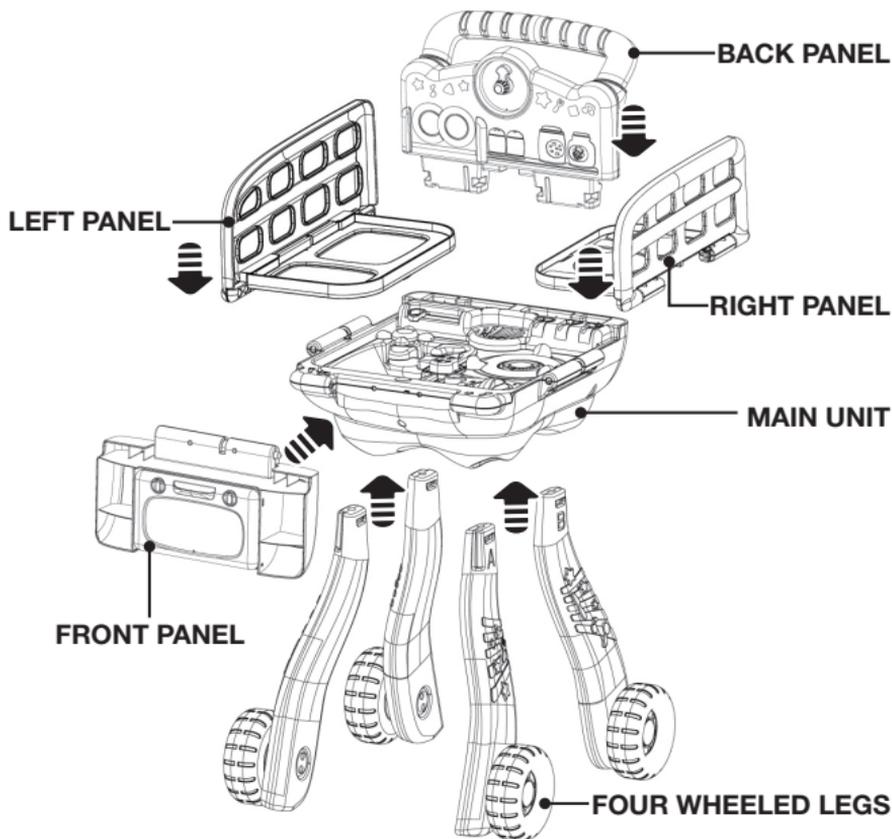


1. Attach the **LEGS** by inserting them into the appropriate holes located on the bottom of the **MAIN UNIT**. Insert the legs labeled with an “A” into the holes marked “A” and the legs labeled with a “B” into the holes marked “B”. Push the legs until they are fully inserted and you hear a click sound. Once they have been attached, they cannot be removed again.

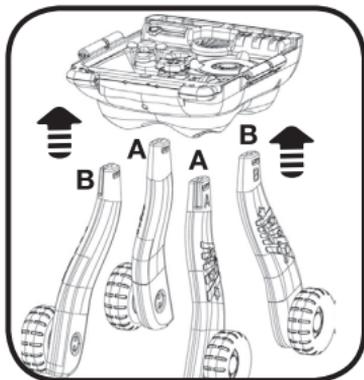


2. Attach the **RIGHT PANEL** onto the right side of the **MAIN UNIT** near the stove. Hold the right panel as shown in the picture with the grated side positioned vertically. On the main unit, locate the bar with two movable pins. Insert one of the pins into the hole on the panel. Then use your finger to depress and insert the other pin into the panel. Press the right panel firmly to ensure it is secure.

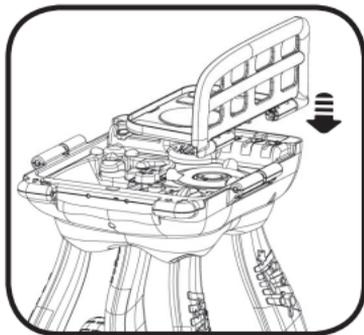


3. Attach the **LEFT PANEL** onto the left side of the **MAIN UNIT** near the faucet. Hold the left panel as shown in the picture with the grated side positioned vertically. On the main unit, locate the bar with two movable pins. Insert one of the pins into the hole on the panel. Then use your finger to depress and insert the other pin into the panel. Press the left panel firmly to ensure it is secure.

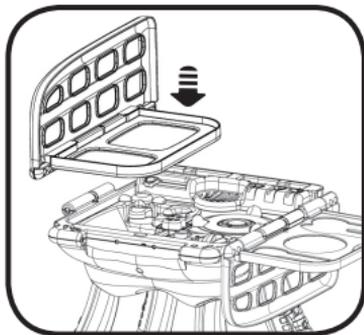

4. Insert the **BACK PANEL** into the **MAIN UNIT**. You will hear a click sound when the panel is secure.

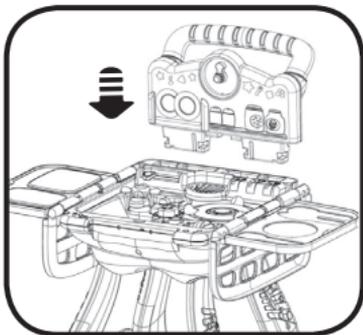

5. Insert the **FRONT PANEL** by placing it onto the front of the **MAIN UNIT**. Hold the front panel as shown in the picture with the oven side facing out. On the front panel, locate the bar with two movable pins. Insert one of the pins into the hole on the main unit. Then use your finger to depress and insert the other pin into main unit. Press the front panel firmly to ensure it is secure.

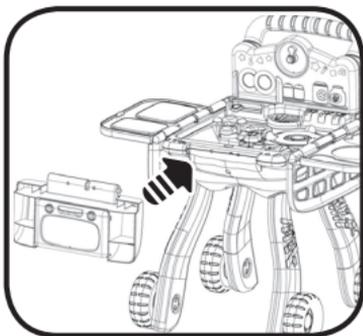

PRODUCT FEATURES

1. ON/OFF/MODE SELECTOR



Slide the **MODE SELECTOR** to turn the unit **ON** and to choose one of three activities. Slide the **MODE SELECTOR** to the **OFF**  position to turn the unit off.

2. TWO WAYS TO PLAY

There are **TWO WAYS TO PLAY** with the playset:



a. Shopping Cart

In **Shopping Cart** mode your child can insert the shopping list or utensils to hear fun responses. They can also roll the cart or drop the play pieces inside to see what happens.

b. Kitchen

The **Kitchen** mode features lots of interactive and electronic parts for kids to explore including an **OVEN KNOB**, **LIGHT-UP STOVE**, **RECIPE CARD HOLDER**, **UTENSIL HOLDER**, **SOAP PUMP**, **SPONGE** and **FAUCET**. A sink, oven, place setting and food prep area add to the role-play fun!

The transformation is easy! Simply flip up all three panels to play with the shopping cart. Fold down all three panels to play with the kitchen.

Note: The shopping cart mode will also work if only the left and right panels are flipped up. For optimal performance, it is recommended to flip up all three sides of the shopping cart.

3. 20 KITCHEN & FOOD PLAY PIECES

The playset comes with **20 KITCHEN & FOOD PLAY PIECES**. For added interactivity, the pot and pan interact with the **LIGHT-UP STOVE**. The utensils and recipe card also trigger responses when placed in their **HOLDERS** on the back panel.

4. VOLUME CONTROL SWITCH



Slide the **VOLUME CONTROL SWITCH** located on the bottom of the main unit to adjust the volume. There are three volume levels to choose from.

5. AUTOMATIC SHUT-OFF

To preserve battery life, the unit has an **AUTOMATIC SHUT-OFF** system. The unit will turn off after approximately 60 to 90 seconds with no input.

ACTIVITIES:

There are three activities each in both the Shopping Cart and Kitchen modes: **Pretend & Play**, **Learning Fun** and **Music Time**.

Shopping Cart

1. Pretend & Play

Drop the play pieces into the cart or move the cart around to hear some fun shopping phrases. Insert or remove the shopping list and utensils for more fun responses.

2. Learning Fun

Drop the play pieces into the cart, move the cart around or insert and remove the shopping list and utensils to learn about food and colors.

3. Music Time

Move the cart around, drop the play pieces into the cart or insert and remove the shopping list and utensils to enjoy four sung songs about shopping.

Kitchen

1. Pretend & Play

Play with the parts of the kitchen to hear some fun sounds and to learn basic kitchen rules and safety.

2. Learning Fun

Become a cooking expert! Listen and follow the steps as you hear them out loud.

3. Music Time

Turn the oven knob to any number to select a melody. Play with the parts of the kitchen to add in some fun sounds. To just play with the sound effects, turn the oven knob to the “0” position to turn off the melody.

MELODY LIST

1. A-Tisket, A-Tasket
2. Old MacDonald
3. Hot Cross Buns
4. Hickory Dickory Dock
5. This Old Man
6. Bingo
7. Mary Had a Little Lamb
8. Humpty Dumpty
9. The Glow-Worm

SUNG SONG LYRICS

Shopping Trip (to the tune of Mulberry Bush)

Here we go on a shopping trip,
A shopping trip,
A shopping trip.
Here we go on a shopping trip,
To buy some food today!

Shopping Cart (to the tune of London Bridge)

Put food in the shopping cart,
Shopping cart,
Shopping cart.
Put food in the shopping cart,
It's fun to do!

Fork, Knife, Spoon (to the tune of Frère Jacques)

Fork, knife, spoon
Fork, knife, spoon
Buy them now!
Buy them now!
Use them in the kitchen,
They help you eat your food.
Fork, knife, spoon
Fork, knife, spoon

Shopping List (to the tune of Muffin Man)

Do you have a shopping list?
A shopping list?
A shopping list?
Oh do you have a shopping list?
To help you buy your food!

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on a hard surface and do not expose the unit to moisture or water.
5. Do not put heavy objects inside the cart or sit in the shopping cart.

TROUBLESHOOTING

If for some reason the program/activity stops working, please follow these steps:

1. Turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S., or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

For information on this product warranty, please call **VTech**[®] at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada.

IMPORTANT NOTE

Creating and developing **VTech**[®] **Preschool Learning** products is accompanied by a responsibility that we at **VTech**[®] take very seriously. We make every effort to ensure the accuracy of the information which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S., or 1-877-352-8697 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

