

Disney

User's Manual

Pool Learning Stacker



Winnie
the
Pooh

vtech®

© Disney Based on the "Winnie the Pooh"
works by A.A. Milne and E.H. Shepard.

Visit the Disney Web site at www.disney.com/pooh

© 2009 VTech Printed in China



Dear Parent,

Ever notice the look on your baby's face when they learn something new through their own discovery? These self-accomplished moments are a parent's greatest reward. To help fulfill them, **VTech**® created the **Infant Learning**® series of toys.

These unique interactive learning toys directly respond to what children do naturally – play! Using innovative technology, these toys react to baby's interactions, making each play experience fun and unique as they learn age-appropriate concepts like first words, numbers, shapes, colors and music. More importantly, **VTech**®'s **Infant Learning**® toys develop baby's mental and physical abilities by inspiring, engaging and teaching.

At **VTech**®, we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting **VTech**® with the important job of helping your child learn and grow!

Sincerely,




Julia Fitzgerald
Vice President, Marketing
VTech Electronics, NA

To learn more about Infant Learning and other VTech toys, visit www.vtechkids.com

INTRODUCTION

Thank you for purchasing the **VTech® Pooh Learning Stacker!**

The **VTech® Pooh Learning Stacker** is an interactive toy for little ones to enjoy! Stack the rings to be introduced to shapes, objects and numbers while developing important motor skills and hand-eye coordination. Press the Pooh and Piglet buttons to hear fun phrases and cute songs. Fun sounds and cheerful melodies add to the enjoyment.

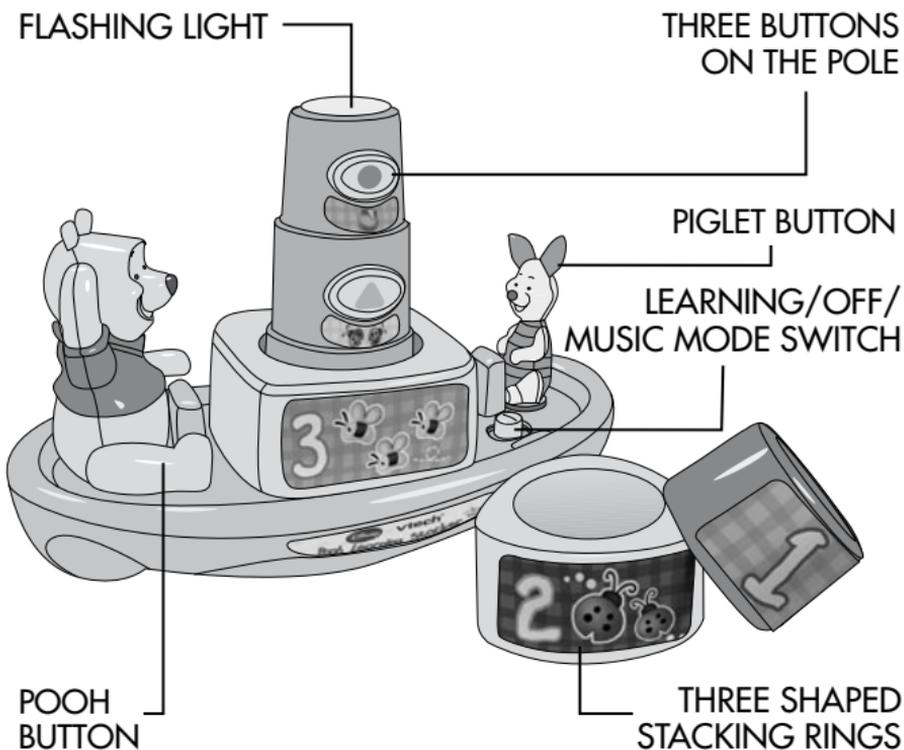


INCLUDED IN THIS PACKAGE

- One VTech® Pooh Learning Stacker
- One User's Manual

WARNING: All packing materials, such as tape, plastic sheets, wire ties and tags are not part of this toy, and should be discarded for your child's safety.

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover at the back of the unit. Use a screwdriver to loosen the screw.
3. Install 2 new 'AA' (AM3/LR6) batteries following the diagram inside the battery box.
4. Replace the battery cover and tighten the screw to secure.

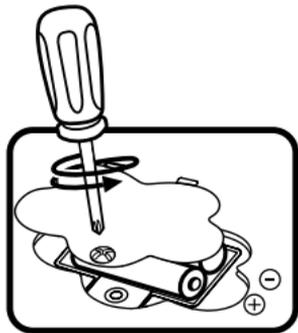

BATTERY NOTICE

- The use of new alkaline batteries is recommended for maximum performance.
- Install batteries correctly observing the polarity (+, -) signs to avoid leakage.
- Do not mix old and new batteries.
- Do not mix batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Remove the batteries from the equipment when the unit will not be used for an extended period of time.


- Always remove exhausted batteries from the equipment.
- Do not dispose of batteries in fire.
- Do not attempt to recharge ordinary batteries.
- The supply terminals are not to be short-circuited.
- Only batteries of the same and equivalent type as recommended are to be used.

WE DO NOT RECOMMEND THE USE OF RECHARGEABLE BATTERIES.

PRODUCT FEATURES

1. **LEARNING/ OFF/ MUSIC MODE SWITCH**

To turn the unit **ON**, slide the **LEARNING/ OFF/ MUSIC MODE SWITCH** to the **Learning Mode** (☺) or the **Music Mode** (🎵) position. To turn the unit **OFF**, slide the **LEARNING/ OFF/ MUSIC MODE SWITCH** to the **OFF** (●) position.

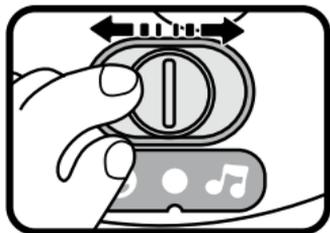

2. **MODES OF PLAY**


The two modes of play include **Learning Mode** and **Music Mode**. Slide the **LEARNING/ OFF/ MUSIC MODE SWITCH** to choose a mode of play.

3. **AUTOMATIC SHUT-OFF**



To preserve battery life, the **VTech® Pooh Learning Stacker** will automatically power-down after approximately 30 seconds without input. The unit can be turned on again by pressing any button or by adding or removing a ring.

ACTIVITIES



1. Slide the **LEARNING/ OFF/ MUSIC MODE SWITCH** to choose a mode of play. You will hear fun sounds, a song, melodies and phrases depending on the selected mode. The light will flash with the sounds.

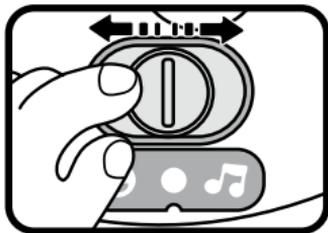



2. Stack the rings in **Learning Mode** to hear the corresponding shape identified and a fun sound. Remove the rings to hear the corresponding object and number identified and fun sounds. The light will flash with the sounds.

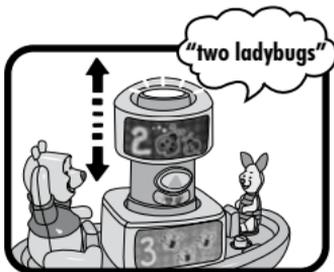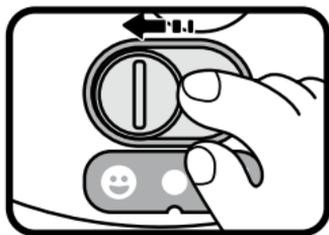


3. Stack the rings in **Music Mode** to hear cheerful melodies. Remove the rings to hear fun sounds. The light will flash with the sounds.

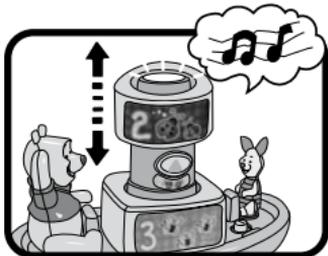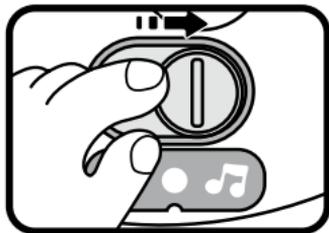

4. Press the buttons on the pole or quickly stack and remove the rings to hear short tunes in **Music Mode** or piano notes in **Learning Mode**. The light will flash with the sounds.

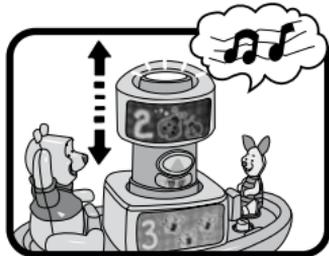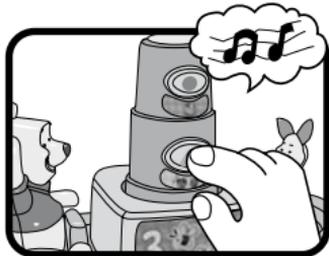

5. Press the **POOH BUTTON** or the **PIGLET BUTTON** to hear fun phrases, melodies and cute songs. The light will flash with sounds.

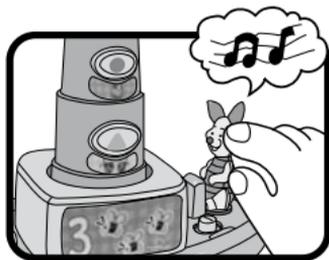

MELODY LIST

1. Hickory Dickory Dock
2. London Bridge
3. Ring Around the Rosy
4. Pop! Goes the Weasel
5. I've Been Working on the Railroad
6. This Old Man

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit off.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit on. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **Infant Learning** products is accompanied by a responsibility that we at **VTech**[®] take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

FCC Notice:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.