

vtech[®]
Baby

User's Manual

**Sit-to-
Stand**[™]
Dancing Tower



© 2007 VTech
Printed in China
91-02233-000-000 (美)

Dear Parent:

Ever notice the look on your baby's face when they learn something new through their own discovery? These self-accomplished moments are a parent's greatest reward. To help fulfill them, **VTech**[®] created the **Infant Learning** series of toys.

These unique interactive learning toys directly respond to what children do naturally – play! Using innovative technology, these toys react to baby's interactions, making each play experience fun and unique as they learn age-appropriate concepts like first words, numbers, shapes, colors and music. More importantly, **VTech**[®]'s **Infant Learning** toys develop baby's mental and physical abilities by inspiring, engaging and teaching.

At **VTech**[®], we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting **VTech**[®] with the important job of helping your child learn and grow!

Sincerely,


Your Friends at **VTech**[®]

To learn more about **Infant Learning** and other **VTech**[®] toys, visit www.vtechkids.com

INTRODUCTION

Thank you for purchasing the **VTech® Sit-to-Stand Dancing Tower™** learning toy.

The **Sit-to-Stand Dancing Tower™** is part of the **Sit-to-Stand™** series of toys developed to grow with baby. The fun-packed activity panel includes 5 light-up piano keys that teach animals, colors, instruments and styles of music. The rotating microphone encourages baby to sing along. The dancing bear captures baby's attention by moving to the music. The panel can be used alone for floor play, or add the trunk pieces at two different levels as baby grows. The toy is also motion-activated to encourage dancing and play.

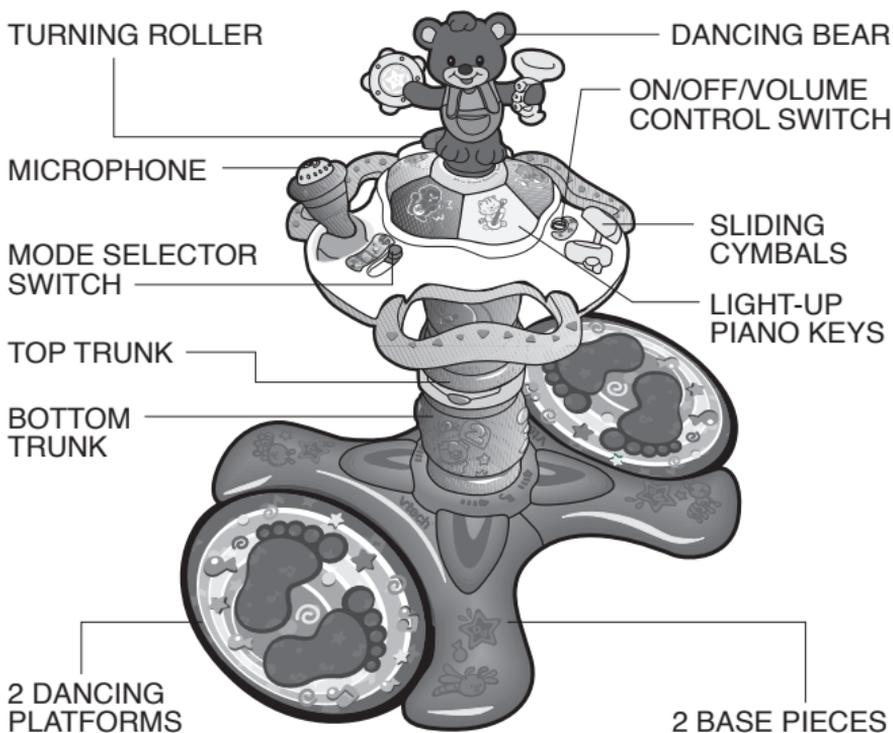


INCLUDED IN THIS PACKAGE

- One dancing bear




- One electronic activity panel

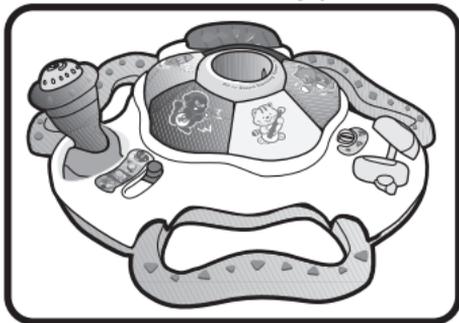



- Two connecting trunk pieces



- Two halves of one base

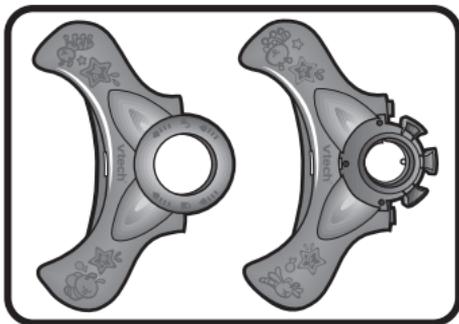

- Three screws (0.138 x 0.63 Inch) - Two dancing platforms

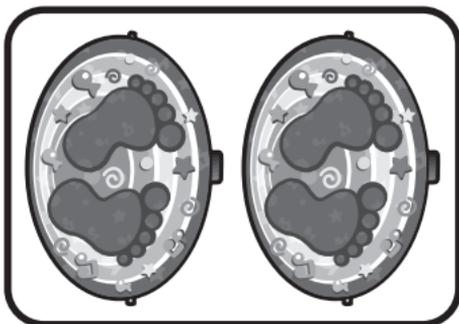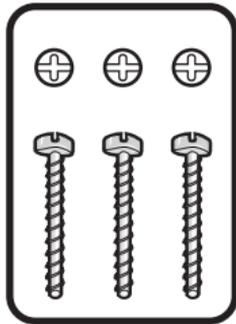


- One user's manual

WARNING: All packing materials, such as tape, plastic sheets, wire ties, tags and try-me cable are not part of this toy, and should be discarded for your child's safety.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the activity panel. Use a coin or a screwdriver to loosen the screw.
3. Install 4 new 'AA' (UM-3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure.

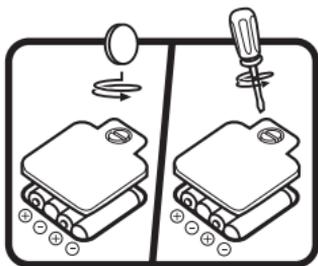

BATTERY NOTICE

- Install batteries correctly observing the polarity (+, -) signs to avoid leakage.
- Do not mix old and new batteries.
- Do not mix batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Remove the batteries from the equipment when the unit will not be used for an extended period of time.
- Always remove exhausted batteries from the equipment.
- Do not dispose of batteries in fire.

- Do not attempt to recharge ordinary batteries.
- The supply terminals are not to be short-circuited.
- Only batteries of the same and equivalent type as recommended are to be used.

WE DO NOT RECOMMEND THE USE OF RECHARGEABLE BATTERIES.

With the VTech® Sit-to-Stand Dancing Tower™, safety comes first.

To ensure your child's safety, please only assemble this product by an adult. Please ensure that the base, top and bottom trunk pieces, dancing platforms, dancing bear and activity panel are securely locked into position to avoid injury. For best results in Standing Play position, place the toy on carpet, a rug or a mat.

The activity panel can be used alone for floor play (9+ months), with the base and top trunk piece for sitting play (12+ months) or with the base and both the top and bottom trunk pieces for standing play (18+ months).

**Floor Play
(9+ months)**




**Sitting Play
(12+ months)**



**Standing Play
(18+ months)**




Please remove and discard the try-me cable between the dancing bear and the activity panel before assembly.

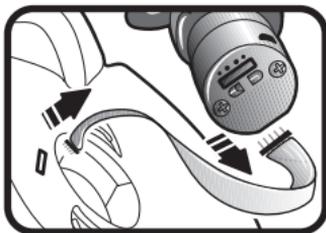


ASSEMBLY INSTRUCTIONS


1. Place the two base pieces on the floor. Align them with the left half above the right half, then push down to lock them together until you hear a click.

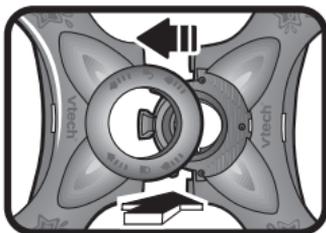

Use a screwdriver to fasten the three screws into the holes on the back of the base to securely fasten the base pieces together.

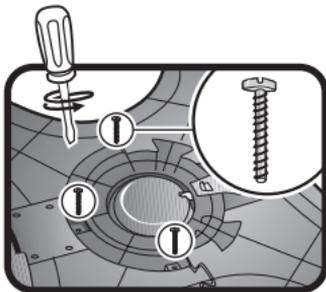



2. Insert the two dancing platforms into the base by first inserting the small rods on one side of the platforms into the corresponding holes on the base. Then, line up the tags on the top edges of the dancing platforms to the corresponding slots in the base. Slide the tags into the slots while at

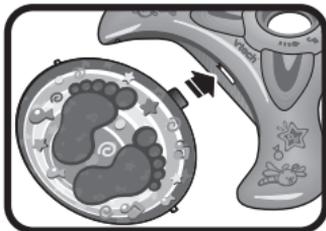


the same time inserting the opposite rods into the base.

3. Attach the trunk to the base by lining it up over the hole in the center of the base. Turn the trunk clockwise until you hear a click. The trunk can be separated into two parts. Remove the top trunk piece from the bottom trunk piece by pushing the button on the bottom piece, then turning the top piece counterclockwise one revolution.

For sitting play, the top trunk piece can be fitted to the base in the same way described above.

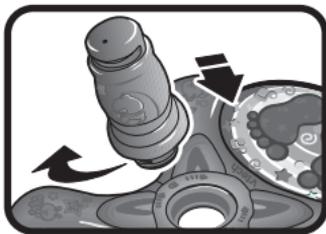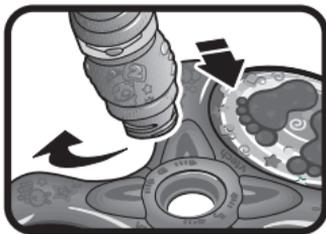


4. Attach the dancing bear to the activity panel by placing the dancing bear into the center of the activity panel. Press gently while turning the dancing bear until you hear it click into place. Please ensure the dancing bear is attached securely to the activity panel. Once the dancing bear has been attached, it cannot be removed again.

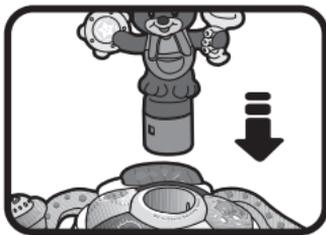

Attaching/Removing the Activity Panel

1. To attach the activity panel, pull the release locks located on the bottom of the activity panel away from the center. Insert the bottom of the panel into the trunk, then release the locks. Please ensure the activity panel is attached securely to the trunk. While attached to the trunk, the activity panel can be turned slightly during play.

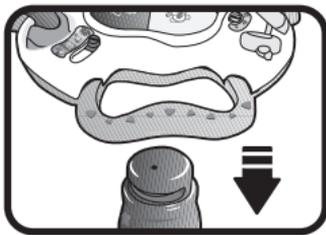

2. To remove the activity panel, pull the release locks located on the bottom of the activity panel away from the center. Pull the activity panel away from the trunk.





Changing Sit/Stand Position



1. Remove the activity panel from the trunk as directed above.




2. Remove the top trunk piece from the bottom trunk piece by pushing the button on the bottom piece, then turning the top piece counterclockwise one revolution.

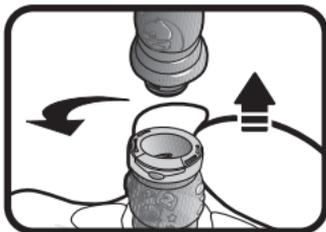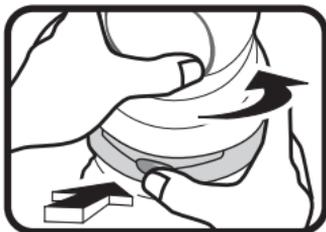


3. Remove the bottom trunk piece from the base by pulling back the release tab on the base.

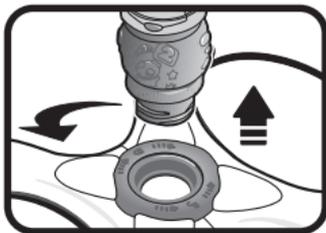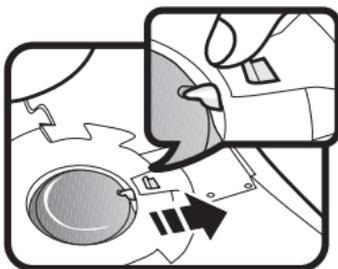

4. Attach the top trunk piece to the base by lining it up over the hole in the center of the base. Turn the trunk clockwise until you hear a click.

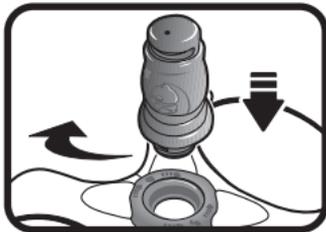


5. Attach the activity panel to the top trunk piece using the directions above.

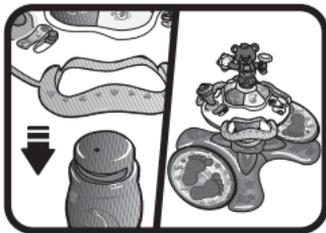

PRODUCT FEATURES

1. ON/OFF/VOLUME CONTROL SWITCH

To turn the unit **ON**, slide the **On/Off/Volume Control Switch** to the **low** (🔊) or **high** (🔊) volume position. To turn the unit **OFF**, slide the **On/Off/Volume Control Switch** to the **OFF** (●) position.

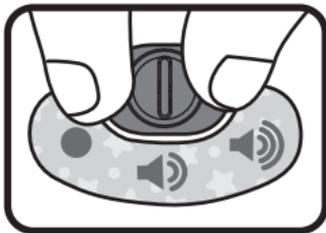


2. AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech® Sit-to-Stand Dancing Tower™** will automatically power-down after approximately 30 seconds without input. The unit can be turned on again by pressing any key. Rolling the roller or turning the microphone will not turn the unit on again.

3. MODES OF PLAY

Select from one of the four modes of play including **DANCE**, **SINGING**, **LEARNING** and **FOLLOW-ME** on the activity panel. Slide the **MODE SELECTOR SWITCH** to choose a mode.

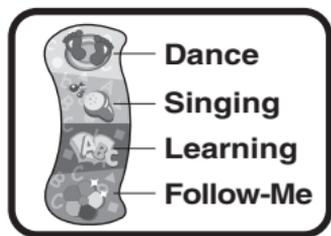


4. DANCING BEAR

The **DANCING BEAR** rewards babies with a variety of animations as it moves with music and sung songs.






5. MICROPHONE

The **MICROPHONE** can be used in any mode, and allows babies to sing along to well-known children's songs in **SINGING MODE**.

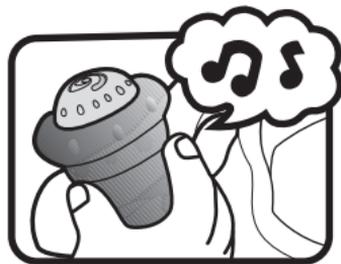


ACTIVITIES


1. Slide the **on/off/volume control switch** to low or high volume position to turn the unit on. You will hear an inviting sung song followed by an encouraging phrase depending on the mode you've selected. The lights will flash with the sounds and the bear will move to the song.
2. Slide the mode selector to the **Follow-Me Mode** position. The unit will automatically ask you to follow the lights, and will ask you to press a specific light-up piano key. Slide the cymbals to hear cymbals sound effects and a fun phrase. Turn the roller to hear a phrase, a sung song and sound effects. Activating the internal motion sensor will launch melodies, fun phrases and sound effects. Use the microphone to sing along! All along, the lights will flash with the sounds and the dancing bear will move to the music.

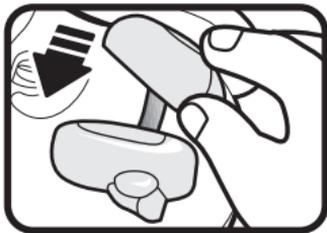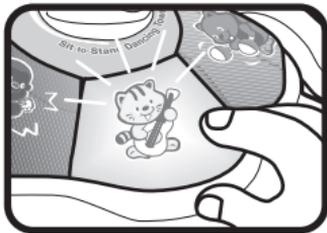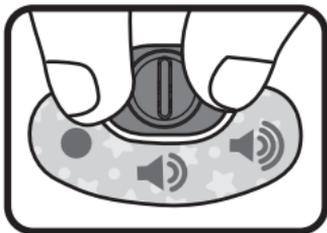


3. Slide the mode selector to the **Learning Mode** position. Press the light-up piano keys to learn about animals, instruments and colors. Slide the cymbals to hear cymbals sound effects and a fun phrase. Turn the roller to count and hear fun phrases. Activating the internal motion sensor will launch melodies, fun phrases and sound effects. Use the microphone to sing along! All along, the lights will flash with the sounds and the dancing bear will move to the music.

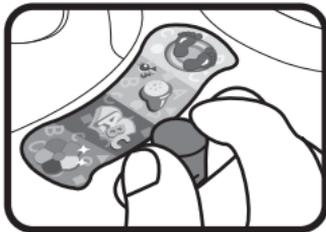

4. Slide the mode selector to the **Singing Mode** position. Press the light-up piano keys to hear sing-along songs and animal sound effects. Use the microphone to sing along! Slide the cymbals to hear cymbals sound effects and a fun phrase. Turn the roller to hear melodies. Activating the internal motion sensor will launch melodies, fun phrases and sound effects. All along, the lights will flash with the sounds and the dancing bear will move to the music.

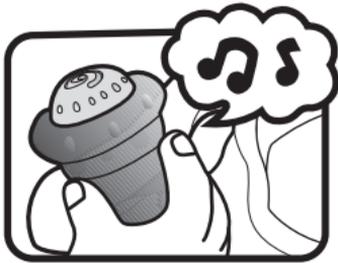

5. Slide the mode selector to the **Dance Mode** position. Press the light-up piano keys to learn about music styles and movements. Slide the cymbals to hear cymbals sound effects and a fun phrase. Turn the roller to hear a phrase, a sung song and sound effects. Activating the internal motion sensor will launch melodies, fun phrases and sound effects. Use the microphone to sing along! All along, the lights will flash with the sounds and the dancing bear will move to the music.

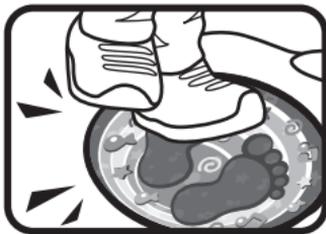

MELODY LIST

1. Hickory Dickory Dock
2. I've Been Working on the Railroad
3. Mulberry Bush
4. Shoo Fly
5. Turkey in the Straw
6. It's Raining, It's Pouring
7. Humpty Dumpty
8. Polly Wolly Doodle
9. Three Blind Mice
10. Baa, Baa, Black Sheep
11. Alouette
12. Hey, Diddle Diddle

SUNG SONG 1 LYRICS: (to the tune of Alphabet Song)

Flashing lights and music, too.

It's fun playing games with you.

SUNG SONG 2 LYRICS: (to the tune of Skip to My Lou)

The animals want to play, let's go!

Sounding trumpet and piano,

Maracas, guitar and the banjo.

They're a silly band, you know!

SUNG SONG 3 LYRICS: (to the tune of Row, Row, Row Your Boat)

Come, let's sing along,

To our favorite songs.

Grab the mic, sing with delight.

Singing all day long!

SUNG SONG 4 LYRICS: (to the tune of Bingo)

We're dancing now, let's turn around,

And learn how to get moo-vin'.

(clap, clap) Clap your hands!

(clap, clap) Stomp your feet!

(clap, clap) Wave your arms!

Now, shake your head, we're groovin'!

SUNG SONG 5 LYRICS: (to the tune of Pop! Goes the Weasel)

Round and round the cobbler's bench,

The monkey chased the weasel.

The monkey thought 'twas all in fun,
Pop! Goes the weasel!

SUNG SONG 6 LYRICS: (to the tune of London Bridge)

London Bridge is falling down,
Falling down, falling down.
London Bridge is falling down,
My fair lady!

SUNG SONG 7 LYRICS: (to the tune of Mulberry Bush)

Here we go round the mulberry bush,
The mulberry bush, the mulberry bush.
Here we go round the mulberry bush,
So early in the morning.

SUNG SONG 8 LYRICS: (to the tune of This Old Man)

This old man, he played one.
He played knick-knack on my thumb.
With a knick-knack paddywhack, give a dog a bone.
This old man came rolling home.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit sit for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.
6. Please replace batteries when the dancing bear begins to move slowly and not in time with the music.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **Infant Learning** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our **Consumer Services Department** at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, **with** any problems and/or suggestions that you might have. A service representative will be happy to help you.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.