

**vtech**<sup>®</sup>

User's Manual

# iDiscover App Activity Table™



© 2013 VTech  
Printed In China  
91-002855-000 (US)

Dear Parent,

Ever notice the look on your baby's face when they learn something new through their own discovery? These self-accomplished moments are a parent's greatest reward. To help fulfill them, VTech® created the **Infant Learning**® series of toys.

These unique interactive learning toys directly respond to what children do naturally – play! Using innovative technology, these toys react to baby's interactions, making each play experience fun and unique as they learn age-appropriate concepts like first words, numbers, shapes, colors and music. More importantly, VTech®'s **Infant Learning**® toys develop baby's mental and physical abilities by inspiring, engaging and teaching.

At VTech®, we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting VTech® with the important job of helping your child learn and grow!

 
Sincerely,

Your friends at VTech®

To learn more about the **Infant Learning**® series and other VTech® toys, visit [www.vtechkids.com](http://www.vtechkids.com)

# INTRODUCTION

Explore fun learning apps and table activities with the **iDiscover App Activity Table™**. Piano keys, a driving console and other table-top activities truly come to life when you plug in your iPad® or Android™ tablet. Children will develop language, motor and sensory development skills as the activity table interacts with your free downloadable activities.

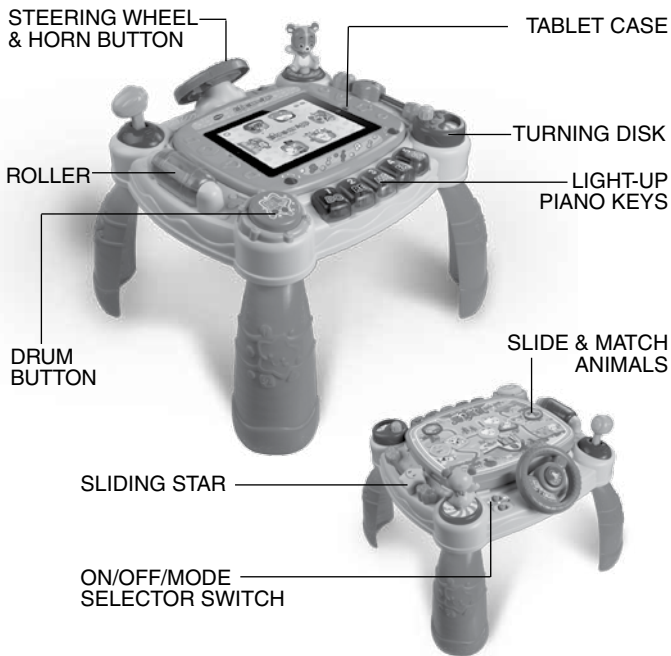

# INCLUDED IN THIS PACKAGE

- One VTech® iDiscover App Activity Table™
- One User's Manual
- Four table legs
- One tablet case
- One slide & match activity panel
- One Cody The Smart Cub
- One steering wheel

**WARNING:** All packing materials, such as tape, plastic sheets, wire ties and tags are not part of this toy, and should be discarded for your child's safety

 
**ATTENTION:** Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches et étiquettes. Ils ne font pas partie du jouet.

**NOTE:** Please keep this instruction manual as it contains important information.

## GETTING STARTED

### BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Install 3 new 'AA' (LR6/ AM-3) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
3. Replace the battery cover and tighten the screw to secure.

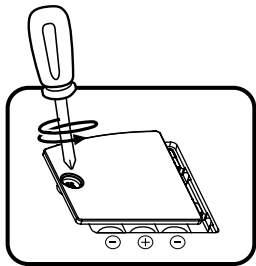



## BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.


## ASSEMBLY INSTRUCTIONS

With the VTech® iDiscover App Activity Table™ safety comes first. To ensure your child's safety, adult assembly is required.

  
1. Insert the table legs into the slots on the bottom of the activity panel. The legs will snap into place when installed correctly. Pull gently to remove the legs from the table.
2. Insert the steering wheel into the slot on the activity panel until you hear it click into place.

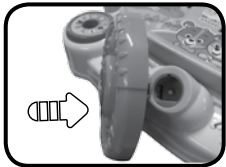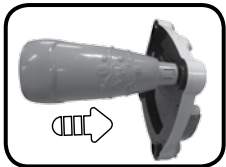

 
3. Insert Cody The Smart Cub into the slot on the activity panel until you hear it click into place.

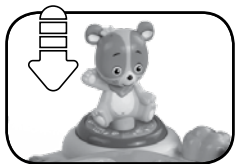


 
4. To use the slide & match animal panel, please remove it from the bottom of the activity panel. Slide the blue tab and pull gently on the panel.

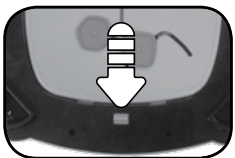

 5. To store the slide & match animal panel on the bottom of the activity panel, slide the blue tab and snap the panel into place.

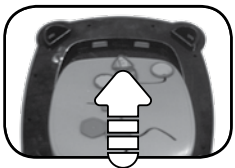

  
6. To insert an iPad® or Android™ tablet into the activity table, press and turn the two locks toward the center to the unlocked position and remove the tablet cover.

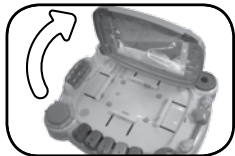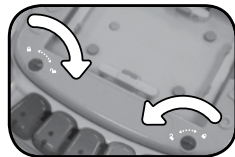

7. Slide the bars out to make space to insert the tablet. Turn on your tablet and enter into the activity you want to play to ensure that the tablet has been inserted correctly.



 
8. Insert the tabs on the tablet cover into the slots on the activity table.

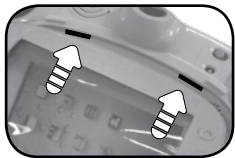

 9. Press and turn the locks to the locked position.



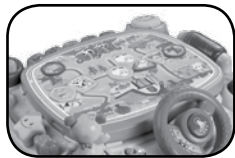


10. To use the slide & match animal panel insert it over top of the tablet case.





# PRODUCT FEATURES

## 1. MODE SELECTOR SWITCH

To turn the unit **ON**, slide the **MODE SELECTOR SWITCH** to the **Activity table** mode (  ) or the **App mode** (  ) position. To turn the unit **OFF**, slide the **MODE SELECTOR SWITCH** to the **OFF** (  ) position.



## 2. VOLUME CONTROL SWITCH

To adjust the volume, slide the **VOLUME CONTROL SWITCH** to the **LOW VOLUME** (  ) or **HIGH VOLUME** (  ) position.



## 3. AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech® iDiscover App Activity Table™** will automatically power-down after approximately 60 seconds without input. The unit can be turned on again by pressing any button.

# ACTIVITIES

1. Press the **light-up piano keys** to learn numbers and hear music notes. The lights will flash with sound.



2. Turn the **disc** or spin the **roller** to hear a variety of fun sounds, phrases and music. The lights will flash with sound.





 
3. Slide the **star** to hear playful phrases and fun sounds. The lights will flash with sound.



4. Turn the **steering wheel**, press the **horn button** or move the **gearshift** to hear a variety of imaginative phrases, fun sounds and music. The lights will flash with sound.




5. Tap **Cody The Smart Cub** to hear a fun song and playful phrases. The lights will flash with sound.

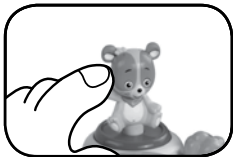

6. Slide the **mode selector switch** to the App mode. You will hear a short tune when a tablet is inserted into the table or you will hear a phrase reminding you to insert a smart tablet.



 7. Insert an iPad® or Android™ tablet to start playing with the activity table and the 6 free activities. When the tablet is inserted into the table you will hear a sound effect confirming that the tablet has been recognized.

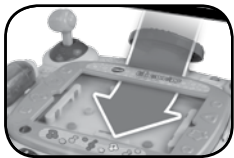

8. Download the free app from App Store™ or from the Google Play store. Follow the onscreen instructions to start playing.

## SUNG SONG LYRICS

### Song 1

Hello! Good day! Are you ready to play?  
Maybe you'll pretend you are driving today.  
Or you can make some music, what do you say?

### Song 2

Tapping on the drum, one-two-three.  
Making music's easy, you can see!  
Are you ready? Try it with me?  
Tap along, one-two-three!

### Song 3

Beep, beep, beep, we're on our way!  
Where should we go exploring today?

### Song 4

I am Cody The Smart Cub,  
I am happy to play with you!

## MELODY LIST:

1. BINGO
2. Humpty Dumpty
3. Grandfather's Clock
4. Oats Peas Beans and Barley Grow
5. Three Blind Mice
6. Polly Wolly Doodle
7. Pop Goes the Weasel
8. Take Me Out to the Ball Game
9. She'll Be Comin' Round the Mountain
10. Did You Ever See a Lassie?

## CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

The **VTech® iDiscover App Activity Table™** is compatible with the following tablets.

Brand	Model Name
Apple	iPad®
Apple	iPad® mini
Samsung	Galaxy

# TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

For information on this product's warranty, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada.

## DISCLAIMER AND LIMITATION OF LIABILITY

**VTech**<sup>®</sup> Electronics North America, L.L.C. and its suppliers assume no responsibility for any damage or loss resulting from the use of this handbook. **VTech**<sup>®</sup> Electronics North America, L.L.C. and its suppliers assume no responsibility for any loss or claims by third parties that may arise through the use of this product. **VTech**<sup>®</sup> Electronics North America, L.L.C. and its suppliers assume no responsibility for any damage or loss caused by deletion of data as a result of malfunction, dead battery, or repairs.

**Company:** **VTech**<sup>®</sup> Electronics North America, L.L.C.

**Address:** 1155 West Dundee Road, Suite 130, Arlington Heights, IL, 60004 USA

**Phone:** 1-800-521-2010 in the U.S., or 1-877-352-8697 in Canada.

### **IMPORTANT NOTE:**

Creating and developing **Infant Learning** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S., or 1-877-352-8697 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

### **NOTE :**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:  
(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND  
(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

CAN ICES-3 (B)/NMB-3(B)

**Caution:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

