

Disney

User's Manual

Pop-Up Honey Pot



Winnie
the
Pooh

vttech®

© Disney Based on the "Winnie the Pooh" works
by A.A. Milne and E.H. Shepard.

Visit the Disney Website at www.disney.com/pooh

© 2007 VTech Printed in China



Dear Parent,

*At VTech® we know that a child's imagination is a truly wonderful thing and needs to be developed and nurtured. That's why we created the **Winnie the Pooh electronic learning series™** of interactive learning toys to stimulate children's imaginations, while also teaching vital preschool concepts such as the alphabet, numbers, shapes, colors and objects.*

*Through the use of unique technology and engaging child-directed role-play scenarios, **Winnie the Pooh** characters magically come to life to guide children through learning activities. These engaging characters foster children's critical reasoning skills, enhance their fine motor skills and engage them in exciting role-play activities for endless hours of learning fun.*

At VTech® we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting VTech® with the important job of helping your child learn and grow!

Sincerely,

 
Your Friends at VTech®

*To learn more about **Winnie the Pooh electronic learning series™** and other VTech® toys, visit*
www.vtechkids.com

INTRODUCTION

Thank you for purchasing the **VTech® Pop-Up Honey Pot!**

Little ones will have lots of fun with the **Pop-Up Honey Pot**. Press the light-up Tigger button to see Pooh appear, then push him back down to play again and again! Features a chunky music button for cheerful melodies and cute songs. Fun sounds and phrases add to the enjoyment as your child develops hand-eye coordination and grasps the concept of cause and effect. Learning has never been so much fun!

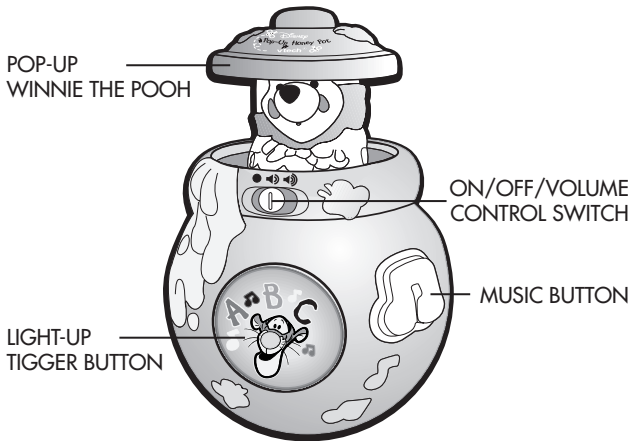

INCLUDED IN THIS PACKAGE

 
- One VTech® Pop-Up Honey Pot.
- One User's Manual.

WARNING: All packing materials such as tape, plastic sheets, wire ties and tags are not part of this toy, and should be discarded for your child's safety.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover at the back of the unit. Use a screwdriver to loosen the screw.
3. Install 2 new 'AA' (UM3/LR6) batteries following the diagram inside the battery box.
4. Replace the battery cover and tighten the screw to secure.

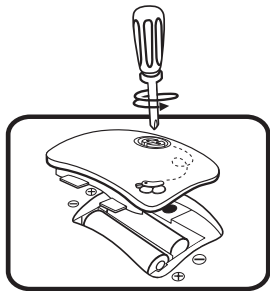

BATTERY NOTICE

 


- Install batteries correctly observing the polarity (+, -) signs to avoid leakage.
- Do not mix old and new batteries.
- Do not mix batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Remove the batteries from the equipment when the unit will not be used for an extended period of time.


- Always remove exhausted batteries from the equipment.
- Do not dispose of batteries in fire.
- Do not attempt to recharge ordinary batteries.
- The supply terminals are not to be short-circuited.
- Only batteries of the same and equivalent type as recommended are to be used.

WE DO NOT RECOMMEND THE USE OF RECHARGEABLE BATTERIES.

PRODUCT FEATURES

1. ON/OFF/VOLUME CONTROL SWITCH

 To turn the unit **ON**, slide the **ON/OFF/VOLUME CONTROL SWITCH** to the **LOW VOLUME** () or **HIGH VOLUME** () position. To turn the unit **OFF**, slide the **ON/OFF/VOLUME CONTROL SWITCH** to the **OFF** () position.

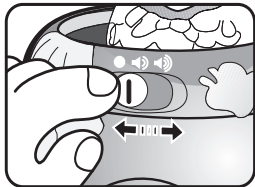


2. AUTOMATIC SHUT-OFF


To preserve battery life, the **VTech® Pop-Up Honey Pot** will automatically power-down after approximately 30 seconds without input. The unit can be turned on again by pressing any button.

TO BEGIN PLAY

 1. Slide the **ON/OFF/VOLUME CONTROL SWITCH** to turn the unit **ON**. You will hear a cute “peek-a-boo” song followed by “Oh, I hear someone. Is that you?” The light will flash with the sounds.

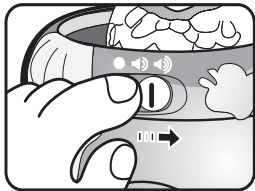

 2. Press the **LIGHT-UP TIGGER BUTTON** to hear fun phrases, sounds, “ABC” song or the “Hickory Dickory Dock” melody. The light will flash with the sounds.

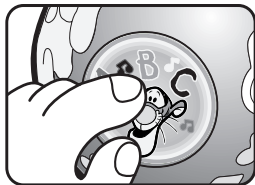

3. Press the **MUSIC BUTTON** to hear either the “peek-a-boo” or the “ABC” song or a variety of cheerful melodies. If a melody is playing and the Tigger button is pressed, fun sounds will play over the melody. The light will flash with the sounds.



4. If there is no input to the unit after approximately 10 seconds, you will hear a fun phrase. After another 10 seconds, if there is still no input, you will hear either the “peek-a-boo” or the “ABC” song. If there continues to be no input to the unit, you will hear “Good-bye!”, then it will automatically power-down.

MELODY LIST

1. Hickory Dickory Dock
2. The Wheels on the Bus
3. Pop! Goes the Weasel
4. Hey Diddle Diddle
5. Polly Put the Kettle On

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **electronic learning Winnie the Pooh** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This Class B digital apparatus complies with Canadian ices-003.

Cet appareil numérique de la classe b est conforme à la norme nmb-003 du Canada.