

User's Manual

Musical Rhymes Book[™]



© 2015 VTech Printed in China 91-002995-000 (B)

Dear Parent,

Ever notice the look on your baby's face when they learn something new through their own discovery? These self-accomplished moments are a parent's greatest reward. To help fulfill them, VTech® created the **Infant Learning**® series of toys.

These unique interactive learning toys directly respond to what children do naturally – play! Using innovative technology, these toys react to baby's interactions, making each play experience fun and unique as they learn age-appropriate concepts like first words, numbers, shapes, colors and music. More importantly, **VTech®'s Infant Learning®** toys develop baby's mental and physical abilities by inspiring, engaging and teaching.

At **VTech**[®], we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting **VTech**[®] with the important job of helping your child learn and grow!

sincerely,

Your friends at **VTech**®

To learn more about **VTech**® toys, visit www.vtechkids.com

Introuction

INTRODUCTION

Thank you for purchasing the VTech[®] Musical Rhymes Book™.

Explore classic nursery rhymes with the **Musical Rhymes BookTM**. Slide and twist the fun play pieces while exploring each easy-to-turn page. Then play piano sounds with the five colorful piano keys that introduce colors and instruments.

LIGHT-UP STAR SLIDING BEAR

 
ON/OFF/ MODE SELECTOR SWITCH

INSTRUMENT BUTTONS

INCLUDED IN THIS PACKAGE

- One VTech[®] Musical Rhymes Book™ learning toy
- One user's manual
- WARNING: All packing materials, such as tape, plastic sheets, wire ties and tags are not part of this toy and should be discarded for your child's safety.
- ATTENTION: Pour la sécurité de votre enfant, débarrassezvous de tous les produitsd'emballagetelsquerubansadh ésifs, feuilles de plastique, attaches etétiquettes. Ils ne font pas partie du jouet.
- NOTE: Please keep user's manual as it contains important information.

Unlock the packaging locks:




- Rotate the packaging locks 90 degrees counter-clockwise.
- 2 Pull out the packaging locks.

GETTING STARTED

BATTERY INSTALLATION

- 1. Make sure the unit is turned **OFF**.
- Locate the battery cover on the top of the spine of the book. Use a screwdriver to loosen the screw.
- Install 2 new 'AAA' (AM-4/LR03) batteries following the diagram inside the battery box. (The use of new, alkaline batteries is recommended for maximum performance.)

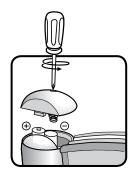

4. Replace the battery cover and tighten the screw to secure.

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbonzinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

PRODUCT FEATURES

 
1. ON/OFF/MODE SELECTOR SWITCH

To turn the unit ON, slide the ON/ OFF/MODE SELECTOR SWITCH to the SING-ALONG MODE ($\[\] \] \] \] or the MUSIC MODE (\[\] \] \] position. To$ turn the unit OFF, slide the ON/OFF/MODE SELECTOR SWITCH to theOFF (OFF) position.



2. VOLUME CONTROL SWITCH

To adjust the volume, slide the **VOLUME CONTROL SWITCH** on the back of the unit to the **LOW VOLUME** $(\blacksquare))$ or the **HIGH VOLUME** $(\blacksquare))$ position.



3. AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech[®] Musical Rhymes Book™** will automatically power-down after several seconds without input. The unit can be turned on again by pressing the instrument buttons or by turning the pages.

Activities

ACTIVITIES

- Slide the on/off/mode selector switch to turn the unit on. You will hear a song and a playful phrase in the sing-along mode and a playful phrase and melody in the music mode. The light will flash with the sound.
- 2. Turn the **book pages** in the singalong mode to hear a fun sound and a sung nursery rhyme. In the music mode you will hear a fun sound and a melody. The light will flash with the sound.
- 3. Press the **instrument buttons** in the sing-along mode to hear the color of the button introduced, the instrument name and sound or a random melody played with the related instrument sound. In the music mode you will hear individual piano notes. The light will flash with the sound.







<u>Melody List/Care & Maintenance</u>

MELODY LIST

- 1. A-Tisket, A-Tasket
- 2. Little Boy Blue
- 3. Old MacDonald Had a Farm
- 4. Hey Diddle Diddle
- 5. Are You Sleeping?
- 6. Here We Go Round the Mulberry Bush

CARE & MAINTENANCE

- 1. Keep the unit clean by wiping it with a slightly damp cloth.
- 2. Keep the unit out of direct sunlight and away from any direct heat source.
- 3. Remove the batteries when the unit is not in use for an extended period of time.
- 4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

- 1. Please turn the unit **OFF**.
- 2. Interrupt the power supply by removing the batteries.
- 3. Let the unit stand for a few minutes, then replace the batteries.
- 4. Turn the unit **ON**. The unit should now be ready to play again.
- 5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

For information on this product's warranty, please call **VTech®** 1-800-521-2010 in the U.S., or 1-877-352-8697 in Canada.

IMPORTANT NOTE:

Creating and developing Infant Learning products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- · Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

CAN ICES-3 (B)/NMB-3(B)

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.