

vtech[®]

User's Manual

Push & Learn Pony™



© 2010 VTech

Printed in China

91-002435-000-000 (美)

Dear Parent,

Ever notice the look on your baby's face when they learn something new through their own discovery? These self-accomplished moments are a parent's greatest reward. To help fulfill them, **VTech®** created the **Infant Learning®** series of toys.

These unique interactive learning toys directly respond to what children do naturally – play! Using innovative technology, these toys react to baby's interactions, making each play experience fun and unique as they learn age-appropriate concepts like first words, numbers, shapes, colors and music. More importantly, **VTech®**'s **Infant Learning®** toys develop baby's mental and physical abilities by inspiring, engaging and teaching.

At **VTech®**, we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting **VTech®** with the important job of helping your child learn and grow!

Sincerely,

Your friends at **VTech®**

To learn more about the **Infant Learning®** series and other **VTech®** toys, visit www.vtechkids.com.

INTRODUCTION

Thank you for purchasing the **VTech® Push & Learn Pony™** learning toy!

Load up for learning with the **VTech® Push & Learn Pony™**! Colorful blocks teach letters, shapes, animals and more, all while strengthening motor skills. Cheerful songs and phrases encourage exploration and discovery. The optional pull cord stores away until baby is ready to pull the pony.

THREE PIANO KEYS

MANE BUTTON



MODE SELECTOR SWITCH

FOUR BLOCKS

INCLUDED IN THIS PACKAGE


- One VTech® Push & Learn Pony™
- Four Blocks
- One User's Manual

WARNING: All packing materials, such as tape, plastic sheets, wire ties and tags are not part of this toy, and should be discarded for your child's safety.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit. Use a coin or a screwdriver to loosen the screw.
3. Install 2 new 'AA' (AM-3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure.

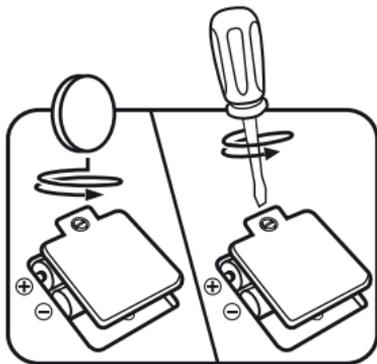

BATTERY NOTICE

- Install batteries correctly observing the polarity (+, -) signs to avoid leakage.
- Do not mix old and new batteries.


- Do not mix batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Remove the batteries from the equipment when the unit will not be used for an extended period of time.
- Always remove exhausted batteries from the equipment.
- Do not dispose of batteries in fire.
- Do not attempt to recharge ordinary batteries.
- The supply terminals are not to be short-circuited.
- Only batteries of the same and equivalent type as recommended are to be used.

WE DO NOT RECOMMEND THE USE OF RECHARGEABLE BATTERIES.

PRODUCT FEATURES

1. MODE SELECTOR SWITCH

To turn the unit **ON**, slide the **Mode Selector Switch** to the **Learning** () or **Music** () **Mode** position. To turn the unit **OFF**, slide the **Mode Selector Switch** to the **OFF** () position.

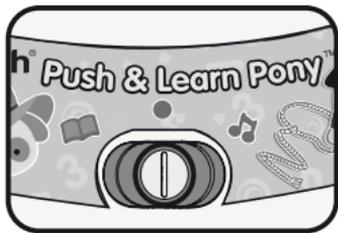


2. AUTOMATIC SHUT-OFF


To preserve battery life, the **VTech® Push & Learn Pony™** will automatically power-down after approximately 24 seconds without input. The unit can be turned on again by pressing any button. Rolling the unit or taking out the blocks will not turn on the unit.

ACTIVITIES

1. Slide the Mode Selector Switch to Learning or Music Mode. You will hear fun sounds, a song and an encouraging phrase. The lights will flash with the sounds.
2. Press the Mane Button to hear a horse sound and a sung song in Learning Mode. In Music Mode, press the Mane Button to hear fun sounds, phrases and sung songs. The lights will flash with the sounds.
3. Press the Piano Keys to learn numbers and shapes in Learning Mode. In Music Mode, press the Piano Keys to hear notes. When a melody is playing in Music Mode, press the Piano Keys to play the melody one note at a time. The lights will flash with the sounds.
4. Press the Cart Button to hear fun sounds, phrases and sung songs in both modes. This button can only be activated when there are no blocks in the cart. The lights will flash with the sounds.

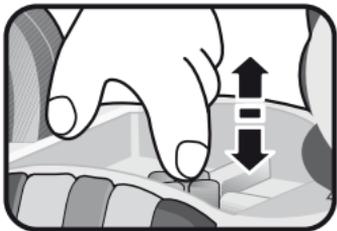

5. Insert the Blocks to learn letters, shapes, animals and objects in Learning Mode. In Music Mode, insert the blocks to hear related sound effects and short tunes. The lights will flash with the sounds.

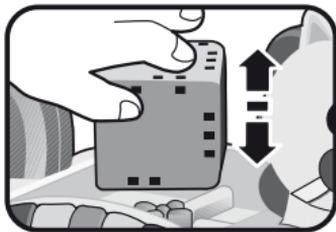

6. When there are no other responses playing, push the pony to hear fun sounds and phrases. When a melody is playing in Music Mode, push the pony to speed up the melody. The lights will flash with the sounds.



7. If there is no input after approximately 8 seconds, you will hear fun sound effects and a phrase. If there is still no input about 8 seconds after that, a phrase and a song will play. If there is no input for another 8 seconds, you will hear “Bye-bye,” and the unit will go into sleep mode. The unit can be turned on again by pressing any button. Rolling the unit or taking out the blocks will not turn on the unit.

MELODY LIST:

1. Bingo
2. Skip to My Lou
3. Here We Go 'Round the Mulberry Bush
4. Old MacDonald
5. I've Been Working on the Railroad
6. Polly Wolly Doodle

SUNG SONG 1 LYRICS (To tune of “Yankee Doodle”)

Pull the pony ‘round and ‘round,
We’re carrying a full load.
Load blocks up and pull them out,
Then roll on down the road!

SUNG SONG 2 LYRICS (To tune of “Good Night Ladies”)

Pull the pony.
Load all the blocks.
Pull the pony.
It’s fun to play and learn!

CARE AND MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **Infant Learning** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S., or 1-877-352-8697 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not

installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:
(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

THIS CLASS B DIGITAL APPARATUS COMPLIES WITH CANADIAN ICES-003.

CET APPAREIL NUMÉRIQUE DE LA CLASSE B EST CONFORME À LA NORME NMB-003 DU CANADA.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.