



How do I Insert a microSD Card?

Step 1: You can use a microSD card up to 32GB in size to increase the memory available on your KidiBuzz™.

Step 2:



First, locate the microSD card slot on the left side of your device.

Step 3:



Insert the microSD card with the label side facing down and push until you hear a click.

Step 4: To remove the card, push down until you hear a click and let the card pop out slightly. Then, remove the card with your fingers.