

VTECH®

SmartSTART®



ABC Choo Choo™

USER'S MANUAL

Dear Parent:

At VTECH® we know that a child has the ability to do great things.


That's why all of our electronic learning products are uniquely designed to develop a child's mind and learn to the best of their ability. Whether it's introducing numbers and letters, identifying colors and shapes, or stimulating senses with lights and music, all VTECH® infant and toddler learning products encourage your child's natural growth and discovery skills.

When it comes to providing electronic learning products that enlighten, entertain and develop minds, at VTECH® we see the potential in every child.

INTRODUCTION

Thank you for purchasing the **VTECH® ABC Choo Choo™** learning toy! We at **VTECH®** are committed to providing the best possible products to entertain and educate your child. Should you have any questions or concerns, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-800-267-7377 in Canada.

The **VTECH® ABC Choo Choo™** is a character based roll train for babies 6 months and up. An engaging voice sings as the train is pushed across the floor while the colorful beads pop within the clear dome on the smokestack. Three cartoon-like train sound effects and a wobbling face give this little train a unique personality.

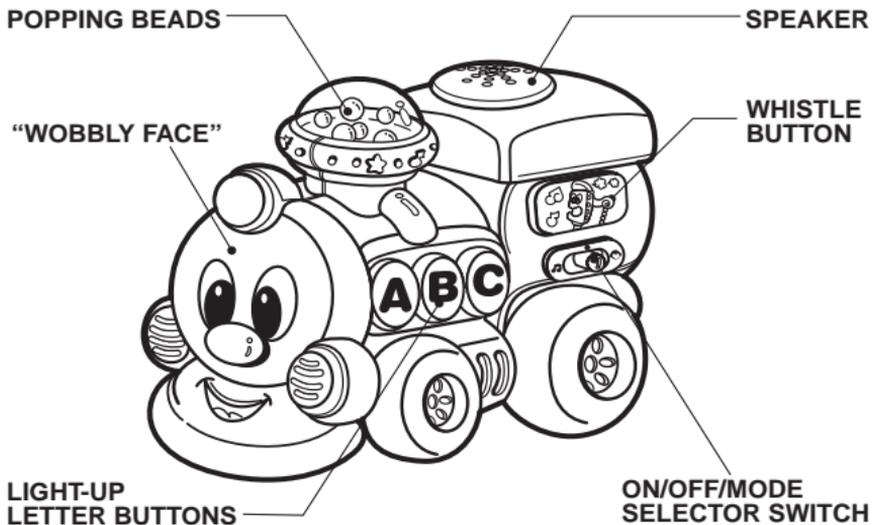


INCLUDED IN THIS PACKAGE

- One VTECH® ABC Choo Choo™ learning toy.
- One instruction manual.

WARNING: All packing materials, such as tape, plastic sheets, wire ties and tags are not part of this toy, and should be discarded for your child's safety.

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit. Use a coin or screwdriver to loosen the screw.
3. Install 2 new “AA” (UM-3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure the battery cover.

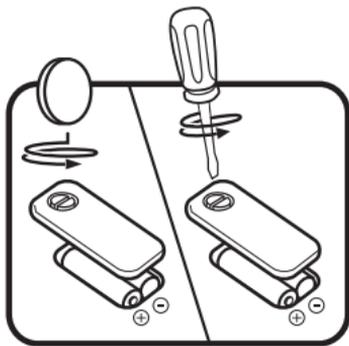

BATTERY NOTICE

- Install batteries correctly observing the polarity (+, -) signs to avoid leakage.
- Do not mix old and new batteries.
- Do not use batteries of different types.
- Remove exhausted or new batteries from the equipment when the unit will not be used for an extended period of time.
- Do not dispose of batteries in fire.
- Do not attempt to recharge ordinary batteries.
- The supply terminals are not to be short-circuited.

WE DO NOT RECOMMEND THE USE OF RECHARGEABLE BATTERIES.


NOTE: If for some reason the program/activity stops working, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.


If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-800-267-7377 in Canada and a service representative will be happy to help you.

TO BEGIN PLAY


1. Slide the **ON/OFF/MODE SELECTOR SWITCH** to the **TALKING MODE** (☺) or **MELODY MODE** (🎵) position to turn the unit **ON**.

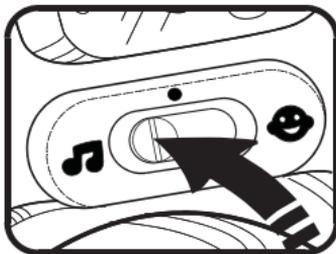

2. To adjust the volume, slide the **VOLUME CONTROL SWITCH** located on the side of the unit to the (🔊) position for **LOW VOLUME** or the (🔊) position for **HIGH VOLUME**.

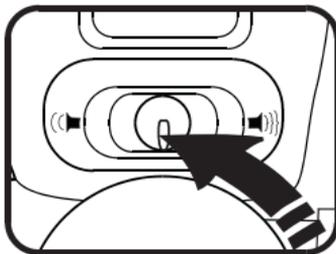

3. Slide the **ON/OFF/MODE SELECTOR SWITCH** to the **OFF** (●) position to turn the unit **OFF**.

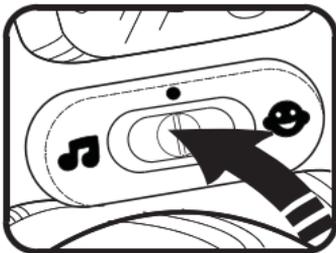


NOTE:

To preserve battery life, the **VTECH® ABC Choo Choo™** learning toy will go into sleeping status after several minutes without input. It can be turned on again by pressing any button.


ACTIVITIES

A. Talking Mode


1. Slide the **ON/OFF/MODE SELECTOR SWITCH** to the **TALKING MODE** (☺) position. You will hear “All aboard!” followed by a Toot! Toot! sound effect. All the lights will flash with the sound.

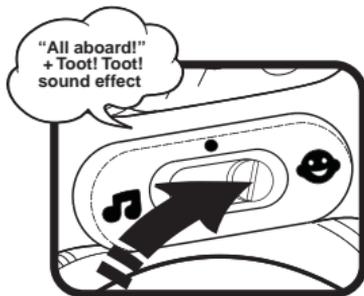


2. Press the **LETTER 'A' BUTTON** to hear “A” followed by a Toot! Toot! sound effect. The corresponding light will flash with the sound.

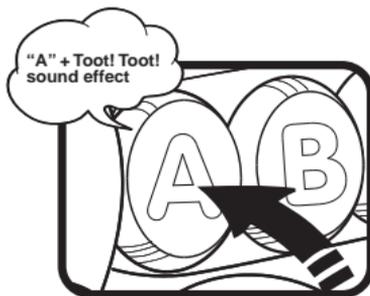


3. Press the **LETTER 'B' BUTTON** to hear “B” followed by a chugging sound effect. The corresponding light will flash with the sound.

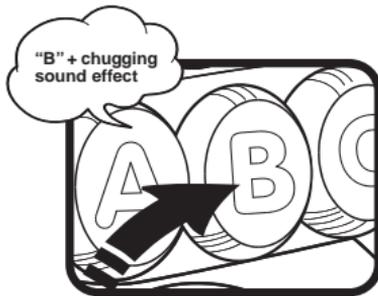


4. Press the **LETTER 'C' BUTTON** to hear "C" followed by a whistle sound effect. The corresponding light will flash with the sound.

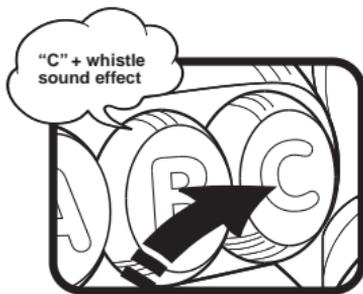


5. Press the **LIGHT-UP LETTER BUTTONS** in sequence (A-B-C) to hear a sung melody. All the lights will flash with the melody.

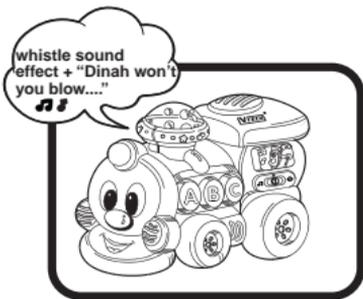

6. Press the **WHISTLE BUTTON** to hear "All aboard" followed by a Toot! Toot! sound effect or a random melody. All the lights will flash with the sound.

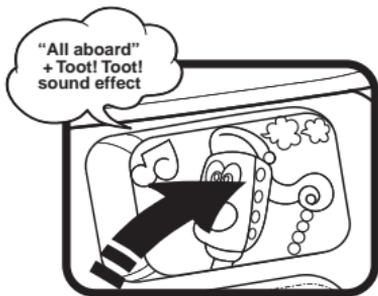


7. Roll the train to hear a chugging sound effect followed by a sung melody. The face will wobble and the beads in the smokestack will pop. All the lights will flash with the sound.

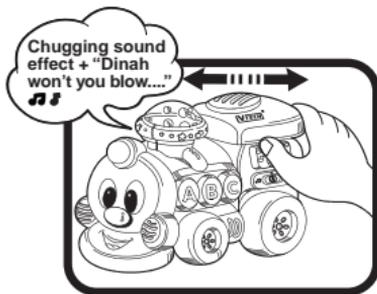


B. Melody Mode


1. Slide the **ON/OFF/MODE SELECTOR SWITCH** to the **MELODY MODE** (🎵) position. You will hear a short tune and a Toot! Toot! sound effect. All the lights will flash with the sound.

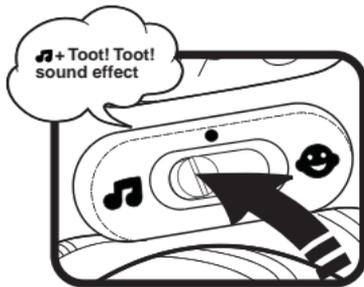


2. Press one of the **LIGHT-UP LETTER BUTTONS** to hear a random melody. All the lights will flash with the melody.

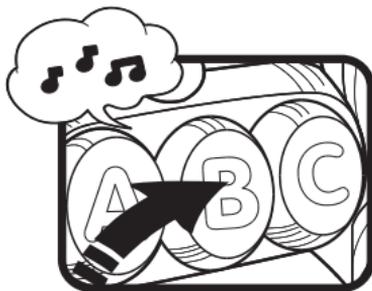

3. Press the **WHISTLE BUTTON** to hear a “chugging” sound effect followed by a sung melody. All the lights will flash with the sound.

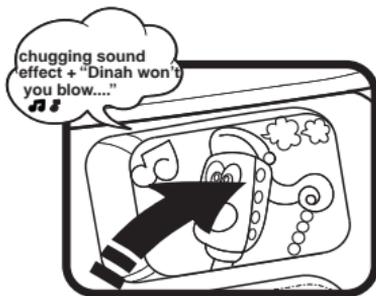

4. Roll the train to hear a Toot! Toot! sound effect followed by a random melody. The face will wobble and the beads in the smokestack will pop. All the lights will flash with the sound.

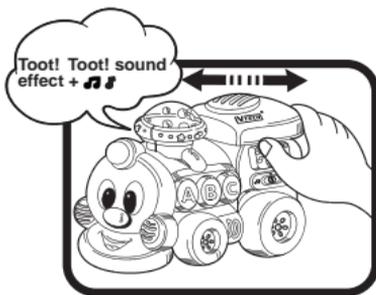

CHEERFUL MELODIES:

1. She'll Be Coming Around The Mountain
2. Home On The Range
3. Clementine
4. Turkey In The Straw
5. I've Been Working On The Railroad

CARE AND MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

IMPORTANT NOTE

Creating and developing Infant/Toddler products is accompanied by a responsibility that we at **VTECH®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-800-267-7377 in Canada with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Note:

This equipment generates and uses radio frequency energy and if not installed and used properly, that is, in strict accordance with the manufacturer's instructions, it may cause interference to radio and television reception. It has been type tested and found to comply within the limits for a Class B computing device in accordance with the specifications in Sub-part J of Part 15 FCC Rules, which are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference with radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- reorient the receiving antenna
- relocate this product with respect to the receiver
- move this product away from the receiver