

Disney
PRINCESS

User's Manual

Dial 'n Learn Telephone



vtech®

Visit the Disney Web site at www.disney.com

' Disney

All rights reserved.

Dear Parent,

At VTech®, we know that a child's imagination is a truly wonderful thing and needs to be developed and nurtured. That's why we created the ***Disney Princess electronic learning series*** of interactive learning toys to stimulate little girls' imaginations, while also teaching vital preschool concepts such as the alphabet, numbers, shapes, colors and objects.

Through the use of unique technology and engaging child-directed role-play scenarios, ***Disney Princess*** characters magically come to life to guide children through learning activities. These engaging characters foster children's critical reasoning skills, enhance their fine motor skills and engage them in exciting role-play activities for endless hours of learning fun.

At VTech®, we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting At VTech® with the important job of helping your child learn and grow!

Sincerely,

Your Friends at VTech®

To learn more about ***Disney Princess electronic learning series*** and other VTech® toys, visit

www.vtechkids.com

INTRODUCTION

Thank you for purchasing the VTech® Dial 'n Learn Telephone.

The **Dial 'n Learn Telephone** is an interactive phone that's full of magical fun! With lots of music and interactive activities, your little princess will be stimulated and entertained as she learns numbers, logic and memory skills, and more! With chunky light-up number buttons and realistic handset, learning with the princesses has never been so much fun!

**COLORFUL PHONE
BOOK WITH 2
FLIPPABLE PAGES**

HANDSET

**10 LIGHT-UP
NUMBER
BUTTONS**

**STAR
BUTTON**



**4 PRINCESS
BUTTONS**

**ACTIVITY
SELECTOR**

**ON/OFF
BUTTON**

INCLUDED IN THIS PACKAGE

- One VTech® Dial 'n Learn Telephone
- One User's Manual

 
WARNING:

All packing materials such as tape, plastic sheets, wire ties and tags are not part of this toy, and should be discarded for your child's safety.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit. Use a coin or screwdriver to loosen the screw.
3. Install 3 new "AA" (UM-3/ LR06) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure.

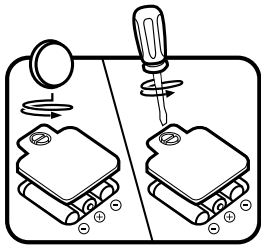

BATTERY NOTICE

 
 
- Install batteries correctly observing the polarity (+, -) signs to avoid leakage.
- Do not mix old and new batteries.
- Do not mix batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).


- Remove batteries from the equipment when the unit will not be used for an extended period of time.
- Always remove exhausted batteries from the equipment.
- Do not dispose of battery in fire.
- Do not attempt to recharge ordinary batteries.
- The supply terminals are not to be short-circuited.
- Only batteries of the same or equivalent type as recommended are to be used.

WE DO NOT RECOMMEND THE USE OF RECHARGEABLE BATTERIES.

PRODUCT FEATURES


1. VOLUME CONTROL SWITCH

 Locate the **VOLUME CONTROL SWITCH** on the bottom of the phone. To adjust the volume, switch to the **LOW VOLUME** () or the **HIGH VOLUME** () position.

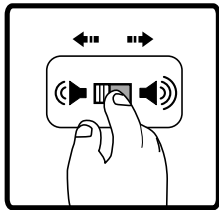


2. ON/OFF BUTTON

 To turn **ON** the unit, press the **ON/OFF BUTTON**. To turn **OFF** the unit, press the **ON/OFF BUTTON** again.

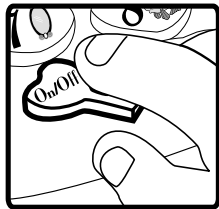


3. ACTIVITY SELECTOR

 Slide the **ACTIVITY SELECTOR** to select one of the 5 activities, Number Fun, Finding Game, Watch the Lights, Shopping Fun or Music Magic.

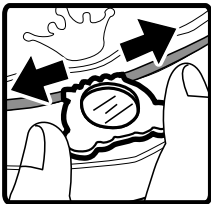


4. STAR BUTTON

 Press the **STAR BUTTON** to hear questions or the sung song depending on the activity selected.

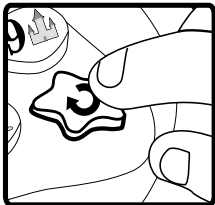


5. 4 PRINCESS BUTTONS

 Press the **PRINCESS BUTTONS** to hear the princesses identified or to hear one of their favorite songs depending on the activity selected.

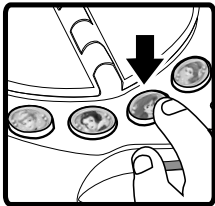


6. HANDSET

 Pick up the **HANDSET** to hear "Hello, may I help you?". Replace the **HANDSET** to hear "Goodbye."

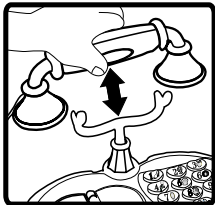

7. PHONE BOOK

 Turn to different pages to hear sound effects, or the princesses or phone list identified, depending on the activity selected. Use the phone book to call the stores or princesses in the "Shopping Fun" activity.

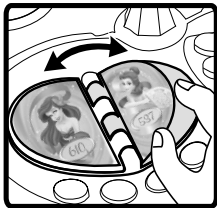

8. AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech® Dial 'n Learn Telephone** will automatically power-down after around 2 minutes without any input. The telephone can be turned on again by pressing the **ON/OFF BUTTON**.

ACTIVITIES

Press the **ON/OFF BUTTON** to turn on the unit and begin play.

Slide the **ACTIVITY SELECTOR** to select an activity.

NUMBER FUN

You will be asked to find a number on the phone. Press one of the **10 LIGHT-UP NUMBER/OBJECT BUTTONS** to answer. If you answer incorrectly 3 times, a new question will be asked.

FINDING GAME

Press the **STAR BUTTON** to begin. You will be asked a question related to the princesses. Press one of the **10 LIGHT-UP NUMBER/OBJECT BUTTONS** or the **4 PRINCESS BUTTONS** to answer. If you answer incorrectly 3 times, a new question will be asked. Press the **STAR BUTTON** to hear a new question.

WATCH THE LIGHTS

A sequence of 3 lights will flash in a pattern. Watch carefully and press the **LIGHT-UP NUMBER/OBJECT BUTTONS** to copy the pattern. If you press the correct buttons, an extra light will be added to the sequence. Press the **STAR BUTTON** to see the light pattern again.

SHOPPING FUN

Call the stores and go shopping with the princesses! You will be asked to call one of the stores or dial the princesses' numbers to hear their favorite songs. Use the phone book and press the correct numbers to dial. Press the **STAR BUTTON** to hear another request.

MUSIC MAGIC

Listen to the 14 melodies by pressing the **10 LIGHT-UP NUMBER/OBJECT BUTTONS** or the **4 PRINCESS BUTTONS**. Press the **STAR BUTTON** to hear the sung song.

MELODY LIST

MELODY 1: Mulberry Bush

MELODY 2: Blue Danube

MELODY 3: Three Blind Mice

MELODY 4: Sing a Song of Sixpence

MELODY 5: Hey Diddle Diddle

MELODY 6: The Wheels on the Bus

MELODY 7: Dance of the Sugar Plum Fairies

MELODY 8: Little Miss Muffet

MELODY 9: Polly Put the Kettle On

MELODY 10: You Are My Sunshine

SUNG SONG LYRICS

Let's play and learn on the princess phone.

Dial the number, listen for a tone.

You may even use the phone to call all of your friends.

If the number's busy, you may call again.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **electronic learning Disney Princess** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

Caution : changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.