

vtech[®]

User's Manual

Record & Learn KidiStudio™



© 2014 VTech
Printed in China
91-009696-A00 (US)

Dear Parent,

At **VTech**[®], we know how important the first day of school is for your child. To help prepare preschoolers for this important event, **VTech**[®] has developed the **Preschool Learning**[™] series of interactive toys.

Preschool Learning[™] features fun characters and inviting school themes that use technology to capture a child's attention and teach important preschool skills like spelling, counting and the alphabet. These vital skills are taught in a way that's both fun and highly engaging to maintain a child's interest. Children will also be introduced to fun school subjects such as art class, music class and even recess! With **Preschool Learning**[™], learning is fun from day one!

At **VTech**[®], we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting **VTech**[®] with the important job of helping your child learn and grow!

Sincerely,


Your friends at **VTech**[®]

To learn more about **VTech**[®] toys, visit www.vtechkids.com

INTRODUCTION

Thank you for purchasing the **VTech® Record & Learn KidiStudio™**!

The **Record & Learn KidiStudio™** is an interactive music studio that lets your child sing, record and play back their own musical masterpieces. Play along with 20 melodies in four popular music styles using the real microphone, sound effects and instruments. Now your child can perform and record like a rock star!

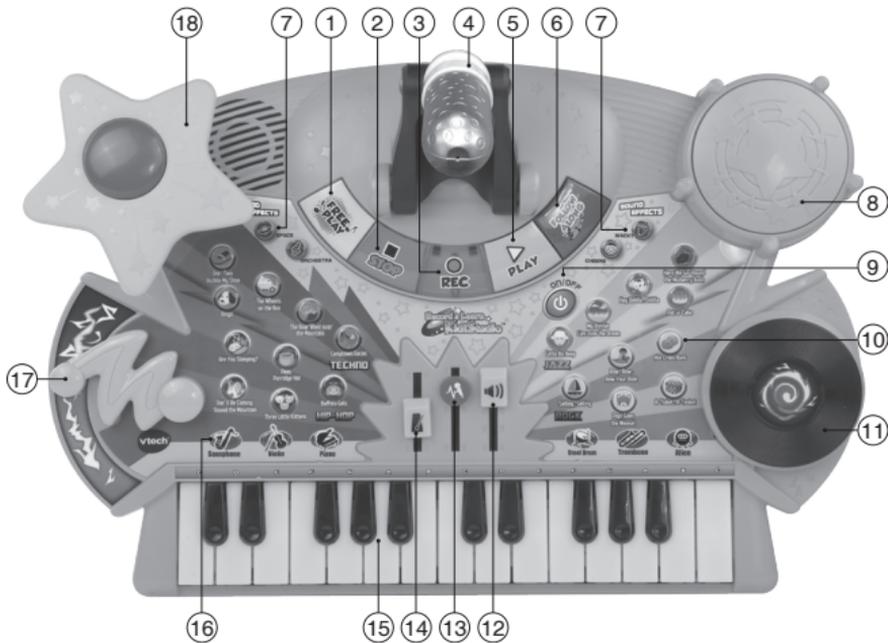

- | | | |
|----------------------------|------------------------|----------------------------|
| ① Free Play Mode Button | ⑦ Sound Effect Buttons | ⑬ Microphone Voice Changer |
| ② Stop Button | ⑧ Drum | ⑭ Melody Tempo Changer |
| ③ Record Button | ⑨ Power Button | ⑮ Keyboard |
| ④ Microphone | ⑩ Melody Buttons | ⑯ Instrument Buttons |
| ⑤ Play Button | ⑪ DJ Scratch Disc | ⑰ Whammy Bar |
| ⑥ Follow Along Mode Button | ⑫ Volume Control | ⑱ Cymbal |

INCLUDED IN THIS PACKAGE


- One VTech® Record & Learn KidiStudio™
- One User's Manual

WARNING: All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy and should be discarded for your child's safety.


ATTENTION : Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches et étiquettes. Ils ne font pas partie du jouet.

NOTE:

The cord located on the **Microphone** is not part of this toy. This cord should be removed and discarded for your child's safety.

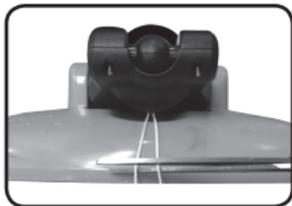

Unlock the packaging locks:

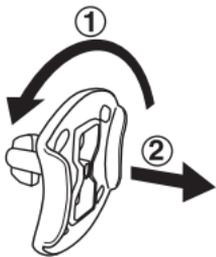


- ① Rotate the packaging lock counter-clockwise 90 degrees.
- ② Pull out the packaging lock.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit. Install 3 new “AA” size (LR6/AM-3) batteries following the diagram inside the battery box.
3. Replace the battery cover.

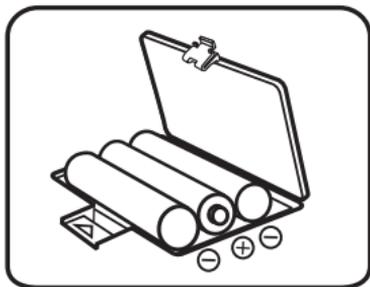

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

PRODUCT FEATURES


1. POWER BUTTON

Press the **Power Button** to turn the unit **ON**. Press it again to turn the unit **OFF**.



2. Microphone/Voice Changer

Extend the **Microphone** stand to activate the microphone. For best results, put your mouth close to the microphone and sing directly into it. Move the **Voice Changer** to choose the effect applied to the microphone. Choose between high pitch, original and low pitch effects. To avoid an unexpected echo, fold down the microphone stand to switch off the microphone when not in use.

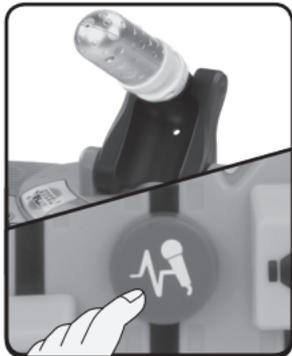

3. Record Button/Stop Button/ Play Button

Press the **Record Button** to record your voice from the microphone and all sounds made by the unit. Press the **Stop Button** to stop recording. Press the **Play Button** to play back your recording. The **Stop Button** also stops all sounds from playing.



4. Volume Control

Move the **Volume Control** to adjust the volume.



ACTIVITIES

Follow Along Mode Button/ Free Play Mode Button

To learn how to play a song on the piano, press the **Follow Along Mode Button** and choose a song. Follow the red light on the keyboard to play the notes of the song. The song will be played in a slow speed to make it easy to learn. Press the **Free Play Mode Button** to create your own song.



Melody Buttons

Press a **Melody Buttons** to play  melody.



Keyboard

Press a key on the **Keyboard** to hear music notes.




Instrument Buttons

Press the **Instrument Buttons** to choose an instrument to play using the keyboard. Six different instrument sounds are available.




Drum

Hit the **Drum** to add drum sounds to the music.

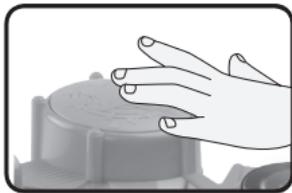

Cymbal

Hit the **Cymbal** to add cymbal sounds to the music.

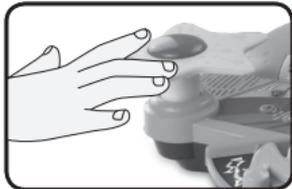

Sound Effect Buttons

Press the **Sound Effect Buttons** to add different kinds of sound effects.



Whammy Bar

Pull the **Whammy Bar** to add guitar sound effects to your music.




Scratch Disc

Turn the **Scratch Disc** to add scratch disc sounds to the music.



Melody Tempo Changer

Move the **Melody Tempo Changer** to adjust the tempo of the melody. Three levels are available.

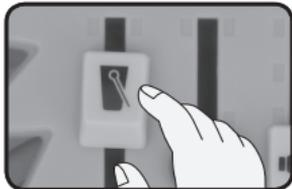

SONG & MELODY LIST

Hip-Hop

1. Are You Sleeping?

Are you sleeping, are you sleeping?
Brother John, brother John?
Morning bells are ringing, morning bells are ringing,
Ding ding dong, ding ding dong.

2. Buffalo Gals

Buffalo gals, won't you come out tonight?
Come out tonight, come out tonight?
Buffalo gals, won't you come out tonight,
And dance by the light of the moon?

3. Peas Porridge Hot

Peas porridge hot,
Peas porridge cold,
Peas porridge in the pot,
Nine days old!
Some like it hot,
Some like it cold,
Some like it in the pot,
Nine days old!

4. She'll Be Coming 'Round the Mountain

She'll be coming 'round the mountain when she comes,
She'll be coming 'round the mountain when she comes,
She'll be coming 'round the mountain,
She'll be coming 'round the mountain,
She'll be coming 'round the mountain when she comes.

5. Three Little Kittens

Three little kittens they lost their mittens,
And they began to cry,
Oh, mother dear, we sadly fear,
Our mittens we have lost.

Jazz

1. Pat-a-Cake

Pat-a-cake, pat-a-cake, baker's man,
Bake me a cake as fast as you can,
Roll it, pat it and mark it with B,
Put it in the oven for baby and me.

2. Hey Diddle, Diddle

Hey diddle diddle,
The cat and the fiddle,
The cow jumped over the moon,
The little dog laughed to see such sport,
And the dish ran away with the spoon.

3. Here We Go 'Round the Mulberry Bush

Here we go 'round the mulberry bush,
The mulberry bush,
The mulberry bush,
Here we go 'round the mulberry bush,
So early in the morning.
This is the way we wash our clothes,
Wash our clothes,
Wash our clothes,
This is the way we wash our clothes,
So early in the morning.

4. Little Bo Peep

Little Bo Peep has lost her sheep,
And doesn't know where to find them,
Leave them alone,
And they'll come home,
Wagging their tails behind them.

5. My Bonnie Lies over the Ocean

My Bonnie lies over the ocean,
My Bonnie lies over the sea,
My Bonnie lies over the ocean,
Oh, bring back my Bonnie to me.

Rock

1. A-Tisket, A-Tasket

A-tisket, a-tasket,
A green and yellow basket,
I wrote a letter to my love,
And on the way I dropped it,
I dropped it, I dropped it,
And on the way I dropped it.
A little boy, he picked it up and put it in his pocket.

2. Hot Cross Buns

Hot cross buns!
Hot cross buns!
One ha' penny, two ha' penny,
Hot cross buns!
If you have no daughters,
Give them to your sons,
One ha' penny, two ha' penny,
Hot cross buns!

3. Pop! Goes the Weasel

All around the mulberry bush,
The monkey chased the weasel,
The monkey thought 'twas all in good fun,
Pop! goes the weasel,
A penny for a spool of thread,
A penny for a needle,
That's the way the money goes,
Pop! goes the weasel.

4. Row, Row, Row Your Boat

Row, row, row your boat,
Gently down the stream,
Merrily, merrily, merrily, merrily,
Life is but a dream.

5. Sailing, Sailing

Sailing, sailing over the bounding main,
 Where many a stormy wind shall blow,
 Ere Jack comes home again,
 Sailing, sailing over the bounding main,
 Where many a stormy wind shall blow,
 Ere Jack comes home again.

Techno

1. Bingo

There was a farmer who had a dog,
 And Bingo was his name-o.
 B-I-N-G-O, B-I-N-G-O, B-I-N-G-O,
 And Bingo was his name-o.
 There was a farmer who had a dog,
 And Bingo was his name-o.
 (clap)-I-N-G-O, (clap)-I-N-G-O, (clap)-I-N-G-O,
 And Bingo was his name-o.

2. Camptown Races

The Camptown ladies sing this song, do-da, do-da,
 The Camptown racetrack's five miles long, oh, the do-da day.
 Goin' to run all night, goin' to run all day,
 I bet my money on a bob-tailed nag, somebody bet on the gray.

3. One, Two Buckle My Shoe

One, two,
 Buckle my shoe,
 Three, four,
 Knock at the door,
 Five, six,
 Pick up sticks,
 Seven, eight,
 Lay them straight,
 Nine, ten,
 A big fat hen!

4. The Wheels on the Bus

The wheels on the bus go 'round and 'round,
'Round and 'round, 'round and 'round,
The wheels on the bus go 'round and 'round,
All through the town,
The wipers on the bus go swish, swish, swish,
Swish, swish, swish, swish, swish, swish,
The wipers on the bus go swish, swish, swish,
All through the town.

5. The Bear Went over the Mountain

The bear went over the mountain,
The bear went over the mountain,
The bear went over the mountain,
To see what he could see,
To see what he could see,
To see what he could see,
The other side of the mountain,
The other side of the mountain,
The other side of the mountain,
Was all that he could see.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces, and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



CLASS 1
LED PRODUCT