

VTECH®

SmartSTART®



Peek-A-Boo Plane™

USER'S MANUAL

Dear Parent:

At VTECH® we know that a child has the ability to do great things.


That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. Whether it's introducing numbers and letters, identifying colors and shapes, or stimulating senses with lights and music, all VTECH® infant and toddler learning products encourage your child's natural growth and discovery skills.

When it comes to providing electronic learning products that enlighten, entertain and develop minds, at VTECH® we see the potential in every child.

INTRODUCTION

Thank you for purchasing the **VTECH® Peek•A•Boo Plane™** learning toy! We at **VTECH®** are committed to providing the best possible products to entertain and educate your child. Should you have any questions or concerns, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-800-267-7377 in Canada.

The **VTECH® Peek•A•Boo Plane™** is a colorful plane with two engaging play modes that introduce your child to counting (1,2,3) and music. Toddlers can activate a button to have a favorite character for a peek-a-boo surprise. Music plays and light-up LEDs flash as baby pushes the plane back and forth.

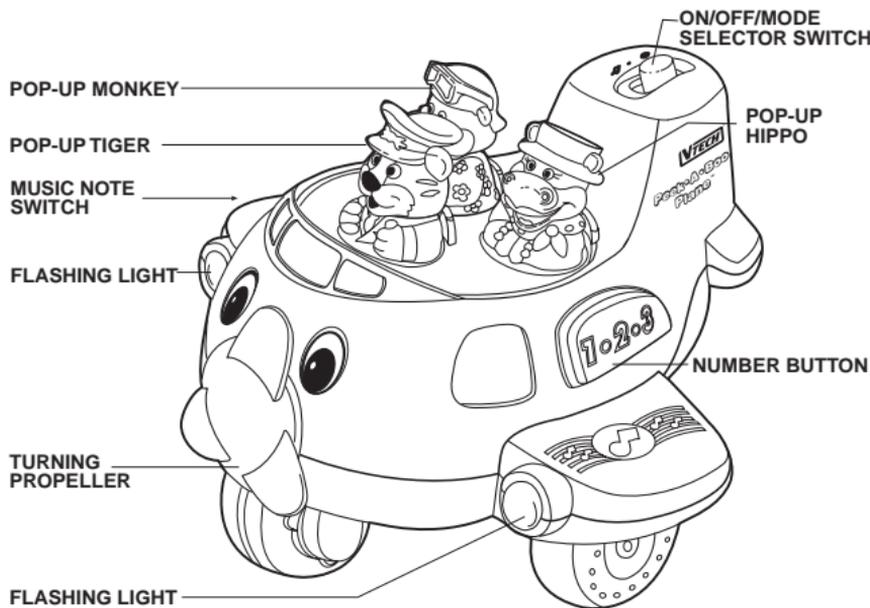


INCLUDED IN THIS PACKAGE

- One VTECH® Peek•A•Boo Plane™ learning toy.
- One instruction manual.

WARNING: All packing materials, such as tape, plastic sheets, wire ties and tags are not part of this toy, and should be discarded for your child's safety.

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit. Use a coin or screwdriver to loosen the screw.
3. Install 2 “AA” (UM-3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure the battery cover.

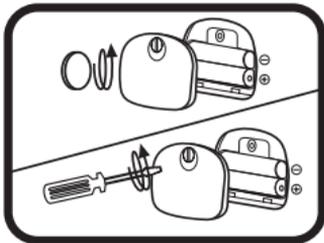

BATTERY NOTICE

- Install batteries correctly observing the polarity (+ , -) signs to avoid leakage.
- Do not mix old and new batteries.
- Do not use batteries of different types.
- Remove exhausted or new batteries from the equipment when the unit will not be used for an extended period of time.
- Do not dispose of batteries in fire.

- Do not attempt to recharge ordinary batteries.
- The supply terminals are not to be short-circuited.

WE DO NOT RECOMMEND THE USE OF RECHARGEABLE BATTERIES.


NOTE: If for some reason the program/activity stops working, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-800-267-7377 in Canada, and a service representative will be happy to help you.

TO BEGIN PLAY


1. To begin play, slide the **ON/OFF/MODE SELECTOR SWITCH** to the **TALKING MODE** () position or **MUSIC MODE** () position.

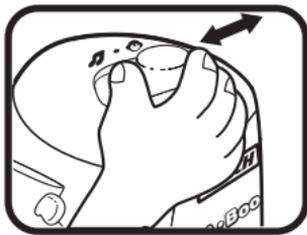

2. To adjust the volume, slide the **VOLUME CONTROL SWITCH** located on the bottom of the unit to the () position for **LOW VOLUME** or the () position for **HIGH VOLUME**.



3. To turn the unit **OFF**, slide the **ON/OFF/MODE SELECTOR SWITCH** to the **OFF** (●) position.

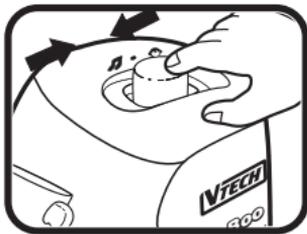

Note:

To preserve battery life, the **VTECH® Peek•A•Boo Plane™** learning toy will automatically power-down after several seconds without input. The unit can be turned on again by pressing any button.

ACTIVITIES

A. MELODY MODE

1. Slide the **ON/OFF/MODE SELECTOR SWITCH** to the **MELODY MODE** (🎵) position. You will hear “Welcome aboard!” followed by a melody. The lights will flash with the sound.
2. Turn the **PROPELLER** to see the tiger pop-up. You will hear “Enjoy your flight” followed by a melody. The lights will flash with the sound.



3. Press the **NUMBER BUTTON** and the adorable hippo pops up and says “Here we go” followed by a melody. The lights will flash with the sound.



4. Slide the **MUSIC NOTE SWITCH** to see the monkey pop-up and hear “Hold on” followed by a melody. The lights will flash with the sound.



5. Roll the plane to hear a cheerful melody. The lights will flash with the music.



B. TALKING MODE

1. Slide the **ON/OFF/MODE SELECTOR SWITCH** to the **TALKING MODE** (😊) position. You will hear “Enjoy your flight” followed by a short tune. The lights will flash with the sound.



2. Turn the **PROPELLER** to activate the tiger. You will hear a propeller sound effect followed by “Welcome aboard”. The lights will flash with the sound.



3. Press the **NUMBER BUTTON** to activate the hippo. You will hear “One, Two, Three” followed by a take off sound effect. The lights will flash with the sound.



4. Slide the **MUSIC NOTE SWITCH** to activate the monkey. You will hear “Hold on” followed by a hurray sound effect. The lights will flash with the sound.



5. Roll the plane to hear a cheerful melody. The lights will flash with the music.




CHEERFUL MELODIES:

- Flight of the Bumble Bee
- Für Elise
- Animal Fair
- Flight of the Valkyries
- Toyland
- Rockin' Robin

Note:

1. When you press down anyone character, you will hear the same voice response as pop-up voice response.
2. To press down the tiger character, the propeller should be turned back in advance.

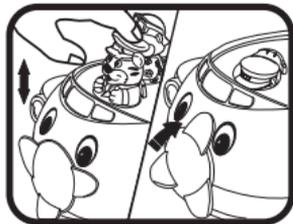

CARE AND MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

IMPORTANT NOTE

Creating and developing Infant/Toddler products is accompanied by a responsibility that we at **VTECH**[®] take very seriously. We make every effort to ensure the accuracy of the information which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-800-267-7377 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Note:

This equipment generates and uses radio frequency energy and if not installed and used properly, that is, in strict accordance with the manufacturer's instructions, it may cause interference to radio and television reception. It has been type tested and found to comply within the limits for a Class B computing device in accordance with the specifications in Sub-part J of Part 15 FCC Rules, which are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference with radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- reorient the receiving antenna
- relocate this product with respect to the receiver
- move this product away from the receiver