

vtech®

Parent's Guide





# Roll & Roar Animal Train™



91-003372-000 ©

# INTRODUCTION

Thank you for purchasing the **GearZooz™ Roll & Roar Animal Train™** by **VTech®**! This adorable train will take your little one on an exciting learning adventure. Let your child create their own unique train by mixing and matching the 15 included gears while strengthening their fine motor skills and problem-solving techniques.

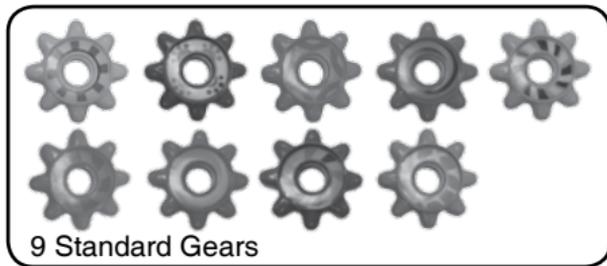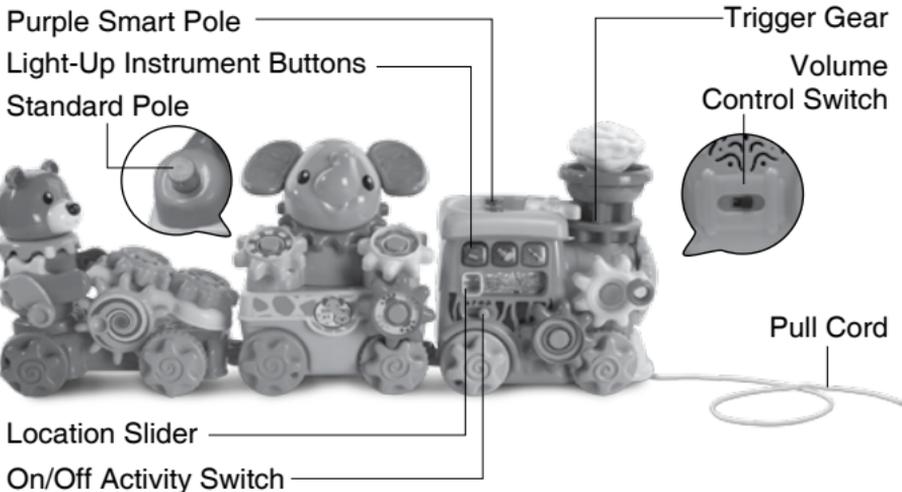

# INCLUDED IN THIS PACKAGE

- One VTech® Roll & Roar Animal Train™
- Four Smart Gear™ animals
- Nine standard gears
- Two handle gears
- One parent's guide

## WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.


**NOTE:** Please keep this parent's guide as it contains important information.

## ATTENTION:

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes et vis d'emballage. Ils ne font pas partie du jouet.


**NOTE :** Il est conseillé de conserver ce guide des parents car il comporte des informations importantes.

## Unlock the packaging locks:

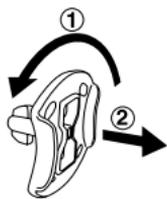

- ① Rotate the packaging locks 90 degrees counterclockwise.
- ② Pull out the packaging locks and discard.



## Remove the Cable Ties:

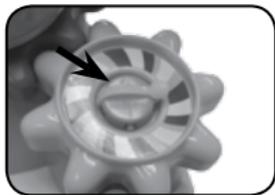

- ① Cut the ties with a pair of scissors.
- ② Remove the ties.



## Unlock the Smart Gear™ Lion:

1. Slide the white tab to the right to unlock the **Smart Gear™** lion.
2. Lift the tab and **Smart Gear™** lion off the train engine.
3. Discard the white tab.

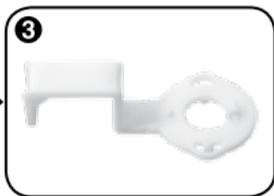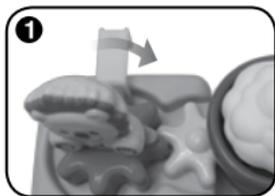

## Pull out the Train Connector


1. Locate the orange train connector underneath the Bear's Train Car.
2. Slide the train connector out until it clicks into place.

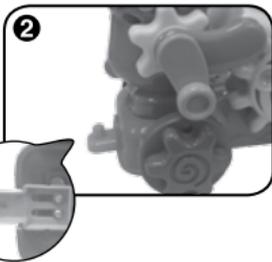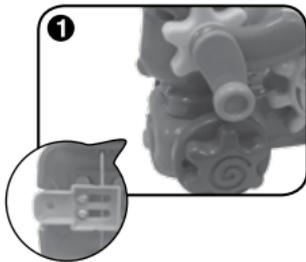

# GETTING STARTED

## BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back side of the unit and open it with a screwdriver.
3. Install 2 new AA size (AM-3/LR6) batteries into the battery box as illustrated. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure.

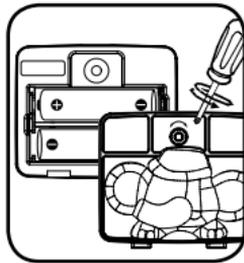

## BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

# PRODUCT FEATURES

## 1. On/Off Activity Switch

Slide the **On/Off Activity Switch** to choose an activity. To turn the unit off, slide the switch to **OFF**.

## 2. Light-Up Instrument Buttons

Press the three **Light-Up Instrument Buttons** to learn about the instruments, answer questions or create a melody.

## 3. Location Slider

Move the **Location Slider** to learn about the locations, answer questions or choose a melody.



## 4. Purple Smart Pole

Place a **Smart Gear™ Animal** on the **Purple Smart Pole** to learn about the animal or add fun animal sounds into the songs when you pull the train.



## 5. Standard Poles

There are seven **Standard Poles**. **Standard Poles** do not trigger electronic responses.



## 6. Trigger Gear

Turn the **Trigger Gear** to learn about the train and locations, hear melodies or repeat a question.



## 7. Pull Cord

Pull the train to hear fun songs and responses. Place a **Smart Gear™ Animal** on the **Purple Smart Pole** and pull the train to

hear fun animal sounds added to the songs.

## 8. Pull Cord Storage

To convert the unit from a push toy to a pull toy, remove the pull cord from the storage compartment on the bottom of the **Roll & Roar Animal Train™**.



For your child's safety we suggest you store the pull cord in the compartment until your child is walking and to supervise your child when playing with the pull cord.

## 9. Volume Control Switch

The **Volume Control Switch** is located on the back of the train engine. Slide the switch to select **Low**  or **High**  volume.

## 10. Automatic Shut Off

To preserve battery life, the **Roll & Roar Animal Train™** will shut off automatically after several minutes without any input. The unit can be turned on again by sliding the **On/Off Activity Switch**. The unit will also automatically turn off when the batteries are very low. We suggest replacing them with a new set of batteries.

# TO BEGIN PLAY

## Activate Normal Play Mode:

The **Roll & Roar Animal Train™** is in try-me mode in the packaging. To activate normal play mode, turn the unit on. Place any **Smart Gear™ Animal** on the **Purple Smart Pole**. You will hear the train whistle notifying you that normal play mode has been activated.

**Note:** Be sure to remove the white tab from the **Smart Gear™** lion before playing.

# ACTIVITIES

## 1. Exploration Fun

Move the **Location Slider** to learn about locations. Press the **Instrument Buttons** to learn about instruments. Turn the **Trigger Gear** to learn about the train and locations. Pull the train to hear songs. If a **Smart Gear™ Animal** is on the **Purple Smart Pole**, turn the **Trigger Gear** to learn about the animal or pull the train to add animal sounds into the songs.

## 2. Quiz Mode


Listen to questions about the instruments or locations. Move the **Location Slider** or press the **Instrument Buttons** to answer the questions. Turn the **Trigger Gear** to repeat the question. Pull the train to hear songs. Place a **Smart Gear™ Animal** on the **Purple Smart Pole** to hear the animal name and animal sound. If a **Smart Gear™ Animal** is on the **Purple Smart Pole**, pull the train to add animal sounds into the songs.

## 3. Music Fun

Move the **Location Slider** to select a melody. Press the **Light-Up Instrument Buttons** to add or remove instruments. The button will light up when the instrument is added into the melody. Press again to remove the instrument and the light will switch off. Turn the **Trigger Gear** to add fun sounds into the melody. If a **Smart Gear™ Animal** is on the **Purple Smart Pole**, turn the **Trigger Gear** to add animal sounds into the melody. Pull the train to add animal sounds into the songs.

## 4. Gears

Add and remove the **Gears** to create your own unique train. Then, pull the train to watch the **Gears** move.

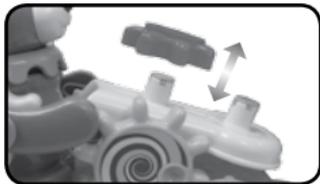

## 5. Mix & Match

Change the order of the train cars by removing them from the train engine and rearranging them.



## 6. Bear Handle

Turn the bear handle to make the seesaw move up and down.



## SONG LYRICS

### Song 1:

All aboard, let's take a ride.  
It's great with you by my side.  
When we're rolling down the tracks,  
Just sit back and relax.

### Song 2:

The train can take us here or there.  
The train will take us anywhere!  
We'll go fast and we'll go slow.  
Let's go, hear the horn blow!

### **Song 3:**

Here we go! C'mon, hippo.  
Tiger, hop in, watch the gears spin.  
See ya later, alligator.  
Hop inside, time to ride, off we go!

### **Song 4:**

Come along and ride with me.  
From the park, to the zoo, to the sea!

### **Song 5:**

We will have such a fun-filled day!  
I can't wait for us to play!

## **CARE & MAINTENANCE**

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the metal parts on the purple smart pole clean by wiping them.
3. Keep the unit out of direct sunlight and away from any direct heat source.
4. Remove the batteries when the unit is not in use for an extended period of time.
5. Do not drop the unit on hard surfaces, and do not expose the unit to moisture or water.

# TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

## IMPORTANT NOTE:

Creating and developing **VTech**<sup>®</sup> products is accompanied by a responsibility that we at **VTech**<sup>®</sup> take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our website at [vtechkids.com](http://vtechkids.com) and filling out our Contact Us form located under the Customer Support link with any problems and/or suggestions that you might have. A service representative will be happy to help you.

## Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not

installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Caution:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

*CAN ICES-3 (B)/NMB-3(B)*

CLASS 1  
LED PRODUCT



## PRODUCT WARRANTY

This Warranty is applicable only to the original purchaser, is non-transferable and applies only to "VTECH" products or parts. This product is covered by a 3-month Warranty from the original purchase date, under normal use and service, against defective workmanship and materials. This Warranty does not apply to (a) consumable parts, such as batteries; (b) cosmetic damage, including but not limited to scratches and dents; (c) damage caused by use with non-VTECH products; (d) damage caused by accident, misuse, unreasonable use, immersion in water, neglect, abuse, battery leakage, or improper installation, improper service, or other external causes; (e) damage caused by operating the product outside the permitted or intended uses described by VTECH in the owner's manual; (f) a product or part that has been modified (g) defects caused by normal wear and tear or otherwise due to the normal aging of the product; or (h) if any VTECH serial number has been removed or defaced.

Prior to returning a product for any reason, please notify the VTECH Consumer Services Department by going to our website at [vtechkids.com](http://vtechkids.com), filling out our Contact Us form located under the Customer Support link or calling 1-800-521-2010.

If the service representative is unable to resolve the issue, you will be provided instructions on how to return the product and have it replaced under Warranty. Return of the product under Warranty must adhere to the following rules: If VTECH believes that there may be a defect in the materials or workmanship of the product and can confirm the purchase date and location of the product, we will at our discretion replace the product with a new unit or product of comparable value. A replacement product or parts assumes the remaining Warranty of the original product or 30 days from the date of replacement, whichever provides longer coverage.

**THIS WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL, WRITTEN, STATUTORY, EXPRESS OR IMPLIED. IF VTECH CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY AND TO THE REPLACEMENT SERVICE AS DETERMINED BY VTECH IN ITS SOLE DISCRETION.**

To the extent permitted by law, VTECH will not be responsible for direct, special, incidental or consequential damages resulting from any breach of Warranty.

This Warranty is not intended to persons or entities outside the United States of America. Any disputes resulting from this Warranty shall be subject to the final and conclusive determination of VTECH.

**Visit our website for more  
information about our products,  
downloads, resources and more.**

***vtechkids.com***



TM & © 2017 VTech Holdings Limited.  
All rights reserved.  
**Printed in China.**  
91-003372-000 