

**vtech**<sup>®</sup>

Parent's Guide

## Clips 'n Colors Peacock™




91-003784-006 (US)

# INTRODUCTION

Thank you for purchasing the **VTech® Clips 'n Colors Peacock™**

Explore and discover with this brightly colored, light-up peacock. Learn about colors, shapes, numbers, counting and emotions! Add or remove Peacock's pegs and he will share his emotions: happy, sad, angry or surprised.

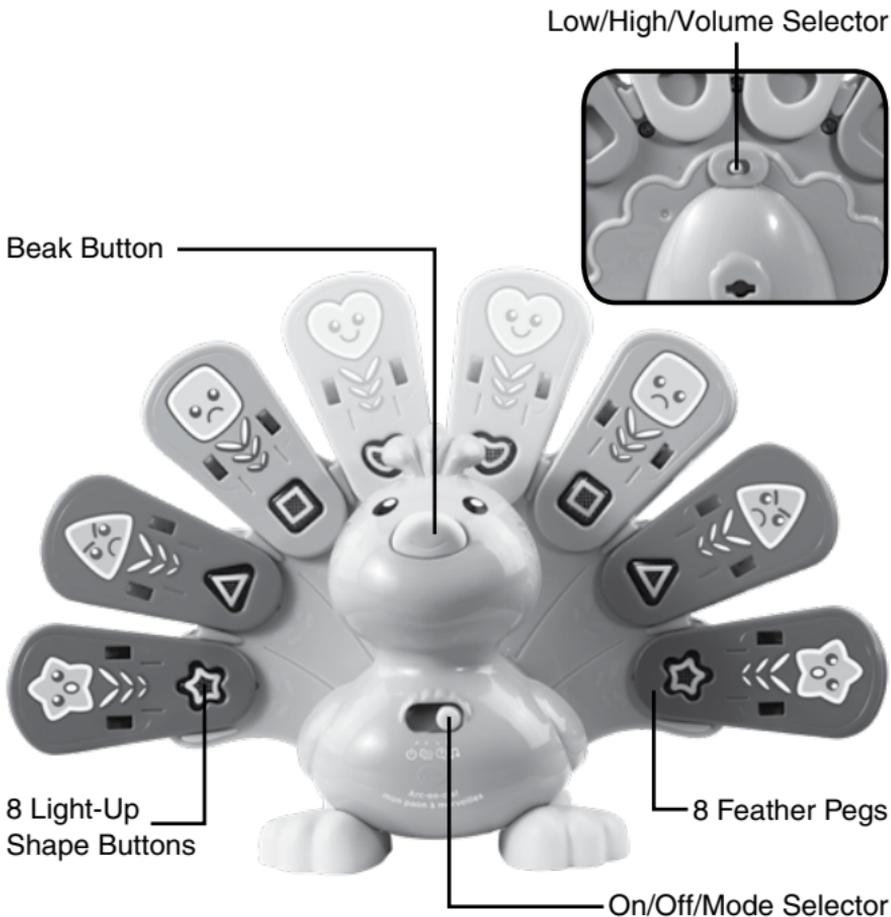

# INCLUDED IN THIS PACKAGE

- Clips 'n Colors Peacock™
- 8 Feather Pegs



- Parent's Guide

## WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.


**NOTE:** Please keep this parent's guide as it contains important information.

## ATTENTION :

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes et vis d'emballage. Ils ne font pas partie du jouet.

**NOTE :** Il est conseillé de conserver ce guide des parents car il comporte des informations importantes.

## Unlock the Packaging Lock

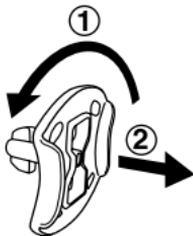


- ① Rotate the packaging lock 90 degrees counterclockwise.
- ② Pull out the packaging lock and discard.

# GETTING STARTED

## Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the back of the unit and use a screwdriver to loosen the screw and open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new AA size (LR6/AM-3) batteries following the diagram inside the battery box.
5. Replace the battery cover and tighten the screw to secure.

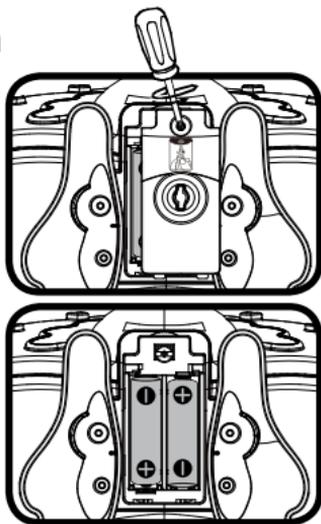

## BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity (+ and -).
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

## MISE EN GARDE

Les piles fournies avec le produit permettent de tester le jouet en magasin mais ne sont pas des piles longue durée.

- Seules des piles du type recommandé doivent être utilisées.
- Ne pas mélanger différents types de piles ou d'accumulateurs, ne pas mélanger des piles ou des accumulateurs neufs avec des usagés.
- Ne pas utiliser des piles ou des accumulateurs endommagés.
- Mettre en place les piles ou les accumulateurs en respectant les polarités + et -.
- Ne pas mettre les bornes d'une pile ou d'un accumulateur en court-circuit (en reliant directement le + et le -).
- Enlever les piles ou les accumulateurs usagés du jouet.
- Retirer les piles ou les accumulateurs en cas de non-utilisation prolongée.
- Ne les jeter ni au feu ni dans la nature.
- Ne pas tenter de recharger des piles non rechargeables.
- Enlever les accumulateurs du jouet pour les recharger.
- Les accumulateurs ne doivent être chargés que sous la surveillance d'un adulte.

## PRODUCT FEATURES

1. **On/Off/Mode Selector** 

Slide the **On/Off/Mode Selector** from left to right to switch the unit on and choose a mode: Explore & Learn mode, Quiz mode or Music mode. Slide the switch back to the **Off** position to turn the unit off.

2. **Low/High/Volume Selector** 

Slide the **Low/High/Volume Selector** on the back of the **Clips 'n Colors Peacock™** to the left for lower volume and to the right for higher volume.

### 3. Beak Button

Press the **Beak Button** to hear the **Clips 'n Colors Peacock™** introduce himself in Explore & Learn mode, give hints to answer the questions in Quiz mode and hear him sing in Music mode.



### 4. Light-Up Shape Buttons



Press the **Light-Up Shape Buttons** to learn the shapes and colors in Explore & Learn mode, answer the questions in Quiz mode and hear music in Music mode.

### 5. Feather Pegs



Add or remove the pegs to explore emotions, and to learn about colors and counting in Explore & Learn mode and answer the questions in Quiz mode. Add a peg to Peacock's tail to hear music in Music mode.

### 6. Automatic Shut-Off

To preserve battery life, the **Clips 'n Colors Peacock™** will automatically shut off after about 90 seconds without input. The unit can be turned on again by moving the **On/Off/Mode Selector** to any mode.

# To Exit Try-Me Mode

The **Clips 'n Colors Peacock** is in Try-Me mode. To activate the full program after purchase, turn the unit **On** and slide the **Low/High/Volume Selector** on the back of the product to enter normal play. Two beeping sounds indicate that the peacock has exited the Try-Me mode.

## MODES

### Mode 1: Explore & Learn Mode



Move the **On/Off/Mode Selector** to the second position to enter this mode. Add or remove the pegs from Peacock's tail to learn about emotions, colors and counting. With a **Feather Peg** attached to the tail, press a **Shape Button** to learn about emotions, colors and counting. Press a **Shape Button** without the **Feather Peg** attached to learn about colors and shapes. Press Peacock's **Beak Button** to hear fun facts about the peacock.

### Mode 2: Quiz Mode



Move the **On/Off/Mode Selector** to the third position to enter this mode. Peacock will ask questions. To answer, press the buttons or add or remove a peg. If you need help, press Peacock's **Beak Button** for a hint.

### Mode 3: Music Mode



Move the **On/Off/Mode Selector** to the fourth position to enter this mode. Press the **Shape Buttons** or add a peg to Peacock's tail to hear music. Press Peacock's **Beak Button** to hear Peacock sing.

# SONG LYRICS

## Song 1:

Look at my beautiful feathers.  
They come in lots of colors.  
Just pick a color and press on a feather to see how I'm feeling.  
Blue means I'm sad, and yellow means I'm happy.  
Red is the sign I'm very angry, and purple means I'm surprised!

## Song 2:

Yellow, blue, red and purple.  
I have lots of different colors.  
Yellow, blue, red and purple.  
Won't you play with me?

# CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

# TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

## **IMPORTANT NOTE:**

Creating and developing **VTech**<sup>®</sup> products is accompanied by a responsibility that we at **VTech**<sup>®</sup> take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our website at [vtechkids.com](http://vtechkids.com) and filling out our Contact Us form located under the Customer Support link with any problems and/or suggestions that you might have. A service representative will be happy to help you.

## **Note:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television

reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

**Caution:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### Supplier's Declaration of Conformity

Trade Name:	VTech®
Model:	5258
Product Name:	Clips 'n Colors Peacock™
Responsible Party:	VTech Electronics North America, LLC
Address:	1156 W. Shure Drive, Suite 200 Arlington Heights, IL 60004
Website:	vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

*CAN ICES-3 (B)/NMB-3(B)*



CLASS 1  
LED PRODUCT

**Visit our website for more  
information about our products,  
downloads, resources and more.**

***vtechkids.com***

Read our complete warranty policy online at  
*vtechkids.com/warranty*



TM & © 2019 VTech Holdings Limited.  
All rights reserved.  
**Printed in China.**  
91-003784-006 