

vtech[®]

Parent's Guide

Sort & Wiggle Tractor™



INTRODUCTION

Thank you for purchasing the **Sort & Wiggle Tractor™!**

Four pop-up animal shapes fit in the trailer and bob up and down as kids push or pull the tractor. Go hog wild for learning about shapes, colors, numbers and animals!

Four Shape

Sorting Animals

 
Four Shape Slots

Flashing Light

Farmer Button

On/Off/Volume
Selector

Optional Pull Cord

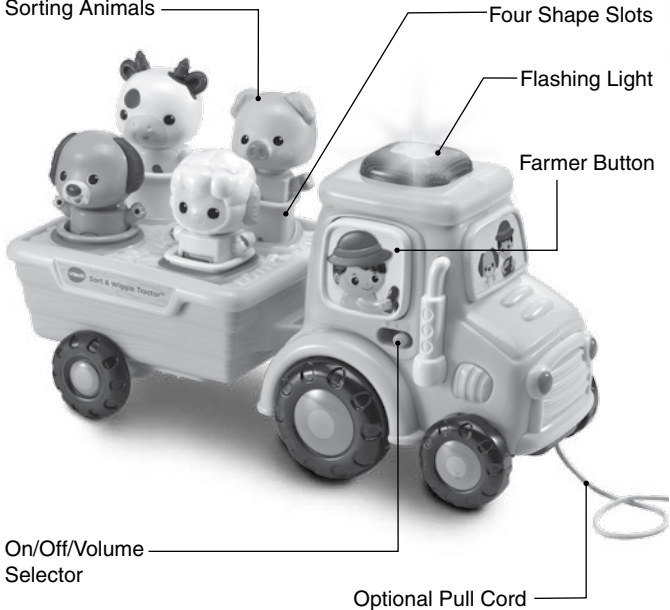

INCLUDED IN THIS PACKAGE

- **Sort & Wiggle Tractor™**
- Four shape sorting animals
- Parent's guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please keep this parent's guide as it contains important information.

 
ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes et vis d'emballage. Ils ne font pas partie du jouet.

NOTE

Il est conseillé de conserver ce guide des parents car il comporte des informations importantes.

Unlock the Packaging Lock

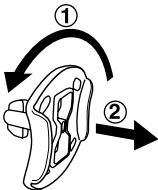


- ① Rotate the packaging lock counterclockwise 90 degrees.
- ② Pull out and discard the packaging lock.

GETTING STARTED

Battery Removal and Installation

 1. Make sure the unit is turned **Off**.
2. Locate the battery cover on the bottom of the tractor. Use a screwdriver to loosen the screw and open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new AAA (LR03/AM-4) batteries following the diagram inside the battery box.
5. Replace the battery cover and tighten the screw to secure.

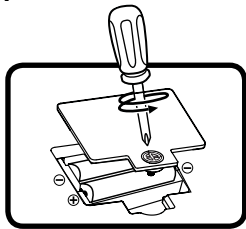

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity (+ and -).
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

 
MISE EN GARDE

- Utiliser des piles alcalines neuves pour des performances maximales.
- Seules des piles du type recommandé doivent être utilisées.
- Ne pas mélanger différents types de piles ou d'accumulateurs, ne pas mélanger des piles ou des accumulateurs neufs avec des usagés.
- Ne pas utiliser des piles ou des accumulateurs endommagés.
- Mettre en place les piles ou les accumulateurs en respectant les polarités + et –.
- Ne pas mettre les bornes d'une pile ou d'un accumulateur en court-circuit (en reliant directement le + et le –).
- Enlever les piles ou les accumulateurs usagés du jouet.
- Retirer les piles ou les accumulateurs en cas de nonutilisation prolongée.
- Ne les jeter ni au feu ni dans la nature.
- Ne pas tenter de recharger des piles non rechargeables.
- Enlever les accumulateurs du jouet pour les recharger.
- Les accumulateurs ne doivent être chargés que sous la surveillance d'un adulte.

PRODUCT FEATURES

1. On/Off/Volume Selector

To turn the unit **On**, slide the **On/Off/Volume Selector** to the Low volume » or the High volume » position. You will hear a song, phrase and sound. To turn the unit **Off**, slide the **On/Off/Volume Selector** to the Off ● position.

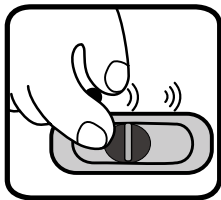

2. Pull Cord

To convert the unit from a push toy to a pull toy, remove the optional **Pull Cord** from under the tractor. For your child's safety, please store the **Pull Cord** in the battery compartment until your child is walking. (The **Pull Cord** is the recommended 9.64 inches in length. However, adult supervision is recommended).

3. Automatic Shut-Off

To preserve battery life, the **Sort & Wiggle Tractor™** will automatically shut off after approximately 70 seconds without input. The unit can be turned on again by pressing any button or inserting an **Animal**.

NOTE

If the unit powers down or the light fades out during playing, please install a new set of batteries.

ACTIVITIES

1. Farmer Button

Press the **Farmer Button** to hear fun phrases, playful songs and melodies. The light will flash with the sounds.



2. Shape Slots

Insert the shape sorting **Animals** into the **Shape Slots** or press the **Shape Buttons** in the **Shape Slots** to learn about animals, numbers and shapes. When a melody is playing, insert the animals into the **Shape Slots** or press the **Shape Buttons** to hear the animals sing with the melodies. The light will flash with the sounds.



3. Wheel Sensor

Push or pull the **Tractor** to hear playful sounds and tunes. When there are animals in the **Shapes Slots**, push the **Tractor** to hear animal sounds. When a melody is playing, push the **Tractor** to add fun sounds on the top of the melody. The light will flash with the sounds.



MELODIES

1. Home on the Range
2. Old MacDonald Had a Farm
3. Clementine
4. Animal Fair
5. Mary Had a Little Lamb
6. This Old Man
7. Yankee Doodle
8. Turkey in the Straw
9. Baa, Baa, Black Sheep
10. Did You Ever See a Lassie?

SONG LYRICS

Song 1

I'm the farmer of the farm,
I have lots of animals.
Sheep, pig, dog and cow,
Sheep, pig, dog and cow,
Sheep, pig, dog and cow,
We like to play together!

Song 2

We're going on an adventure, ready to go?
Beep, beep, bounce, bounce off we go!

Song 3

Riding in my tractor, driving through the field,
Hi-ho the derry-o, off to work I go!

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to play again.
5. If the unit still does not work, install a new set of batteries.

IMPORTANT NOTE:

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S. or **1-877-352-8697** in Canada, or by going to our website at **vtechkids.com** and filling out our **Contact Us** form located under the **Customer Support** link. A service representative will be happy to help you. Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Suppliers Declaration of Conformity
47 CFR § 2.1077 Compliance Information

Trade Name: VTech®
Model: 5330
Product Name: Sort & Wiggle Tractor™
Responsible Party: VTech Electronics North America, LLC
Address: 1156 W. Shure Drive, Suite 200
Arlington Heights, IL 60004
Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES.
OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:
(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED,
INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE
OPERATION.

CAN ICES-3 (B)/NMB-3(B)

**CLASS 1
LED PRODUCT**

**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com

Read our complete warranty policy online at
vtechkids.com/warranty



TM & © 2020 VTech Holdings Limited.
All rights reserved.

Printed in China.

91-003858-000 (S) (E)