

**vtech**<sup>®</sup>  
baby

 
# Parent's Guide

## Twist & Explore Caterpillar™



# INTRODUCTION

Thank you for purchasing the **Twist & Explore Caterpillar™!** Discover sounds and moves with this lovable musical critter. This twistable caterpillar has sensory features for little hands and mouths to explore, including a light-up heart that plays music.

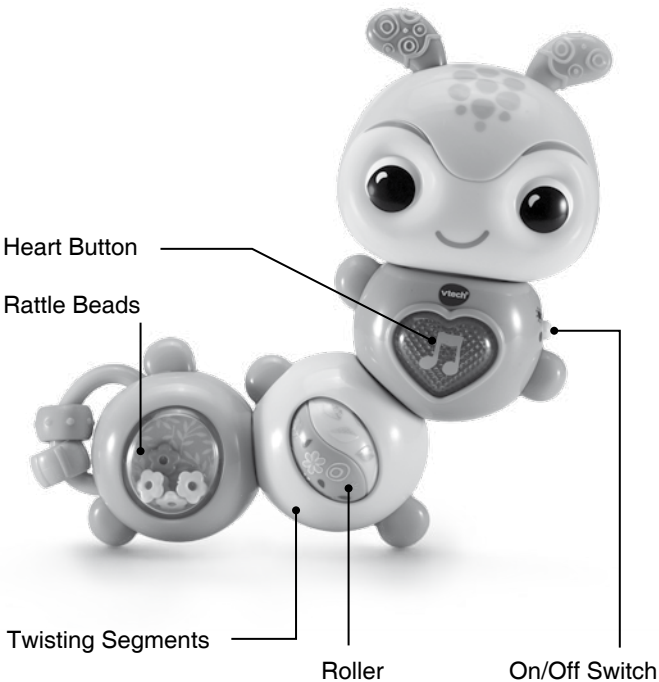

# INCLUDED IN THIS PACKAGE

- Twist & Explore Caterpillar™
- Parent's guide

## WARNING

All packing materials, such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

## NOTE

Please keep this parent's guide as it contains important information.

 
## ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes et vis d'emballage. Ils ne font pas partie du jouet.

## NOTE

Il est conseillé de conserver ce guide des parents car il comporte des informations importantes.

## Unlock the Packaging Locks

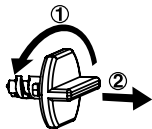


- ① Rotate the packaging locks counterclockwise 90 degrees.
- ② Pull out the packaging locks and discard.

# GETTING STARTED
 
## Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Find the battery cover on the back of the caterpillar's head. Use a screwdriver to loosen the screws and then open the battery cover.
3. Remove old batteries by pulling up on each side of the button cell battery.
4. Install 3 new LR44 batteries following the diagram inside the battery box.
5. Replace the battery cover and tighten the screws to secure.

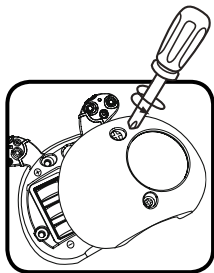

## **⚠ WARNING:**

This product contains a button or coin cell battery. If swallowed, a button or coin cell battery can cause internal chemical burns in as little as two hours and can lead to death. Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention and go straight to the nearest hospital emergency department.

## **⚠ ATTENTION :**

Ce produit contient des piles boutons. Une pile bouton avalée peut causer des brûlures internes en quelques heures et peut conduire à un décès. Débarrassez-vous de vos piles usagées immédiatement après les avoir retirées du produit. Garder les piles neuves et usagées hors de la portée des enfants. Si vous pensez que votre enfant a ingéré une pile bouton ou l'a coincée dans n'importe quelle partie de son corps, consultez immédiatement votre médecin.

## **Australia/New Zealand:**

If you suspect your child has swallowed or placed a button cell/coin battery inside any part of their body, immediately call the 24-hour Poisons Information Centre on 13 11 26 (in Australia) or 24-hour National Poisons Centre on 0800 764 766 (in New Zealand) for fast, expert advice and go straight to the nearest hospital emergency room.

## **BATTERY NOTICE**

- Use three LR44 alkaline button cell batteries only for this toy.
- The button cell batteries used with this product should be kept away from small children who might still put things in their mouths. If the button cell batteries are swallowed, consult a doctor immediately.
- Insert the button cell batteries with the correct polarity (+ and -).
- Do not use damaged button cell batteries.
- Do not short-circuit the button cell battery terminals.
- Remove exhausted button cell batteries from the product.
- Remove button cell batteries during long periods of non-use.
- Do not dispose of button cell batteries in fire.
- Do not charge non-rechargeable button cell batteries.
- Do not mix old and new batteries.
- Do not mix different types of batteries: alkaline or standard (silver oxide).

## **MISE EN GARDE**

 
- Utiliser uniquement 3 piles boutons LR44 pour ce jouet.
- Les piles boutons utilisées avec ce jouet doit être tenue à l'écart des enfants qui pourraient encore porter des choses à la bouche. Si une pile bouton est avalée, il faut consulter immédiatement un médecin.
- Mettre en place les piles boutons en respectant les polarités + et -.
- Ne pas utiliser les piles boutons endommagées.
- Ne pas mettre les bornes des piles boutons en court-circuit (en reliant directement le + et le -).
- Enlever les piles boutons usagées du jouet.

- Retirer les piles boutons en cas de non-utilisation prolongée.
- Ne les jeter ni au feu ni dans la nature.
- Ne pas tenter de recharger les piles boutons non rechargeable.
- Ne pas mélanger des piles boutons neuves avec des usagées.
- Ne pas mélanger des piles alcalines avec des piles à l'oxyde d'argent.

## PRODUCT FEATURES

### 1. On/Off Switch

To turn the unit **On**, slide the **On/Off Switch** to the **On** ☀ position. You will hear a song, a cute phrase and a sound. To turn the unit **Off**, slide the **On/Off Switch** to the **Off** ● position.

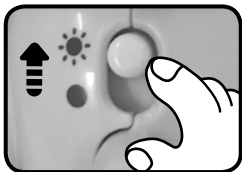

### 2. Automatic Shut-Off

To preserve battery life, the **Twist & Explore Caterpillar™** will automatically shut off after approximately 25 seconds without input. The unit can be turned on again by pressing the **Heart Button**.

## NOTE

If the unit powers down or if the light fades out during play, please install a new set of button cell batteries.

## ACTIVITIES

 
### 1. Heart Button

Press the **Heart Button** to hear fun phrases, songs, melodies and sounds. The light will flash with the sounds.



## 2. Twisting Segments

Twist, turn, shake and spin the caterpillar to help develop important motor skills.

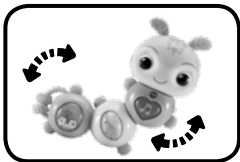

# MELODY LIST

1. Daring Young Man on the Flying Trapeze
2. Looby Loo
3. Listen to the Mockingbird
4. Did You Ever See a Lassie?
5. Yankee Doodle
6. A-Tisket, A-Tasket
7. Roses Are Red
8. Old MacDonald
9. Jack Be Nimble
10. Three Little Kittens
11. Diddle, Diddle Dumpling
12. Teddy Bears' Picnic

# SONG LYRICS

## Song 1

Wiggle, wiggle, wiggle, wiggle,  
Wiggle, wiggly, woo, I like to play with you.  
Giggle, giggle, giggle, giggle,  
Giggly wee, would you like to play with me?

## Song 2

I'm a busy caterpillar,  
I live in the grass and nibble on leaves.

## Song 3

I'm a busy caterpillar,  
I live in the grass and nibble on leaves

# CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the button cell batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

# TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

## **IMPORTANT NOTE:**

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S. or **1-877-352-8697** in Canada, or by going to our website at **vtechkids.com** and filling out our **Contact Us** form located under the **Customer Support** link. Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions that you might have. A service representative will be happy to help you.



## **CAUTION**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## **NOTE**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## **Supplier's Declaration of Conformity**

47 CFR § 2.1077 Compliance Information

Trade Name: VTech®  
Model: 5364  
Product Name: Twist & Explore Caterpillar™  
Responsible Party: VTech Electronics North America, LLC  
Address: 1156 W. Shure Drive, Suite 200  
Arlington Heights, IL 60004  
Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

*CAN ICES-3 (B)/NMB-3(B)*

**Visit our website for more  
information about our products,  
downloads, resources and more.**

***vtechkids.com***  
***vtechkids.ca***

Read our complete warranty policy online at  
***vtechkids.com/warranty***  
***vtechkids.ca/warranty***



TM & © 2020 VTech Holdings Limited.

All rights reserved.

**Printed in China.**

91-003906-002 (US) (CA)