

vtech[®]

User's Manual

Spin & Learn Adventure Globe



© 2010 VTech
Printed in China
91-002595-000 

Dear Parent,

At VTech®, we know how important the first day of school is for your child. To help prepare preschoolers for this important event, VTech® has developed the **Preschool Learning™** series of interactive toys.

Preschool Learning™ features fun characters and inviting school themes that use technology to capture a child's attention and teach important preschool skills like spelling, counting and the alphabet. These vital skills are taught in a way that's both fun and highly engaging to maintain a child's interest. Children will also be introduced to fun school subjects such as art class, music class and even recess! With **Preschool Learning™**, learning is fun from day one!

At VTech®, we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting VTech® with the important job of helping your child learn and grow!

Sincerely,


Your friends at VTech®

To learn more about **Preschool Learning™** series and other VTech® toys, visit www.vtechkids.com

INTRODUCTION

Thank you for purchasing the **VTech® Spin & Learn Adventure Globe!**

The interactive globe features countries, animals, food and engaging characters from around the world. By touching the various objects on the globe, kids are introduced to geography, animal facts, sports, culture, music and more. There are different games that present fun challenges to the player, and interesting sounds and music help bring the learning journey to life.

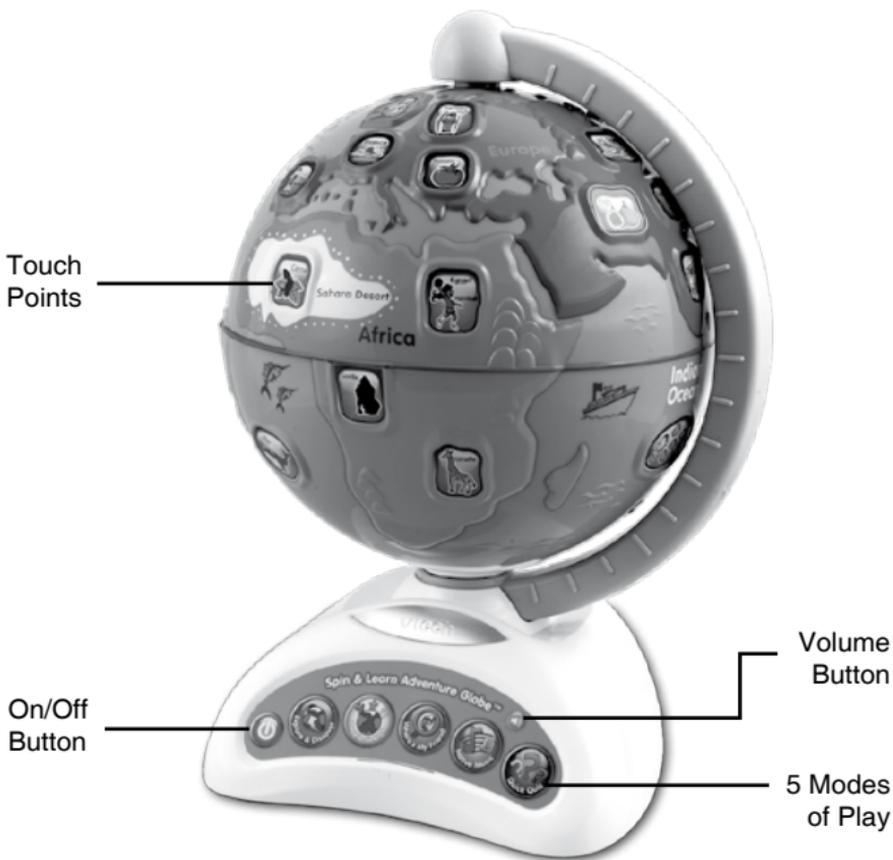

INCLUDED IN THIS PACKAGE


- One VTech® Spin & Learn Adventure Globe
- One user's manual

WARNING: All packing materials, such as tape, plastic sheets, wire ties and tags are not part of this toy, and should be discarded for your child's safety.

NOTE: Countries and objects on globe not drawn to scale.

Please keep instruction manual as it contains important information.

Unlock the packaging locks:

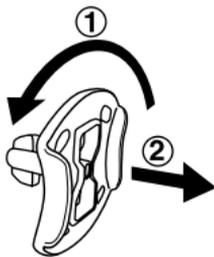


- ① Rotate the packaging locks 90 degrees counter-clockwise.
- ② Pull out the packaging locks.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit.
3. Install 3 new “AA” size (LR6/AM-3) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover.

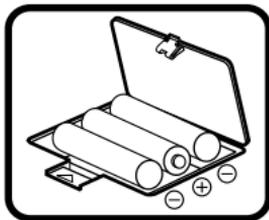

BATTERY NOTICE

- The use of new alkaline batteries is recommended for maximum performance.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged (if removable).
- Rechargeable batteries are only to be charged under adult supervision (if removable).
- Do not mix old and new batteries.
- Do not mix batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- The toy is not to be connected to more than the recommended number of power supplies.
- Do not dispose of batteries in fire.

PRODUCT FEATURES



1. ON/OFF BUTTON

Turn **ON** the unit by pressing the **ON/OFF BUTTON**. Press it again to turn the unit **OFF**.

2. MODE BUTTONS


Touch one of the **MODE BUTTONS** to choose an activity.

3. VOLUME BUTTON

Touch the **VOLUME BUTTON** to select high, middle or low volume.

4. TOUCH POINTS

Touch any of the **TOUCH POINTS** to explore and learn.

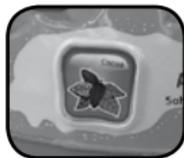

5. AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech® Spin & Learn Adventure Globe** will automatically turn off after several minutes without input. The unit can be turned on again by pressing the **ON/OFF BUTTON**.

ACTIVITIES

- Press the **ON/OFF BUTTON** and you will hear the opening sound followed by a greeting phrase.
- The unit will automatically begin in **Explore & Discover** mode, which allows you to touch and learn about any of the objects on the globe in any order you choose.

MODES OF PLAY

Mode 1: Explore & Discover

1. Touch the **Explore & Discover** button to enter this activity.
2. Touch any object on the globe and you will learn about that specific object, country, animal or food.

Mode 2: People Search

1. Touch the **People Search** button to enter this activity.
2. Touch the country location to hear about the people who live there and a popular sport in that country.

Mode 3: Where's My Friend

1. Touch the **Where's My Friend** button to enter this activity.
2. You will be asked to find a country where my friend has gone on the globe. For example, you will hear "My friend has gone to a country where baseball is a popular sport. Do you know where my friend is?" Press the **TOUCH POINT** to answer the question.

Mode 4: Native Music

1. Touch the **Native Music** button to enter this activity.
2. Touch any country location to hear songs performed in the style of the native music of that country.

Mode 5: Quick Quiz

1. Touch the **Quick Quiz** button to enter this activity.
2. You will be asked to find a country, an animal, a food, a boy or a girl on the globe. For example, you will hear “Can you find Canada? Where is it?” Press the **TOUCH POINT** to answer the question.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working, then please follow these steps:

1. Turn the unit OFF.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back ON. The unit will now be ready to play again.
5. If the unit still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **Preschool Learning™** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada with any problems and/or suggestions that you might have. A service representative will be happy to help you.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution : changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.