

**vtech**<sup>®</sup>

# Instruction Manual

## Twist & Teach Animal Cube™



# INTRODUCTION

Thank you for purchasing the **Twist & Teach Animal Cube™** .

Go ahead, twist! There are no wrong moves with this cute cube. Make young minds and hands happy with a new twist on take-along learning! Rotate four animals into four different vehicles to mix and match while learning about animals, vehicles, letters and colors.

Light-Up Buttons



On/Off Switch



# INCLUDED IN THE PACKAGE

- **Twist & Teach Animal Cube™**
- Quick Start Guide

## WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

## NOTE

Please save this Instruction Manual as it contains important information.

 
## ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

## NOTE

Il est conseillé de sauvegarder ce manuel d'utilisation car il comporte des informations importantes.

## Unlock the Packaging Locks

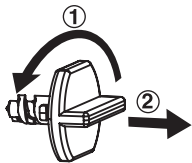


- ① Turn the packaging lock counterclockwise several times.
- ② Pull out and discard the packaging lock.

# GETTING STARTED
 
## Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the bottom of the unit, use a screwdriver to loosen the screw, and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new AAA batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

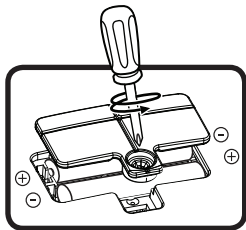

### **WARNING:**

Adult assembly required for battery installation.  
Keep batteries out of reach of children.



### **ATTENTION :**

Les piles ou accumulateurs doivent être installés par un adulte.  
Tenir les piles ou accumulateurs hors de portée des enfants.

## **IMPORTANT: BATTERY INFORMATION**

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.

- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

## **RECHARGEABLE BATTERIES**

- Remove rechargeable batteries (if removable) from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

## **IMPORTANT : INFORMATIONS CONCERNANT LES PILES**



- Mettre en place les piles ou les accumulateurs en respectant les polarités + et –.
- Ne pas mélanger des piles ou des accumulateurs neufs avec des usagés.
- Ne pas mélanger différents types de piles : alcalines, zinc-carbone et rechargeables.
- Seules des piles du type recommandé doivent être utilisées.
- Ne pas mettre les bornes d'une pile ou d'un accumulateur en court-circuit (en reliant directement le + et le –).
- Retirer les piles ou les accumulateurs en cas de non-utilisation prolongée.
- Enlever les piles ou les accumulateurs usagés du jouet.
- Ne les jeter ni au feu ni dans la nature.

 
## **PILES RECHARGEABLES**

- Enlever, lorsque c'est possible, les accumulateurs du jouet pour les recharger.
- Les accumulateurs ne doivent être chargés que sous la surveillance d'un adulte.
- Ne pas tenter de recharger des piles non rechargeables.

# PRODUCT FEATURES

## 1. On/Off Switch

To turn the unit **On**, slide the **On/Off Switch** to the **On**  position. You will hear a song, a playful phrase and sounds. To turn the unit **Off**, slide the **On/Off Switch** to the **Off**  position.

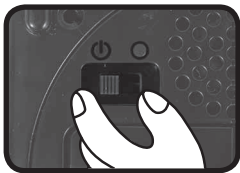

## 2. Automatic Shut-Off

To preserve battery life, the **Twist & Teach Animal Cube™** will automatically shut off after approximately 35 seconds without input. The unit can be turned on again by pressing any button or twisting the cube.

### NOTE

If the unit powers down or if the light fades out during play, please install a new set of batteries.

# ACTIVITIES

## 1. Light-Up Buttons

Press the four **Light-Up Buttons** to learn animal names, letters and colors. Fun animal songs, sounds and melodies will play. The buttons will flash with the sounds.



## 2. Twisting Cube

Twist the **Cube** to move each animal into four different vehicles to hear fun sounds, phrases and music. The lights will flash with the sounds.



## MELODIES

1. Alphabet Song
2. Do You Know the Muffin Man?
3. For He's a Jolly Good Fellow
4. Glow Worm
5. Diddle, Diddle Dumpling
6. Here We Go 'Round the Mulberry Bush
7. Hickory, Dickory, Dock
8. Looby Loo
9. Mary Had a Little Lamb
10. Oh Where, Oh Where Has My Little Dog Gone
11. One, Two, Buckle My Shoe
12. Pease Porridge Hot
13. Oh! Dear, What Can the Matter Be?
14. Rockin' Robin
15. Ten in the Bed
16. Wheels on the Bus

# SONG LYRICS

## Song 1

1, 2, 3, 4, 5 animal friends are side by side.  
Twist and turn with your hands, the cube is so much fun.

## Song 2

A green alligator is big and strong.  
It loves swamps, marshes and lakes.

## Song 3

The bear went over the mountain.  
To eat nuts, berries and leaves.

## Song 4

Purr, purr goes a cat.  
Happily taking a nap.

## Song 5

A dog says Bow-wow-wow.  
And loves to dig bones.

# CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on a hard surface and do not expose the unit to moisture or water.



# TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to play again.
5. If the unit still does not work, install a new set of batteries.

## IMPORTANT NOTE:

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S. or **1-877-352-8697** in Canada, or by going to our website at **vtechkids.com** and filling out our **Contact Us** form located under the **Customer Support** link. Creating and developing VTech products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

## CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against

harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### **Supplier's Declaration of Conformity**

#### **47 CFR § 2.1077 Compliance Information**

Trade Name: VTech®  
Model: 5584  
Product Name: Twist & Teach Animal Cube™  
Responsible Party: VTech Electronics North America, L.L.C  
Address: 1156 W. Shure Drive, Suite 200  
Arlington Heights, IL 60004  
Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:  
(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND  
(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

CAN ICES-003(B)/NMB-003(B)

**Visit our website for more  
information about our products,  
downloads, resources and more.**

***vtechkids.com***  
***vtechkids.ca***

Read our complete warranty policy online at  
***vtechkids.com/warranty***  
***vtechkids.ca/warranty***

