



Parent's Guide

Super Catboy Learning Watch
Super Owlette Learning Watch
Super Gekko Learning Watch



©2017 Frog Box/Entertainment One UK Limited

 
91-003447-004 (US)

INTRODUCTION

Thank you for purchasing the **VTech® PJ Masks Super Learning Watch**. This watch is full of great learning fun for children! Not only will this watch show you the time, but there are also alarm, timer and stopwatch functions. It also includes four built-in games to reinforce learning of numbers, shapes and counting as you go into the night to save the day with Catboy, Owlette and Gekko!

FEATURES

PRODUCT LAYOUT AND BUTTONS

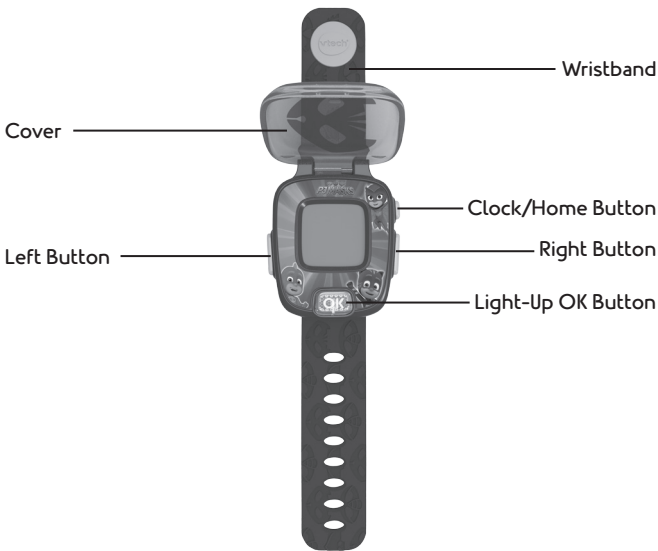

INCLUDED IN THIS PACKAGE

- One PJ Masks Super Learning Watch
- One Parent's Guide
- One CR2450 battery (placed inside the product)

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE:

Please keep this parent's guide as it contains important information.

ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes et vis d'emballage. Ils ne font pas partie du jouet.

NOTE :

Il est conseillé de conserver ce guide des parents car il comporte des informations importantes.

PRODUCT SPECIFICATION

BATTERY	One CR2450 battery
TIME FORMAT	12h or 24h
DISPLAY	DIGITAL
OPTIMUM OPERATING AND CHARGING TEMPERATURE	32°F - 104°F (0°C - 40°C)

Important Note:

- Do not place the watch under running water.
- Do not submerge. Not suitable for showering, bathing or swimming.
- Keep the cover closed when the watch is not in use.

Note :

- Ne pas mettre la montre sous l'eau.
- Ne pas immerger la montre et ne pas l'utiliser sous la douche et dans le bain.
- Garder le clapet fermé lorsque la montre n'est pas utilisée.

WARNING:

People with very sensitive skin may notice some irritation after wearing the **PJ Masks Super Learning Watch** for extended periods of time. The skin may become irritated when moisture, sweat, soap or other irritants get trapped under the wristband and are left in contact with the skin. To prevent this, we suggest children remove the watch before going to bed for the night, take the watch off if it's feeling uncomfortable, and keep their wrist and the band clean and dry.

In addition, wearing the watch too tightly may also cause irritation. Make sure the fit is good - tight enough so the watch stays in place but not so tight that it's uncomfortable. If you notice any redness, swelling, or other irritation, you may want to consult a doctor before wearing the watch again.

PRÉCAUTIONS D'UTILISATION

Comme avec d'autres objets portés près du corps de manière prolongée, la montre interactive pourrait éventuellement provoquer une irritation. L'humidité, la transpiration, l'eau savonnée ou d'autres agents irritants peuvent s'incruster sous le bracelet et rester en contact avec la peau.

En prévention, nous recommandons fortement aux enfants de ne pas porter la montre pendant la nuit, de l'enlever dès le moindre signe d'irritation, et de garder le bracelet sec et propre. Par ailleurs, vérifiez que le bracelet de votre enfant ne soit ni trop serré, ni trop lâche. Si vous observez des rougeurs, gonflements ou autre irritation, veuillez consulter un médecin avant de remettre la montre.

Cover

Open the cover to view the time. When the cover is closed, tap the bottom of the cover to play PJ Masks music with a fun light effect.

Left/Right Buttons

Use the **Left** and **Right Buttons** to select an activity or option, or to select options in settings or navigate in the games.

Light-Up OK Button

Press the **Light-Up OK Button** to confirm a selection in different activities.

Clock/Home Button

Press the **Clock Button** to return to the clock from any other function or activity.

GETTING STARTED

WARNING:

This product contains a Button or Coin Cell Battery. A swallowed Button or Coin Cell Battery can cause internal chemical burns in as little as two hours and lead to death. Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

 
⚠ ATTENTION !

Ce jouet contient une pile bouton ! L'ingestion d'une pile bouton peut causer des brûlures internes pouvant provoquer la mort dans un délai de 2 heures. Jeter les piles usées immédiatement après les avoir retirées du jouet. Garder les piles neuves hors d'atteinte des enfants. Si vous remarquez qu'une pile bouton a été avalée, consultez immédiatement un médecin.

BATTERY INSTALLATION

NOTE: For best performance, remove the factory-installed battery from the **PJ Masks Super Learning Watch** and use a new battery.

1. Locate the battery cover on the back of the unit and open it with a screwdriver (not included).
2. Remove the battery cover and insert a CR2450 battery as illustrated.
3. Replace the battery cover and fasten the screw.

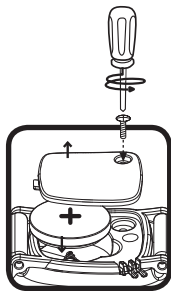

BATTERY NOTICE

- Use one CR2450 Lithium coin battery only for this toy. Do not use rechargeable Lithium ion battery LIR2450. This toy is not compatible with LIR2450.
- The coin battery used with this product should be kept away from small children who might still put things in their mouths. If the coin battery is swallowed, consult a doctor immediately.
- Insert the coin battery with the correct polarity.
- Do not use a damaged coin battery.
- Do not short-circuit the coin battery terminals.
- Remove exhausted coin battery from the product.
- Remove coin battery during long periods of non-use.

- Do not dispose of coin battery in fire.
- Do not charge non-rechargeable coin battery.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.

TO BEGIN USING THE PJ MASKS SUPER LEARNING WATCH

When you use the watch for the first time, open the cover, then press the **LEFT+RIGHT+OK Buttons** for approximately 5 seconds to unlock the try me mode. You will hear three beeping sounds when the try me mode is unlocked. You can then press any button to activate the watch and set the time.

Press the **Left/Right Buttons** to select, then press the **OK Button** to confirm and move to the next option. A checkmark will be displayed when the setting is complete.

 
Note:

- When the battery level is low, most functions on the watch may not be activated, except for the clock display. It is recommended to replace with a new battery as soon as possible before further use.
- If the battery level is too low and cannot keep the clock running, you will need to enter the time and date again after the battery has been replaced.

AUTOMATIC POWER OFF

To save power, the **PJ Masks Super Learning Watch** will automatically power off when there has been no input for about 30 seconds. Press any button or open the cover to turn the unit **ON** again.

The unit will also automatically turn **OFF** when the battery power is very low. If you see the Low Battery icon appear on screen, please replace the battery.

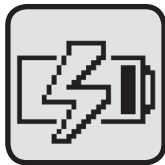






ACTIVITIES

Clock Display

When the **Clock/Home Button** is pressed, the time will be displayed. Press the **Left** or **Right Buttons** to display the **Home Menu** where other activities can be selected.

Home Menu

Press the **Left** or **Right Buttons** to display the **Home Menu**. There are 5 options to choose from:

1. Alarm Clock 	2. Stopwatch 	3. Timer 
4. Games 	5. Settings 	

- Press the **Left** or **Right Buttons** to scroll through the menu options.
- Press the **OK Button** to confirm.

1. Alarm Clock

You can set an alarm with a choice of three alarm tones.

- Press the **Left** or **Right Buttons** to select the time/alarm tone.
- Press the **OK Button** to confirm and move to the next setting.



2. Stopwatch

Access the stopwatch here.

- Press the **OK Button** to start the stopwatch, press again to stop.
- When the stopwatch is stopped, you can press the **Left** or **Right Buttons** to reset.



3. Timer

Set a countdown timer here.

- Press the **Left** or **Right Buttons** to change the time.
- Press the **OK Button** to confirm.
- When you press the **OK Button** to confirm the timer duration, the countdown will start immediately.
- While the timer is running, you can press the **OK Button** to pause/resume, and press the **Left** or **Right Button** to reset.

 


4. Games

In the games menu, press the **Left** or **Right Buttons** to scroll through the different options:


4.1. Gekko-Mobile Pursuit

Gekko is driving the Gekko-mobile to track down the location of Romeo's mobile laboratory. Use the shape clues to work out which way Romeo has gone. Press the **Left** or **Right Buttons** to select.

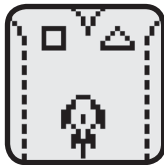

4.2. Running Math

 Owlette is chasing Luna Girl through the streets and Luna Girl has hidden inside a building. A math problem will be shown on the screen with two answers displayed on two different doors. Choose the correct door to help Owlette find Luna Girl. Press the **Left** or **Right Buttons** to select.

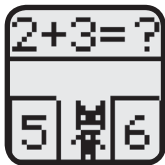


4.3. Flying Discs

Catboy is practicing his skills with some flying discs. Follow the instructions to hit the largest or smallest number. Press the **OK Button** to launch the flying disc.



4.4. Ninjalino Numbers

 The PJ Masks are chasing Night Ninja and the Ninjalinos have hidden in the park. Help the PJ Masks count the number of Ninjalinos. Press the **Left** or **Right Buttons** to select.

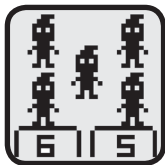

5. Settings

In the settings menu, press the **Left** or **Right Buttons** to scroll through the various options:

5.1. Clock Face

- Press the **Left** or **Right Buttons** to select from nine different clock faces.
- Press **OK** to confirm.



5.2. Cuckoo Clock

- When the cuckoo clock is activated, the watch will briefly chime at the top of each hour between 7 AM and 7 PM. The cuckoo clock will not ring if a game is in progress.
- Press the **Left** or **Right Buttons** to turn the cuckoo clock **ON** or **OFF**.
- Press **OK** to confirm.



5.3. Time Setting

- Press the **Left** or **Right Buttons** to change the options. (AM/PM setting is only applicable in 12-hour time format)
- Press **OK** to confirm.



CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth. Never use solvents or abrasives.
2. Keep it out of direct sunlight and away from direct sources of heat.
3. Remove the battery when not using it for an extended period of time.
4. Avoid dropping it. Never try to dismantle it.
5. Always keep the unit away from water.

TROUBLESHOOTING

If for some reason the program/activity stops working or the unit can't be turned on again, then please follow these steps:

1. Turn the unit **OFF**.
2. Interrupt the power supply by removing the battery.

3. Let the unit sit for a few minutes, then replace the battery.
4. Turn the unit back **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with a new battery.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our website at vtechkids.com and filling out our Contact Us form located under the Customer Support link. A service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **VTech**[®] products is accompanied by a responsibility that we at **VTech**[®] take very seriously. We make every effort to ensure the accuracy of the information which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our website at vtechkids.com and filling out our Contact Us form located under the Customer Support link with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:
(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

CAN ICES-3 (B)/NMB-3(B)

CLASS 1
LED PRODUCT



PRODUCT WARRANTY

This Warranty is applicable only to the original purchaser, is non-transferable and applies only to "Vtech" products or parts. This product is covered by a 3-month Warranty from the original purchase date, under normal use and service, against defective workmanship and materials. This Warranty does not apply to (a) consumable parts, such as batteries; (b) cosmetic damage, including but not limited to scratches and dents; (c) damage caused by use with non-VTech products; (d) damage caused by accident, misuse, unreasonable use, immersion in water, neglect, abuse, battery leakage, or improper installation, improper service, or other external causes; (e) damage caused by operating the product outside the permitted or intended uses described by VTech in the owner's manual; (f) a product or part that has been modified (g) defects caused by normal wear and tear or otherwise due to the normal aging of the product; or (h) if any VTech serial number has been removed or defaced.

Prior to returning a product for any reason, please notify the VTech Consumer Services Department by going to our website at vtechkids.com, filling out our Contact Us form located under the Customer Support link or calling 1-800-521-2010.

If the service representative is unable to resolve the issue, you will be provided instructions on how to return the product and have it replaced under Warranty. Return of the product under Warranty must adhere to the following rules: If VTech believes that there may be a defect in the materials or workmanship of the product and can confirm the purchase date and location of the product, we will at our discretion replace the product with a new unit or product of comparable value. A replacement product or parts assumes the remaining Warranty of the original product or 30 days from the date of replacement, whichever provides longer coverage.

THIS WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL, WRITTEN, STATUTORY, EXPRESS OR IMPLIED. IF VTECH CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY AND TO THE REPLACEMENT SERVICE AS DETERMINED BY VTECH IN ITS SOLE DISCRETION.

To the extent permitted by law, VTech will not be responsible for direct, special, incidental or consequential damages resulting from any breach of Warranty.

This Warranty is not intended to persons or entities outside the United States of America. Any disputes resulting from this Warranty shall be subject to the final and conclusive determination of VTech.

**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com

