

**vtech**<sup>®</sup>  
Baby

# User's Manual

## Musical Mouse Teether™



© 2015 VTech  
Printed in China  
91-127900-000 

*Dear Parent,*

*Ever notice the look on your baby's face when they learn something new through their own discovery? These self-accomplished moments are a parent's greatest reward. To help fulfill them, VTech® created the **Infant Learning**® series of toys.*

*These unique interactive learning toys directly respond to what children do naturally – play! Using innovative technology, these toys react to baby's interactions, making each play experience fun and unique as they learn age-appropriate concepts like first words, numbers, shapes, colors and music. More importantly, VTech®'s **Infant Learning**® toys develop baby's mental and physical abilities by inspiring, engaging and teaching.*

*At VTech®, we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting VTech® with the important job of helping your child learn and grow!*


*Sincerely,*

*Your friends at VTech®*

*To learn more about VTech® toys, visit [vtechkids.com](http://vtechkids.com)*

# INTRODUCTION

Get ready to shake, rattle and sing with the **VTech® Musical Mouse Teether™**! With a large and easy to grasp handle, it's perfect for your baby's little hands. There's a soft plastic piece of cheese in the mouse's hands that's great for teething! The light-up press button and motion sensor plays phrases, sounds, songs and melodies.

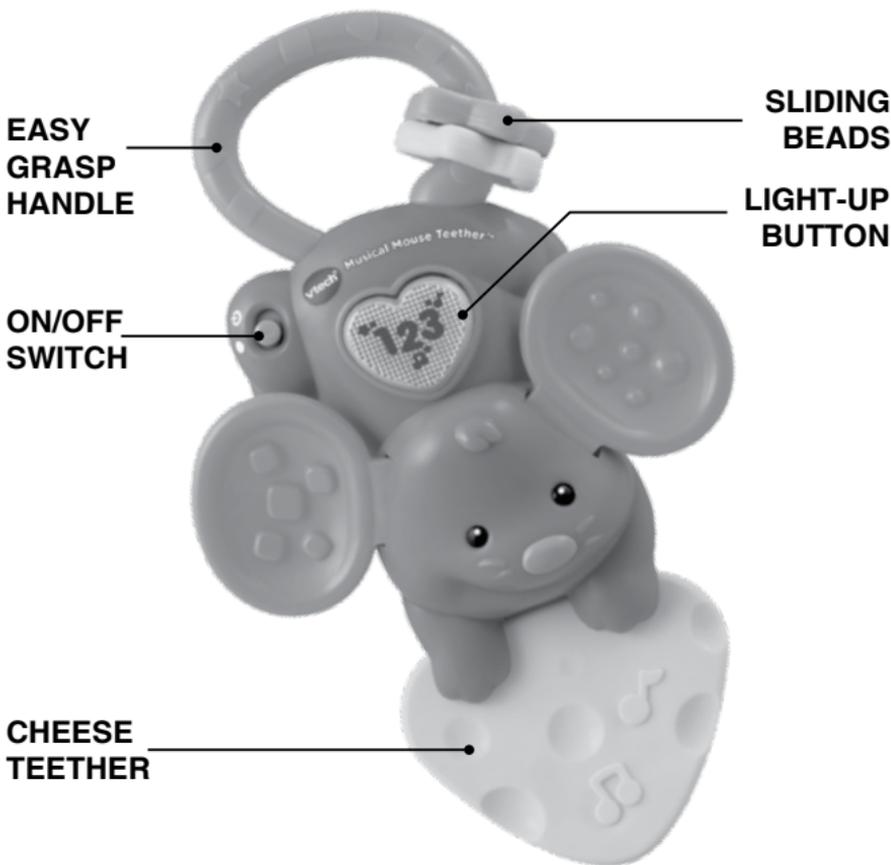

# INCLUDED IN THIS PACKAGE

- One VTech® Musical Mouse Teether™ learning toy
- One user's manual

**WARNING:** All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.


**ATTENTION:** Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches et étiquettes. Ils ne font pas partie du jouet.

**NOTE:** Please keep user's manual as it contains important information.

## GETTING STARTED

### BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw.
3. Install 2 new 'AAA' (LR03/AM-4) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure.

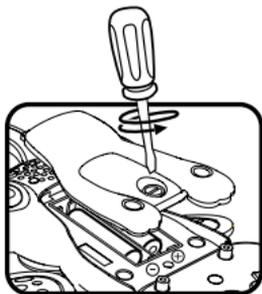

### BATTERY NOTICE


- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.

- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

## ASSEMBLY INSTRUCTIONS


With the **VTech® Musical Mouse Teether™** safety comes first. To ensure your child's safety, this product should only be assembled by an adult.

1. To detach the teether for washing, use a screwdriver to loosen the screw and remove the battery cover. Remove the soft plastic cheese teether.

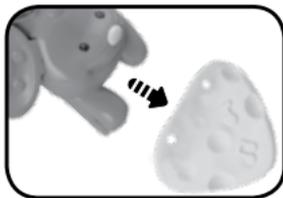

2. Before using the teether for the first time and after each use, wash with warm soapy water, rinse and air dry. **DO NOT** use boiling water, steam, a microwave or dishwasher to clean the teether. Check the teether regularly for wear. Discard the teether if any cracks or tears are found on the teether.


3. Re-attach the soft plastic cheese teether to the main unit. Replace the battery cover and tighten the screw to secure.

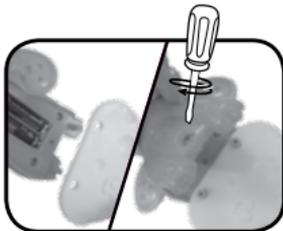

# PRODUCT FEATURES

## 1. ON/OFF SWITCH

To turn the unit **ON**, slide the **ON/OFF SWITCH** to the **ON** (☺) position. To turn the unit **OFF**, slide the **ON/OFF SWITCH** to the **OFF** (●) position.

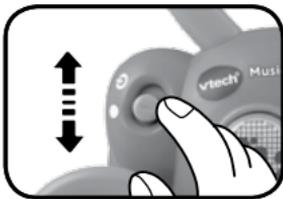


## 2. AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech® Musical Mouse Teether™** will automatically power-down after approximately 30 seconds without input. The unit can be turned on again by pressing any button. Activating the motion sensor will not turn the unit back on.

# ACTIVITIES

1. Slide the **on/off switch** to turn the unit on. You will hear a song and a fun phrase. The light will flash with the sound.
2. Press the **light-up heart button** to hear a song, melodies, sounds and phrases. The light will flash with the sound.
3. Activate the **motion sensor** to hear a variety of melodies, sounds or a song. When a melody is playing, shake the rattle to play sounds over the top of the melody. The light will flash with the sound.

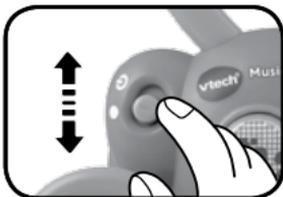

## **MELODY LIST**

1. Hickory Dickory Dock
2. Three Blind Mice
3. Bear Went Over the Mountain
4. Hot Cross Buns
5. Jack and Jill
6. Old MacDonald
7. Pop! Goes the Weasel
8. Polly Put the Kettle On
9. Twinkle, Twinkle Little Star
10. Did You Ever See a Lassie?
11. On Top of Old Smokey
12. Skip to My Lou
13. Teddy Bears' Picnic
14. Oh! Dear, What Can the Matter Be?
15. A-Tisket, A-Tasket
16. Pease Porridge Hot
17. Are You Sleeping?

## **SUNG SONG LYRICS**

### **SONG 1**

I'm a hungry little mouse,  
I smell some cheese,  
Yummy, yummy cheese!  
Yum, yum, all done!

### **SONG 2**

One, two, three, count with me!  
I'm as happy as can be.

### **SONG 3**

I like to shake, I like to wiggle,  
Playing with you makes me giggle.

# CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

# TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

For information on this product's warranty, please call **VTech®** at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada.

## IMPORTANT NOTE:

Creating and developing **Infant Learning** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

## Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

*CAN ICES-3 (B)/NMB-3(B)*

**Caution:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.