

**vtech**<sup>®</sup>

User's Manual

# Chuggin' Tunes Boat™



© 2014 VTech  
Printed in China  
91-002903-000 <sup>US</sup>

*Dear Parent,*

*Ever notice the look on your baby's face when they learn something new through their own discovery? These self-accomplished moments are a parent's greatest reward. To help fulfill them, VTech® created the **Infant Learning**® series of toys.*

*These unique interactive learning toys directly respond to what children do naturally – play! Using innovative technology, these toys react to baby's interactions, making each play experience fun and unique as they learn age-appropriate concepts like first words, numbers, shapes, colors and music. More importantly, VTech®'s **Infant Learning**® toys develop baby's mental and physical abilities by inspiring, engaging and teaching.*

*At VTech®, we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting VTech® with the important job of helping your child learn and grow!*

*Sincerely,*

*Your friends at VTech®*

*To learn more about the **Infant Learning**® series and other VTech® toys, visit [www.vtechkids.com](http://www.vtechkids.com)*

# INTRODUCTION

Thank you for purchasing the **VTech® Chuggin' Tunes Boat™** learning toy!

Set sail in the bath with the **VTech® Chuggin' Tunes Boat™**! This cute little boat featuring Captain Bear will entertain your little one with playful phrases, fun sounds, sing-along songs and playful melodies. You can also turn the flag at the back of the boat and spin the wheel round and round!



# INCLUDED IN THIS PACKAGE

- One VTech® Chuggin' Tunes Boat™ learning toy
- One User's Manual
- One bear play piece

## WARNING:

All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

## ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches et étiquettes. Ils ne font pas partie du jouet.


## NOTE:

Please keep this instruction manual as it contains important information.

# INSTRUCTIONS

## BATTERY INSTALLATION

1. Make sure the unit is turned **OFF** and the battery cover, battery box and unit are all dry.
2. Locate the battery cover on the bottom of the unit. Use a screwdriver to loosen the screws.
3. Install 1 new AA (AM-3/LR6) battery following the diagram inside the battery box. (The use of A new alkaline battery is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure the battery cover. When closing the battery cover ensure that the screws are securely tightened. This will avoid any water leakage.

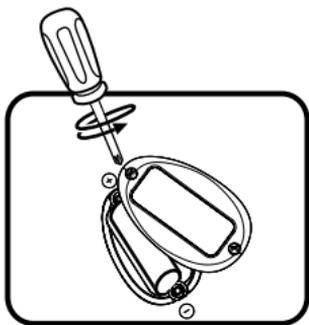

## BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

## PRODUCT FEATURES

### 1. ON/OFF PRESS BUTTON

To turn the unit **ON**, press the **ON/OFF BUTTON** (⏻). To turn the unit **OFF**, press the **ON/OFF BUTTON** (⏻) a second time.



### 2. AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech® Chuggin' Tunes Boat™** will power-down after approximately 40 seconds without input. The unit can be turned on again by pressing the on/off button.

**Please Note:** When the speaker fills up with water the volume of the product will decrease. To correct the problem remove the boat from the water and allow the water to drain away from the speaker.

## WARNING:

- Batteries must be changed by an adult.
- Only use this product in water between 10 and 45 degrees celsius, 50 and 104 degrees Fahrenheit.
- This product cannot be used in salt water.
- Do not leave this product submerged in water for a long period of time.
- This product should only be operated in water when fully assembled in accordance with the instructions.
- To prevent drowning, never leave a child unattended in the bath.
- Use a thermometer to check the temperature of the water before sitting a child in the bath. Toddlers have very sensitive skin and can burn easily if the water is too hot.
- When finished playing, remove the unit from the water and pour out any remaining water. Rinse the unit with clean water and wipe with a dry cloth. Suspend the unit in an upright position to dry.

## ACTIVITIES


1. Press the **on/off button** to turn the unit on. You will hear a sound, sung song and a fun phrase. The light will flash with the sounds.



2. Press the **music button** to hear the sung songs and melodies. The light will flash with the sounds.



3. Insert or remove **Captain Bear** to hear sounds, fun phrases and melodies. The light will flash with the sounds.

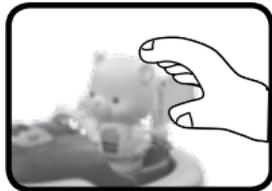

## SUNG SONG LYRICS

### SONG 1

1-2-3, let's head out to the sea!  
3-2-1, get ready for ocean fun!

### SONG 2

Hop aboard, the captain's waiting.  
Pull up the anchor and hold on tight, we are ready to go!

### MELODY LIST

1. Row, Row, Row Your Boat
2. Sailing, Sailing
3. Sailor's Hornpipe

## CARE & MAINTENANCE

2. Keep the unit clean by wiping it with a slightly damp cloth.
3. Keep the unit out of direct sunlight and away from any direct heat source.
4. Make sure to dry all the elements of the unit before storing.

5. Remove the batteries when the unit will not be in use for an extended period of time.
6. Do not drop the unit on hard surfaces.

## TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

For information on this product's warranty, please call **VTech**<sup>®</sup> at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada.

### IMPORTANT NOTE:

Creating and developing Infant Learning products is accompanied by a responsibility that we at **VTech**<sup>®</sup> take very seriously. We make every effort to ensure the accuracy of the information which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada with any problems and/or suggestions that you might have. A service representative will be happy to help you.

### NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in

accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution : changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

