

**vtech**<sup>®</sup>

**User's Manual**

# **Lil' Critters Moosical Beads™**



© 2015 VTech  
Printed In China  
91-002996-000 (US)

Dear Parent,

Ever notice the look on your baby's face when they learn something new through their own discovery? These self-accomplished moments are a parent's greatest reward. To help fulfill them, **VTech**<sup>®</sup> created the **Infant Learning**<sup>®</sup> series of toys.

These unique interactive learning toys directly respond to what children do naturally – play! Using innovative technology, these toys react to baby's interactions, making each play experience fun and unique as they learn age-appropriate concepts like first words, numbers, shapes, colors and music. More importantly, **VTech**<sup>®</sup>'s **Infant Learning**<sup>®</sup> toys develop baby's mental and physical abilities by inspiring, engaging and teaching.

At **VTech**<sup>®</sup>, we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting **VTech**<sup>®</sup> with the important job of helping your child learn and grow!

Sincerely,


Your friends at **VTech**<sup>®</sup>

To learn more about **VTech**<sup>®</sup> toys, visit [www.vtechkids.com](http://www.vtechkids.com)

# INTRODUCTION

Thank you for purchasing the **VTech® Lil' Critters Moosical Beads™** learning toy!

Cuddle and learn with the **Lil' Critters Moosical Beads™**. Press the buttons or spin the square bead to hear songs and phrases that teach shapes, colors, numbers and letters.

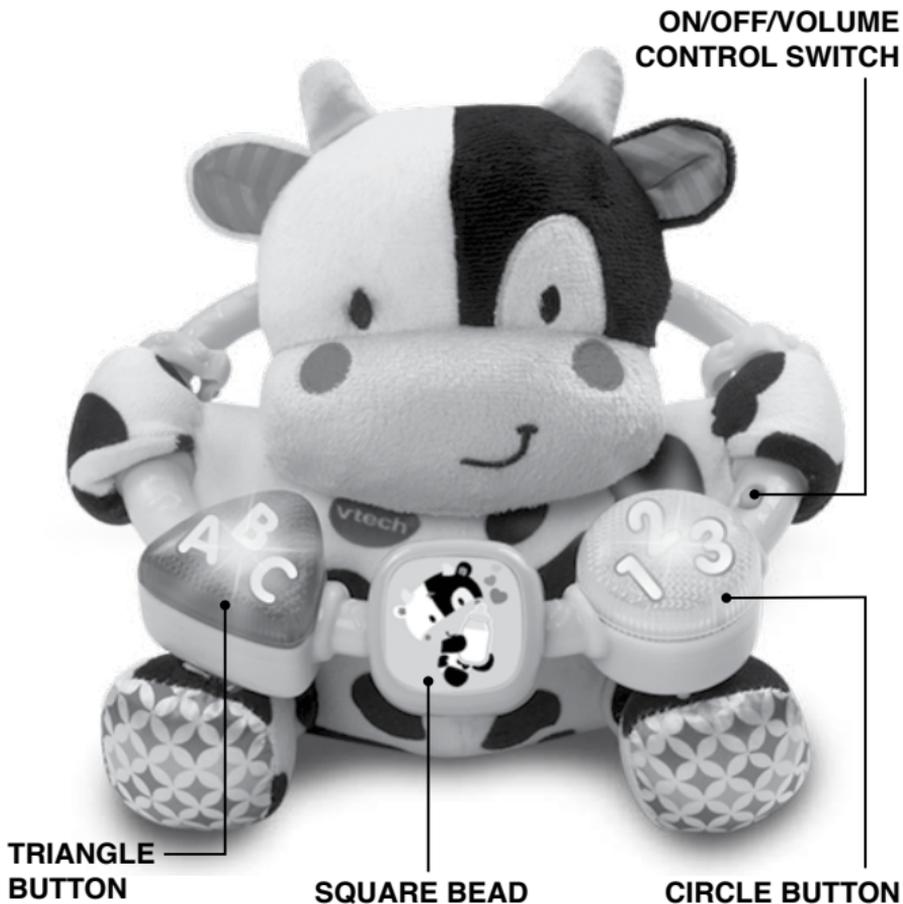

# INCLUDED IN THIS PACKAGE

- One VTech® Lil' Critters Moosical Beads™ learning toy
- One User's Manual

**WARNING:** All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.


**ATTENTION:** Pour la sécurité de votre enfant, débarrassez vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches et étiquettes. Ils ne font pas partie du jouet.

**NOTE:** Please keep this instruction manual as it contains important information.

## GETTING STARTED

### BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the electronic box on the back of the plastic ring. Use a screwdriver to loosen the screw.
3. Install 2 new 'AAA' (AM-4/LR03) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure the battery cover.

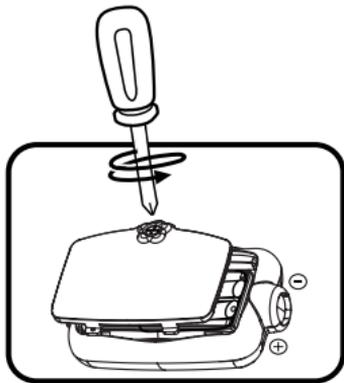

## BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

## PRODUCT FEATURES

### 1. ON/OFF/VOLUME CONTROL SWITCH

To turn the unit **ON**, slide the **ON/OFF/VOLUME CONTROL SWITCH** to the **LOW VOLUME** (  ) or **HIGH VOLUME** (  ) position. To turn the unit **OFF**, slide the **ON/OFF/VOLUME CONTROL SWITCH** to the **OFF** (  ) position.



## 2. AUTOMATIC SHUT-OFF


To preserve battery life, the **VTech® Lil' Critters Moosical Beads™** will automatically power-down after approximately 40 seconds without input. The unit can be turned on again by pressing any button or spinning the square bead.

## ACTIVITIES


1. Slide the **on/off/volume control switch** to turn the unit on. You will hear a cow sound, a phrase and a song. The lights will flash with the sounds.




2. Press the **circle button** to learn the shape and color, and hear playful songs and melodies. The lights will flash with the sounds.

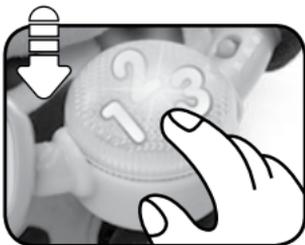

3. Press the **triangle button** to learn the shape and color, and hear playful songs and melodies. The lights will flash with the sounds.

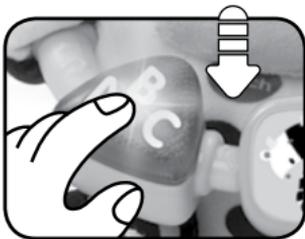

4. Spin the **square bead** to learn the shape and color, and hear playful songs and melodies. Continue spinning the bead to hear fun sounds play over the music. The lights will flash with the sounds.

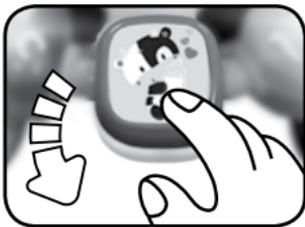

5. If there is no input after approximately 10 seconds, you will hear a phrase. After another 10 seconds without input, you will hear a short tune. If there continues to be no input for another 10 seconds, the unit will play a phrase and the unit will automatically power down. The unit can be turned on again by pressing any button or spinning the square bead.

## SUNG SONG LYRICS

### SONG 1

I'm a soft and spotted cow.  
Hug me, love me, all day long.

### SONG 2

A-B-C-D-E-F-G,  
H-I-J-K-L-M-N-O-P,  
Q-R-S,  
T-U-V,  
W-X, Y and Z.  
Now I know my A-B-C's,  
Next time won't you sing with me?

### SONG 3

One, two, three,  
One, two, three.  
I like to count,  
Count with me!

## **MELODY LIST:**

1. Hey Diddle Diddle
2. Old MacDonald Had a Farm
3. Farmer in the Dell
4. Big Rock Candy Mountain
5. Looby Loo
6. Are You Sleeping?
7. ABC Tumble Down D,
8. Diddle, Diddle, Dumpling
9. Little Miss Muffet
10. London Bridge
11. Humpty Dumpty
12. Hot Cross Buns

## **CARE & MAINTENANCE**

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

# TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

For information on this product's warranty, please call **VTech**<sup>®</sup> at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada.

## **IMPORTANT NOTE:**

Creating and developing **Infant Learning** products is accompanied by a responsibility that we at **VTech**<sup>®</sup> take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

## Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

*CAN ICES-3 (B)/NMB-3(B)*

**Caution:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.