

User's Manual

Disney
PRINCESS

Princess Magical SmartPhone™



vtech®

© Disney

Visit the Disney website at www.DisneyPrincess.com

© 2013 VTech

Printed in China

91-009640-000 (US)

Dear Parent,

At **VTech**[®], we know how important the first day of school is for your child. To help prepare preschoolers for this important event, **VTech**[®] has developed the **Preschool Learning**[™] series of interactive toys.

Preschool Learning[™] features fun characters and inviting school themes that use technology to capture a child's attention and teach important preschool skills like spelling, counting and the alphabet. These vital skills are taught in a way that's both fun and highly engaging to maintain a child's interest. Children will also be introduced to fun school subjects such as art class, music class and even recess! With **Preschool Learning**[™], learning is fun from day one!

At **VTech**[®], we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting **VTech**[®] with the important job of helping your child learn and grow!


Sincerely,

Your friends at **VTech**[®]

To learn more about **Preschool Learning**[™] series and other **VTech**[®] toys, visit www.vtechkids.com

INTRODUCTION

Thank you for purchasing the VTech® Princess Magical SmartPhone™. Join Cinderella, Ariel, Snow White, Aurora and Rapunzel on a learning journey full of magic. Engaging games introduce age-appropriate curriculum including letters, numbers, counting, shapes, logic, music and more! Free play, calling and message functions allow little ones to pretend play. Classical style melodies and magical sounds add to the enjoyment.

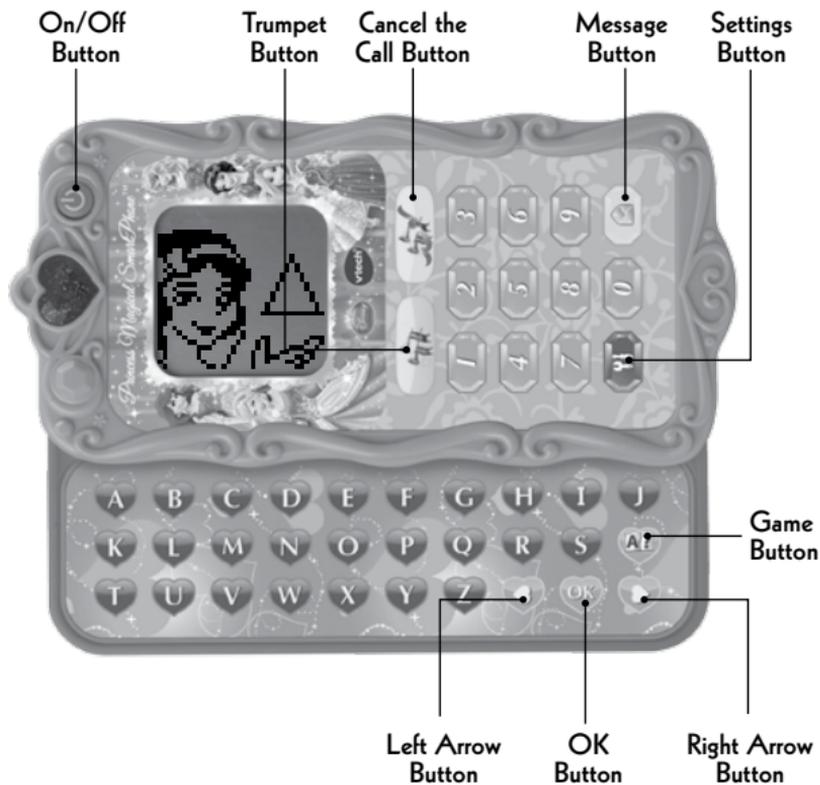

INCLUDED IN THIS PACKAGE

- One VTech® Princess Magical SmartPhone™
- One User's Manual

WARNING: All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.


ATTENTION: Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches et étiquettes. Ils ne font pas partie du jouet.

NOTE: Please keep user's manual as it contains important information.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is OFF.
2. Locate the battery cover on the back of the unit.
3. Use a screwdriver to open the battery cover.
4. Install 3 new "AAA" batteries into the compartment as illustrated. (The use of new, alkaline batteries is recommended for maximum performance.)
5. Replace the battery cover and tighten the screw to secure.

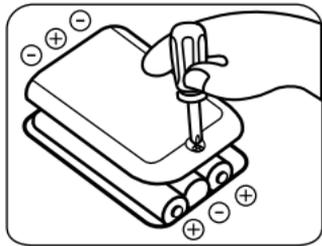

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.

- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

DEMO STRIP REMOVAL:

When the product is taken out of the packaging, please remove the demo strip from the unit to activate normal play mode.

PRODUCT FEATURES

The Princess Magical SmartPhone™ has two switchable modes of play.

FREE PLAY MODE

When the keyboard is closed, you can enjoy learning numbers and role-play fun with the princesses. Learn numbers and counting by pressing any Number Button. Discover more about the princesses by pressing the Message Button or press the Trumpet Button to make a call.

GAME MODE

Slide out the keyboard and press the Letter Buttons to learn letters. Press the Game Button to enjoy seven fun games that introduce letters, objects, shapes, logic and music.

1. ON/OFF BUTTON



To turn the unit ON, press the On/off Button. Press the On/off Button again to turn the unit OFF.

2. TRUMPET BUTTON



Press the Trumpet Button to make a call and receive a response from one of the princesses.

3. CANCEL THE CALL BUTTON



Press the Cancel the Call Button to cancel a call.

4. SETTINGS BUTTON

Slide out the keyboard to enter Game Mode and press the Settings Button to adjust the volume or screen contrast or to turn the background music on or off. There are five volume levels and three contrast levels to choose from. The Settings Button is invalid in Free Play Mode. The volume level is lower and can not be adjusted in Free Play Mode to protect your child's hearing.

5. MESSAGE BUTTON

Press the Message Button to receive a message and learn about the princesses. In Game Mode you can send a reply by answering yes or no.

6. NUMBER BUTTONS

Press the Number Buttons to learn numbers and counting.

7. GAME BUTTON

Press the Game Button to select a game to play.

8. ARROW BUTTONS

Press the Arrow Buttons to choose.

9. OK BUTTON

Press the OK Button to confirm your choice.

10. LETTER BUTTONS

Press the Letter Buttons to learn letters or to answer letter related questions.

11. AUTOMATIC SHUT-OFF

To preserve battery life, the unit will automatically turn off after several minutes of no input. The unit can be turned on again by pressing the On/off Button.

The unit will also automatically turn off when the batteries are very low. A warning will be displayed on the screen as a reminder to change the batteries.

ACTIVITIES

FREE PLAY MODE

Numbers

Learn numbers and counting by pressing the Number Buttons.

Letters

Learn letters by pressing the Letter Buttons.

Messages

Press the Message Button to learn about the princesses, and reply to the message by answering yes or no.

GAME MODE

Letter Bubbles

Cinderella is busy cleaning! Pop the letter bubbles to help her. Press a Letter Button to pop the corresponding bubble.

Gem Shapes

Help the seven dwarfs dig up the shape gems to learn shapes. Keep pressing the OK Button until a shape appears.

Picture Perfect

Rapunzel has drawn some pictures. Listen carefully then use the Arrow Buttons to find the requested picture, and then press the OK Button to confirm your choice.

Shadow Shells

Ariel has found some beautiful shells. Help Ariel match the shells with their shadows. Use the Arrow Buttons to choose, and then press the OK Button to confirm your choice.

Gift Trail

It's Aurora's birthday, but her gift is lost. There are three paths shown on the screen but only one path leads to the gift. Use the Arrow Buttons to choose the correct path, and then press the OK Button to confirm your choice.

Princess Challenge

It's time for a princess challenge! You will be asked a random question related to letters, numbers, objects, shapes or counting. To answer, use the Letter Buttons, Number Buttons. Or, use the Arrow Buttons to choose, and then press the OK Button to confirm your choice.

Music Time

Let's dance with the princesses! To select a melody, press a Number Button. Or, use the Arrow Buttons to choose, and then press the OK Button to confirm your choice.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on a hard surface and do not expose the unit to excess moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working, then please follow these steps:

1. Turn the unit OFF.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back ON. The unit should now be ready to play again.
5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

TECHNICAL SUPPORT

If you have a problem that cannot be solved by using this manual, we encourage you to visit us online or contact our Consumer Services Department with any problems and/or suggestions that you might have. A support representative will be happy to assist you. Before requesting support, please be ready to provide or include the information below:

- The name of your product or model number (the model number is typically located on the back or bottom of your product).
- The actual problem you are experiencing.
- The actions you took right before the problem started.

Internet: www.vtechkids.com

Phone: 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada

IMPORTANT NOTE:

Creating and developing VTech® Preschool Learning products is accompanied by a responsibility that we at VTech® take very seriously. We make every effort to ensure the accuracy of the information which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Copyright Notices

Copyright ©2013 VTech® Electronics North America, L.L.C. All Rights Reserved. VTech® and the VTech® logo are registered trademarks of VTech® Electronics North America, L.L.C. All other trademarks are property of their respective owners.