

vtech®

User's Manual



Disney
**Winnie
the
Pooh**

THE LEARNING TABLET

InnoTAB®

Dear Parent,

At **VTech**[®], we know how much you enjoy staying on top of the hottest trends and having the most high-tech gadgets around. We also know that your kids feel the same way. With that in mind, we developed **InnoTab**[®], a multi-function tablet just for kids that brings all the magic of Mom and Dad's tablets into a fun-filled learning experience that fits their active lifestyles.

InnoTab[®] is the next generation of learning toys for children that has a rich library of cartridges and software with interactive animated e-Books, learning games and creative activities along with a wide variety of additional apps. It features a brilliant color LCD touch screen, a tilt-sensor for game control, as well as a USB port for downloads, SD card slot for memory expansion and a headphone jack, all housed in a sleek, durable and compact design for easy portability.

When playing with **InnoTab**[®], kids can look, listen, touch, and tilt their way through activities to discover a world of fun whenever they want and wherever they go. Through interactive play, your child will develop skills in reading, math, social studies, science, music, creativity, and more—which we know is important to you.

At **VTech**[®], we are dedicated to helping your children uncover their talents. We thank you for your trust in our products that encourage active minds through imaginative play.

Sincerely,

Your friends at **VTech**[®]

To learn more about **VTech**[®] toys, visit www.vtechkids.com

INTRODUCTION

Join Winnie the Pooh, Tigger, Roo, and their friends in this learning adventure! Help Pooh find his honey pot and learn about shapes, colors, and opposites. Read a story about Tigger bouncing with his dearest friends, or sing along to four familiar tunes. By watching Roo and Piglet, you can also learn how to sign five different words in baby sign language. Whatever you choose to do, it will be a party with Pooh and his friends!

INCLUDED IN THIS PACKAGE

1 InnoTab® cartridge – Winnie the Pooh

1 InnoTab® cartridge user's manual

WARNING: All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy and should be discarded for your child's safety.

ATTENTION: Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches et étiquettes. Ils ne font pas partie du jouet.

Note: Please keep the user's manual as it contains important information.

GETTING STARTED

STEP 1: Insert the InnoTab® Cartridge

Make sure the unit is turned off. Insert the InnoTab® cartridge firmly down into the cartridge slot located on the back of the unit and push until it clicks into place as shown in the below image.



STEP 2: Select the Cartridge Icon

Touch the cartridge icon on the **InnoTab®** desktop.

Note: Your **InnoTab®** desktop may look slightly different from the image on the right, depending on which version of **InnoTab®** you own.

Cartridge icon



STEP 3: Choose How You Want to Play

Touch a picture to choose one of these fun activities:

Read Along: Read or listen to the interactive e-Book.

Play Along: Play four games that focus on specific learning skills.

Sing Along: Sing four fun songs with or without lyrics and voice accompaniment.

Baby Signs: Learn five baby sign language signs.



THE HARD KEYS



HOME

Exit the current activity and return to the **InnoTab®** desktop.



HELP BUTTON

Replay instructions or ask for a hint. Display help screens that guide parents on how to change the settings.

PARENTS' MENU

Drag down the parents' menu from the top center icon.

Photo Time*:

Take fun pictures with your baby and make collages.

Music Box:

Listen to four **Sing Along** songs in the music player. Set the timer for up to 30 minutes.

*Note: If your version of **InnoTab**® has a built-in camera, a camera activity will appear in the cartridge menu. If your version of **InnoTab**® does not have a built-in camera, this activity will not be available.

Music On/Off

To turn the background music on or off, touch the **Music On/Off** icon on the cartridge menu.



Music On/Off icon

ACTIVITIES

Read Along

Menu Page

In the menu page, you can change the following settings from the pull down menu in the top left corner:

- **Level:** Tap the level icon to toggle between level 1 and 2.
- **Auto Page Turn:** Turn on this function to automatically turn the pages after they are read.
- **Read to Me:** Turn on **Read to Me** mode to have the story read to you. Turn off **Read to Me** mode to read the story yourself.



Index Page (When Read to Me mode is off)

After turning off **Read to Me** mode, you can enter the **Index Page** by tapping on the storybook in the menu. Choose which page you want to read and progress at your own pace.



Story Page

In each **Story Page**, touch anywhere on the screen to stop the story narration and enter **Free Play**. When the story narration has finished, you will enter **Free Play** automatically.

In **Free Play**, you can touch the words one by one to read the story at your own pace or touch characters and objects to hear fun voices and sounds. If you don't touch the screen for a while and **Auto Page Turn** is on, the page will turn on its own and the story will continue.

Flick the screen left or right or press the left or right arrow to play the previous or next page.

To listen to the story narration again, touch the **Replay** icon  on the screen. If **Read to Me** mode is off, you can go back to the **Index Page** by tapping the **Index** icon  on the pull down menu.



Play Along

Winnie the Pooh is always hungry for honey. Help him find his honeypot and learn shapes, colors, opposites and more along the way.

In the menu page, you can change the level from the pull down menu in the top left corner.

Level: Tap the level icon to toggle between level 1 and 2.

Pooh's Colorful Picnic Party

Pooh has invited his friends to a picnic party, but they don't have all the things they need. Learn about colors by helping Pooh find fun and useful things for the party.

Curriculum: Colors



Pooh's Shape Adventure

Pooh is on a mission to get honey from a beehive at the top of a tree. As he floats toward the honey, he passes by different shaped clouds. Learn about shapes and how they exist in everyday objects.

Curriculum: Shapes



Eeyore's Missing Tail

Eeyore is sad because his tail is missing. Help Pooh find possible replacement tails for Eeyore. As each object is placed on Eeyore, learn a simple definition and how it is supposed to be used.

Curriculum: Vocabulary



Pooh's Honey Hunt

Pooh is hunting for his honeypot again. Search for his honeypot near pairs of opposites.

Curriculum: Opposites



Sing Along

Menu Page

In the **Menu Page**, you can change the following settings from the pull down menu in the top left corner:

- **Lyrics:** Tap on the **Lyrics** icon to turn the lyrics display on or off.
- **Sing To Me:** Turn on **Sing To Me** mode to hear fun songs sung by the narrator. Turn off **Sing To Me** mode to hear the songs play without the vocals.

Tap on one of the songs to start playing the music!



Sing Along Songs and Lyrics

A Party, A Party

Melody: A-Tisket, A-Tasket

A party, a party!
We're going to a party.
With red balloons and yellow hats,
And Pooh will share some honey.
Some honey,
Some honey,
Yes, Pooh will share some honey.
'Cause honey goes with everything and makes a party sunny.



Oh Dear, What Can the Matter Be?

Oh dear, what can the matter be?
Dear, dear, what can the matter be?
Oh dear, what can the matter be?
Poor Eeyore has lost his tail.



Girls and Boys Come Out To Play

Girls and boys, come out to play,
Pooh will float in the sky today.
Join with me as we all sing,
And watch Pooh soar through the sky on a string.
Come with a cheer, and come with a call,
Come with a smile, come one and all.
Pooh is certain that he won't fall,
The treats he finds will serve us all.



Merrily We Bounce Along

Melody: Merrily We Skip Along

Merrily we bounce along,

Bounce along, bounce along.

Merrily we bounce along,

Humming cheerfully!



Baby Signs

Menu Page

Tap on one of the pictures to start learning a baby sign or tap the **Play All** button to play all of the baby signs. You can learn the baby sign for:

- eat
- help
- hug
- hungry
- more



Photo Time

In this activity, you can take photos with your baby and create fun photo collages with Winnie the Pooh picture frames!

***NOTE:** If your version of **InnoTab®** has a built-in camera, a camera activity will appear in the cartridge menu. If your version of **InnoTab®** does not have a built-in camera, this activity will not be available.



Music Box

Use the pull down menu to set the timer. The four **Sing Along** songs will play in a loop for up to 30 minutes.



ONLINE FEATURES

Register online to keep track of your child's learning journey with personalized recommendations. You can also connect to our **Learning Lodge™** to download great apps, games, e-Books and more!

If you have not already installed the **InnoTab®** version of the **Learning Lodge™** software on your computer, go to www.vtechkids.com/download to download and install it.

CARE & MAINTENANCE

1. Keep the **InnoTab®** cartridge clean by wiping it with a slightly damp cloth. Never use solvents or abrasives.
2. Keep it out of direct sunlight and away from direct sources of heat.
3. Avoid dropping it. **NEVER** try to dismantle it.
4. Always keep the **InnoTab®** cartridge away from water.

WARNING

A very small percentage of the public, due to an existing condition, may experience epileptic seizures or momentary loss of consciousness when viewing certain types of flashing colors or patterns. While **InnoTab® The Learning Tablet** does not contribute to any additional risks, we do recommend that parents supervise their children while they play video games. If your child experiences dizziness, altered vision, disorientation or convulsions, discontinue use immediately and consult your physician. Please note that focusing on an LCD screen at close range and handling video game controls for a prolonged period of time may cause fatigue or discomfort. We recommend that children take a 15-minute break for every hour of play.

TROUBLESHOOTING

Please note that if you try to insert or remove an **InnoTab®** cartridge without first turning the unit **OFF**, you may experience a malfunction. If this happens and the unit does not respond to pressing the **ON/OFF** button, disconnect the AC adaptor from the main unit or remove the batteries. Then, reconnect the adaptor, or reinstall the batteries.

TECHNICAL SUPPORT

If you have a problem that cannot be solved by using this manual, we encourage you to visit us online or contact our Consumer Services Department with any problems and/or suggestions that you might have. A support representative will be happy to assist you.

Before requesting support, please be ready to provide or include the information below:

- The name of your product or model number (the model number is typically located on the back or bottom of your product).
- The actual problem you are experiencing.
- The actions you took right before the problem started.

Internet: www.vtechkids.com

Phone: 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada

COPYRIGHT NOTICES

© 2014 VTech. All Rights Reserved. **Learning Lodge™**, **InnoTab®**, **VTECH®** and the **VTECH®** logo are trademarks of VTech. All other trademarks are property of their respective owners.

IMPORTANT NOTE:

Creating and developing **InnoTab® The Learning Tablet** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information that forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

OTHER INFO

DISCLAIMER AND LIMITATION OF LIABILITY

VTech® Electronics North America, L.L.C. and its suppliers assume no responsibility for any damage or loss resulting from the use of this handbook. **VTech**® Electronics North America, L.L.C. and its suppliers assume no responsibility for any loss or claims by third parties that may arise through the use of this software. **VTech**® Electronics North America, L.L.C. and its suppliers assume no responsibility for any damage or loss caused by deletion of data as a result of malfunction, dead battery or repairs. Be sure to make backup copies of important data on other media to protect against data loss.

COMPANY : **VTech**® Electronics North America, L.L.C.

ADDRESS : 1156 W. Shure Drive, Suite 200, Arlington Heights, IL 60004 USA

TEL NO.: 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada

NOTE:

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAN ICES-3 (B)/NMB-3(B)

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.