

vtech[®]

User's Manual

Pour & Float Froggy™



© 2012 VTech
Printed in China
91-002702-007^{US}

Dear Parent,

*Ever notice the look on your baby's face when they learn something new through their own discovery? These self-accomplished moments are a parent's greatest reward. To help fulfill them, VTech® created the **Infant Learning**® series of toys.*

*These unique interactive learning toys directly respond to what children do naturally – play! Using innovative technology, these toys react to baby's interactions, making each play experience fun and unique as they learn age-appropriate concepts like first words, numbers, shapes, colors and music. More importantly, VTech®'s **Infant Learning**® toys develop baby's mental and physical abilities by inspiring, engaging and teaching.*

At VTech®, we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting VTech® with the important job of helping your child learn and grow!

Sincerely,

Your friends at VTech®

*To learn more about the **Infant Learning**® series and other VTech® toys, visit www.vtechkids.com*

INTRODUCTION

Thank you for purchasing the **VTech® Pour & Float Froggy™!**

The **Pour & Float Froggy™** is full of surprises! This little guy has three accessory cups that can be both stacked and nested on the froggy's tummy or be used to pour water over the spinner or into his mouth. The light-up flower on the froggy's tummy will teach numbers as well as play fun phrases, sounds and music. With its special sensors, the froggy knows when it has been taken out of the water and will play a variety of fun phrases to encourage little ones to put it back into the water. Bath time has never been so much fun!

WATER SENSOR

WATERSPOUT



ON/OFF BUTTON

LIGHT-UP FLOWER
BUTTON

STACKING CUPS

INCLUDED IN THIS PACKAGE

- One VTech® Pour & Float Froggy™
- Three accessory cups
- One user's manual

WARNING:

All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

ATTENTION :

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches et étiquettes. Ils ne font pas partie du jouet.


NOTE:

Please keep instruction manual as it contains important information.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit. Use a screwdriver to loosen the screw.
3. Install 3 new 'AA' (LR6/AM-3) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance).
4. Replace the battery cover and tighten the screw to secure.
5. When closing the battery cover, ensure that the screw is tightened securely to avoid water leakage.

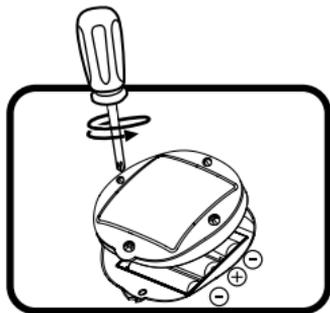

BATTERY NOTICE

- The use of new alkaline batteries is recommended for maximum performance.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged (if removable).
- Do not use damaged batteries.
- Rechargeable batteries are only to be charged under adult supervision (if removable).
- Do not mix old and new batteries.
- Do not mix batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- The toy is not to be connected to more than the recommended number of power supplies.
- Do not dispose of batteries in fire.


PRODUCT FEATURES

1. ON/OFF BUTTON

To turn the unit **ON**, press the **ON/OFF BUTTON**. To turn the unit **OFF**, press the **ON/OFF BUTTON** a second time.

2. AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech® Pour & Float Froggy™** will automatically power-down after approximately 60 seconds without input. The unit can be turned on again by pressing the on/off button or the light-up button.

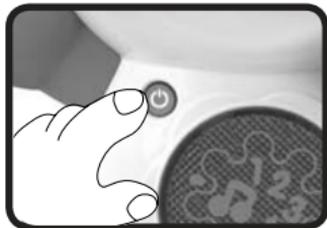


WARNING:


- Batteries must be changed by an adult.
- Only use this product in water between 10 and 45 degrees celsius, 50 and 104 degrees Fahrenheit.
- This product cannot be used in salt water.
- Do not leave this product submerged in water for a long period of time.
- This product should only be operated in water when fully assembled in accordance with the instructions.
- To prevent drowning, never leave a child unattended in the bath.
- Use a thermometer to check the temperature of the water before sitting a child in the bath. Toddlers have very sensitive skin and can burn easily if the water is too hot.
- When finished playing, remove the unit from the water and pour out any remaining water. Rinse the unit with clean water and wipe with a dry cloth. Suspend the unit in an upright position to dry.

ACTIVITIES

1. Press the **on/off button** to turn the unit on. You will hear a fun song, a fun phrase, sound effects and music. The light will flash with the sound and water will spray from the froggy's mouth when placed in the water.

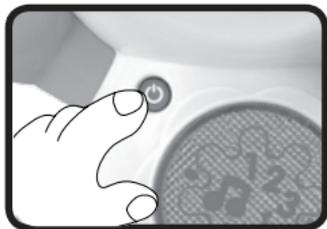

2. Press the **light-up button** to hear fun sounds, spoken phrases and melodies. The light will flash with the sound and water will spray from the froggy's mouth when placed in the water.
3. Place the froggy in the water to hear a variety of fun sounds, spoken phrases and melodies with a variety of spray patterns. When the froggy is removed from the water, you will hear a variety of phrases, sounds and melodies. The light will flash with the sound.
4. Pour water into the water sensor in the froggy's mouth for a fun squirting surprise. The light will flash with the sound.

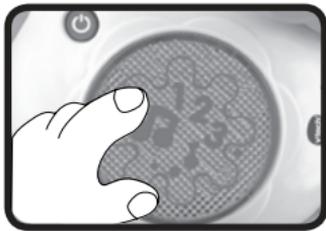

MELODY LIST

1. Froggy Went a Courtin'
2. My Bonnie Lies Over the Ocean
3. Shenandoah
4. Row, Row, Row Your Boat
5. Animal Fair
6. Are You Sleeping
7. Jack and Jill
8. Mary, Mary Quite Contrary
9. Cockles and Mussels
10. Way Down Upon the Swanee River
11. Yankee Doodle

12. London Bridge
13. Little Miss Muffet
14. Polly Wolly Doodle
15. Bicycle Built for Two
16. Polly Put the Kettle On
17. Twinkle, Twinkle Little Star
18. Bear Went Over the Mountain
19. Aiken Drum

SUNG SONG LYRICS

SONG 1

I'm a little green frog,
Who likes to play.
I splish and splash,
In the water all day!

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Make sure to empty the water out of all the elements of the unit and rinse thoroughly before drying so no sediment or cleaning products are left on the unit.
4. Make sure to dry all the elements of the unit before storing.
5. Remove the batteries when the unit will not be in use for an extended period of time.
6. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

For information on this product's warranty, please call **VTech®** at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada.

IMPORTANT NOTE:

Creating and developing **Infant Learning** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S., or 1-877-352-8697 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television

reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

THIS CLASS B DIGITAL APPARATUS COMPLIES WITH CANADIAN ICES-003.
CET APPAREIL NUMÉRIQUE DE LA CLASSE B EST CONFORME À LA NORME NMB-003 DU CANADA.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

