

vtech®

Instruction Manual

# Storytime With Sunny™



## INTRODUCTION

Thank you for purchasing the **Storytime With Sunny™** toy!  
Get ready to experience a new kind of companion who tells stories, jokes and more.



## INCLUDED IN THE PACKAGE

- **Storytime With Sunny™**
- 4 Activity Disks
- Disk Rack
- Quick Start Guide

### WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

### NOTE

Please save this Instruction Manual as it contains important information.


### ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes et vis d'emballage. Ils ne font pas partie du jouet.


### NOTE

Il est conseillé de sauvegarder ce manuel d'instructions car il comporte des informations importantes.

## Unlock the Packaging Locks

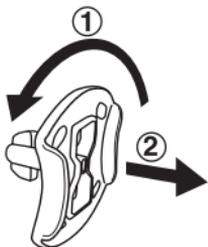

- ① Rotate the packaging locks 90 degrees counterclockwise.
- ② Pull out the packaging locks and discard.

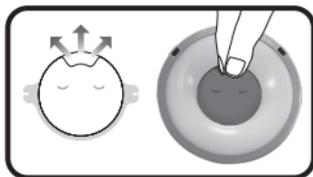


Remove Sunny's protective cover by pulling upwards.

## GETTING STARTED

### Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the bottom of the unit, use a screwdriver to loosen the screws, and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 6 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screws to secure.

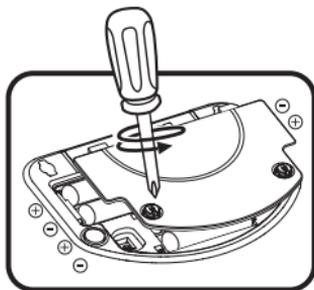

### WARNING:

Adult assembly required for battery installation.  
Keep batteries out of reach of children.



### ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.  
Tenir les piles ou accumulateurs hors de portée des enfants.

## TO EXIT DEMO MODE

To exit Demo mode, insert a disk on the base and press the **Power Button**. **Storytime With Sunny™** will then be ready to play!

## IMPORTANT: BATTERY INFORMATION


- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

### RECHARGEABLE BATTERIES:

- Remove rechargeable batteries (if removable) from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

# PRODUCT FEATURES

## Hardware Input Responses

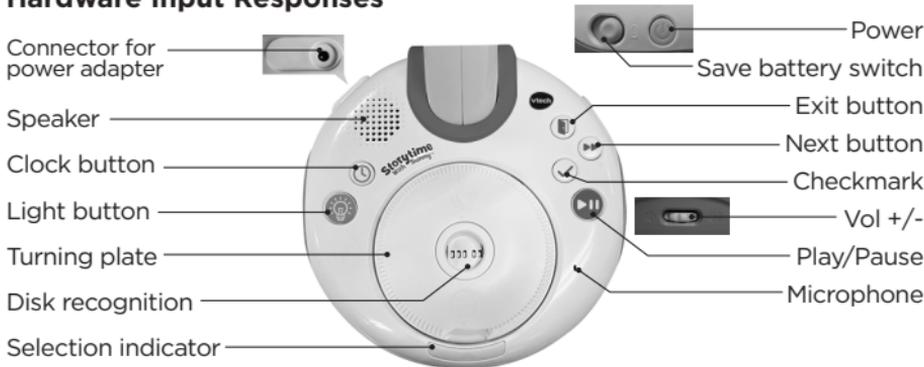

### 1. Power Button

Press the **Power Button** to wake up Sunny.

### 2. Save Battery Switch

Toggle the **Save Battery Switch** to play activities without movements.

### 3. Light Button

Press 1 time to turn on the light on Sunny's face.

Press 2 times to turn on the the light on Sunny's face and the ring around it.

Press 3 times to turn off the light.

### 4. Clock Button

Press the **Clock Button** to display the time if the time has previously been set.

#### Setting the Time

1. Press and hold the **Clock Button** and **Play Button** together until the time menu is activated, or about 5 seconds.
2. The hour section is active by default. The selection goes from 1 to 12. To select the hour, rotate the turning plate clockwise or counterclockwise until the desired hour appears.
3. Press the **Next Button** to toggle between the hour section and the minute section.
4. Minutes go from 00 to 59. To select the minutes, rotate the turning plate until the desired number of minutes appears.
5. To confirm the time, press the **Checkmark**.

## Setting the Alarm Clock

1. Press the **Clock Button** and **Checkmark** together until the alarm menu is activated, or about 5 seconds.
2. Use the steps for setting the hour and minutes as described in the Setting the Time section above.
3. To confirm the alarm, press the **Checkmark**.  
The alarm bell icon  will be present when the **Clock Button** is pressed to indicate an alarm is set.

## How to Disable or Change the Alarm Clock

1. Press the **Clock Button** and **Checkmark** together until the alarm menu is activated, or about 5 seconds.
2. The previously set alarm time will flash on Sunny's face.
3. To disable the previously set alarm time, press the **Clock Button**.
4. To change the previously set alarm time, follow steps 2 to 5 of the Setting the Time section above.
5. To keep the previously set alarm time, press the **Exit Button**.

## Time to Wake Up

Before the alarm clock rings, Sunny's light turns on to indicate that it is almost time to wake up.

- 10 minutes before the alarm rings, her face lights up.
- 5 minutes before the alarm rings, both her face and light ring light up.

## 5. Play/Pause Button

Press the **Play/Pause Button** to start or pause the selected activity.

## 6. Next Button

Press the **Next Button** to skip an activity that is currently playing. Continuously press the **Next Button** to cycle through the activities of the selected category.

## 7. Checkmark

Press the **Checkmark** when prompted in an activity to answer questions and interact with Sunny.

## 8. Exit Button

Press the **Exit Button** to stop and exit an activity.

## 9. Power Adapter

In addition to being battery powered, **Storytime With Sunny™** can be connected to a wall outlet via power adapter (not included). The power adapter does not charge the toy. If there are no batteries installed in the unit, it will only be playable when the toy is plugged in.

## 10. Motion Sensors

Some activities use **Motion Sensors** to detect the player's movements. For optimal performance of the **Sensors**, it is best to move away from direct light (sunlight or indoor light).

Motion  
sensors



## 11. Microphone

Some activities use the **Microphone** to detect sounds such as clapping. For optimal performance of the **Microphone**, it is best to be in close proximity to Sunny.

## 12. Automatic Shut-Off

To preserve battery life, **Storytime With Sunny™** will automatically shut off after approximately 5 minutes without input. The unit can be turned on again by pressing the **Play Button** or **Power Button**.

### NOTE

If the unit powers down or if the light fades out during play, please install a new set of batteries.



## Connecting the Adapter (Not Included)

- Make sure the unit is turned **Off**.
- Connect the adapter to the Power Adapter Port of the unit.
- Plug the adapter into a power socket.

Note: The use of an adapter will override the batteries.

### Safety Information When Using Power Supply for Toys

- VTech recommends a power supply (AC/DC adapter) of the below specification:
- This toy shall only be used with a power supply for toys with output DC 5V.
- The power supply is not a toy.
- The toy is not intended for children under 3 years old.
- Do not connect the toy to more than the recommended number of power supplies.
- Never clean a plugged-in toy with liquid.
- As with all electrical products, precautions should be used and observed during handling and use to prevent electric shock.
- Do not leave the toy plugged in for extended periods of time.
- Please examine the power supply periodically for conditions that may result in the risk of fire, electric shock, or injury to persons (such as damage to the supply cord, output cord, plug, blades, housing, or other parts) and that, in the event of such conditions, the power supply should be discarded.
- Power supplies for toys are not intended to be used as toys, and the use of these products by children shall be under the full supervision of parents.

### AC Adapter Electrical Ratings:

Input: ~ 120VAC, 60Hz (for US); ~ 230VAC, 50Hz (for UK or EU);  
~ 240VAC, 50Hz (for AS/NZL)

Output:  DC 5V, 1.5A, 7.5VA

## CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.
5. Yanking or pulling on the mechanical arm may cause damage to the product.

## TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

### **IMPORTANT NOTE:**

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S., **1-877-352-8697** in Canada, or by going to our website **vtechkids.com** and filling out our **Contact Us** form located under the **Customer Support** link. Creating and developing VTech products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

## NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

## CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### **Supplier's Declaration of Conformity 47 CFR § 2.1077 Compliance Information**

Trade Name:	VTech®
Model:	5462
Product name:	Storytime With Sunny™
Responsible Party:	VTech Electronics North America, L.L.C.
Address:	1156 W. Shure Drive, Suite 200, Arlington Heights, IL 60004
Website:	vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:  
(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND  
(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

CAN ICES-003(B)/NMB-003(B)

**Visit our website for more  
information about our products,  
downloads, resources and more.**

***vtechkids.com***  
***vtechkids.ca***

Read our complete warranty policy online at  
***vtechkids.com/warranty***  
***vtechkids.ca/warranty***

