

**vtech**<sup>®</sup>

**User's Manual**

# **Pull & Learn Alligator<sup>™</sup>**



© 2016 VTech  
All rights reserved  
**Printed in China**  
91-003221-000 (US)

Dear Parent,

At **VTech**®, we know how important the first day of school is for your child. To help prepare preschoolers for this important event, **VTech**® has developed the **Preschool Learning**™ series of interactive toys.

**Preschool Learning**™ features fun characters and inviting school themes that use technology to capture a child's attention and teach important preschool skills like spelling, counting and the alphabet. These vital skills are taught in a way that's both fun and highly engaging to maintain a child's interest. Children will also be introduced to fun school subjects such as art class, music class and even recess! With **Preschool Learning**™, learning is fun from day one!

At **VTech**®, we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting **VTech**® with the important job of helping your child learn and grow!


Sincerely,

Your friends at **VTech**®

To learn more about **VTech**® toys, visit [vtechkids.com](http://vtechkids.com)

# INTRODUCTION

Thank you for purchasing the **VTech® Pull & Learn Alligator™**. The **Pull & Learn Alligator™** features five interactive activities that introduce animals, objects, letters, phonics and more. You can also press the letter buttons to hear 26 melodies and sound effects. Push or pull the alligator to see his head move and hear cheerful songs.

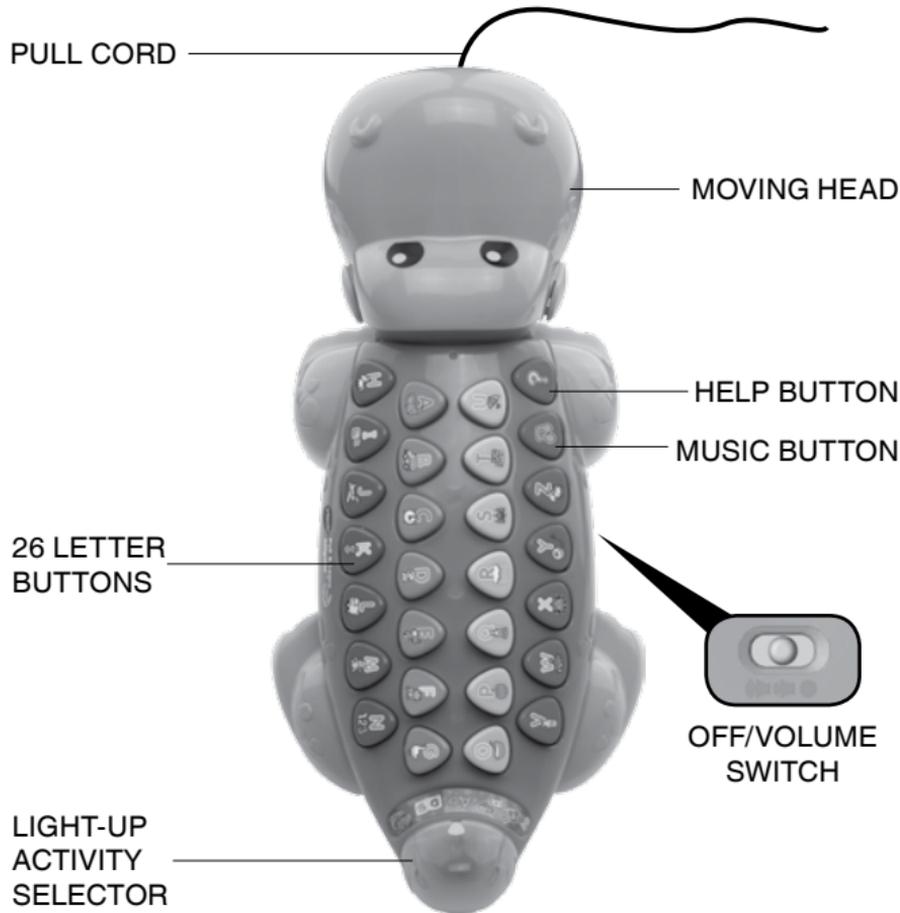

# INCLUDED IN THIS PACKAGE

- One VTech® Pull & Learn Alligator™
- User's manual

## WARNING:

All packing materials such as tape, plastic sheets, packaging locks, wire ties and tags are not part of this toy, and should be discarded for your child's safety.

## ATTENTION:


Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches et étiquettes. Ils ne font pas partie du jouet.

## NOTE:

Please keep this user's manual as it contains important information.

## Unlock the packaging lock:


- ① Rotate the packaging lock counterclockwise 90 degrees.
- ② Pull out and discard the packaging lock.

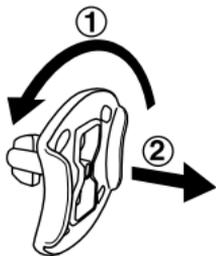

# GETTING STARTED

## BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit.
3. Use a coin or screwdriver to loosen the screw and open the battery cover.
4. Install 2 new “AA” (AM3/LR6) batteries into the battery box as illustrated (The use of new, alkaline batteries is recommended for maximum performance.)
5. Replace the battery cover and tighten the screw to secure.

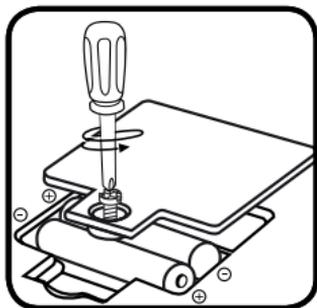


## BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

# PRODUCT FEATURES

## 1. OFF/VOLUME SWITCH

To turn the unit **ON** or adjust the volume, slide the switch to the **LOW** or **HIGH** position. To turn the unit **OFF**, slide the switch to **OFF**.

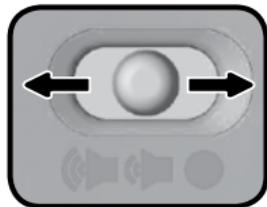


## 2. ACTIVITY SELECTOR

Turn the **ACTIVITY SELECTOR** to choose from five activities. The selector will flash with voice responses and melodies.




## 3. 26 LETTER BUTTONS

Press the **LETTER BUTTONS** to learn letters, phonics, and facts, play music, or answer the questions in related activities.

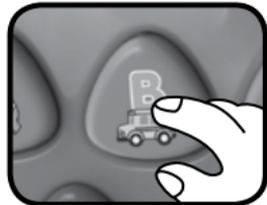

## 4. MUSIC BUTTON

Press the **MUSIC BUTTON** at any time to hear fun songs and watch the light flash. The alligator will play three songs.

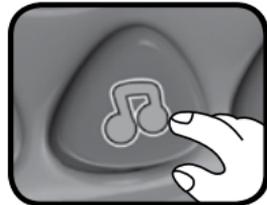

## 5. HELP BUTTON

Press the **HELP BUTTON** to repeat the current question or hear a helpful hint.



## 6. PULL CORD

Pull the adorable alligator around to see his head move or to hear cheerful songs.

The **PULL CORD** can be stored inside the battery compartment.

For your child's safety we suggest you store the **PULL CORD** in the compartment until your child is walking and to supervise your child when playing with the **PULL CORD**.



## 7. AUTOMATIC SHUT-OFF

To preserve battery life, the **Pull & Learn Alligator™** will shut off automatically after several minutes without input. The unit can be turned on again by turning the **ACTIVITY SELECTOR** to any activity.

# TO BEGIN PLAY

Slide the **OFF/VOLUME SWITCH** to the **LOW** or **HIGH** position to turn on the unit, then turn the **ACTIVITY SELECTOR** to select an activity to play.

## ACTIVITIES

### Activity 1: Letters and Phonics



Turn the **ACTIVITY SELECTOR** to **Letters and Phonics** to enter this activity. Press any **LETTER BUTTON** to learn about letters and their sounds.

### Activity 2: Fun Facts



Turn the **ACTIVITY SELECTOR** to **Fun Facts** to enter this activity. Press any **LETTER BUTTON** to learn facts about people, animals and objects.

### Activity 3: Quiz Mode



Turn the **ACTIVITY SELECTOR** to **Quiz Mode** to enter this activity. The unit will ask a series of questions about letters, phonics, facts and more. Press a **LETTER BUTTON** to answer. When you have answered 5 questions correctly, you will progress to the next level. There are a total of 4 levels to play:

Level 1: Find the letter.

Level 2: Find the person, animal or object.

Level 3: Find the phonics.

Level 4: Find the person, animal or object according to its fun fact.

### Activity 4: Silly Sentences



Turn the **ACTIVITY SELECTOR** to **Silly Sentences** to enter this activity. Press any **LETTER BUTTON** to hear silly sentences.

## Activity 5: Music Fun

Turn the **ACTIVITY SELECTOR** to **Music Fun** to enter this activity.  
Press any of the **LETTER BUTTONS** to hear fun melodies.

### SONG LIST:

#### Song 1

Sing, sing, sing, with me  
Learn our ABCs  
Learning, singing, dancing, swimming,  
Make me happy!

#### Song 2

A B C D E F G  
H I J K L M N O P  
Q R S T U V W X  
Y and Z  
Now I know my ABCs  
Next time won't you sing with me?

#### Song 3

Oh I love to learn and I love to play  
Play the alphabet game all the day  
Learn that alligator begins with A  
Play the alphabet game all the day

# CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

# TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the unit still does not work, replace with a set of new batteries.

## **IMPORTANT NOTE:**

Creating and developing **VTech**<sup>®</sup> products is accompanied by a responsibility that we at **VTech**<sup>®</sup> take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our web site at [www.vtechkids.com](http://www.vtechkids.com) and filling out our Contact Us form located under the Customer Support link with any problems and/or suggestions that you might have. A service representative will be happy to help you.

## NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Caution:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

*CAN ICES-3 (B)/NMB-3(B)*



## PRODUCT WARRANTY

This Warranty is applicable only to the original purchaser, is non-transferable and applies only to "VTech" products or parts. This product is covered by a 3-month Warranty from the original purchase date, under normal use and service, against defective workmanship and materials. This Warranty does not apply to (a) consumable parts, such as batteries; (b) cosmetic damage, including but not limited to scratches and dents; (c) damage caused by use with non-VTech products; (d) damage caused by accident, misuse, unreasonable use, immersion in water, neglect, abuse, battery leakage, or improper installation, improper service, or other external causes; (e) damage caused by operating the product outside the permitted or intended uses described by VTech in the owner's manual; (f) a product or part that has been modified (g) defects caused by normal wear and tear or otherwise due to the normal aging of the product; or (h) if any VTech serial number has been removed or defaced.

Prior to returning a product for any reason, please notify the VTech Consumer Services Department by going to our web site at [www.vtechkids.com](http://www.vtechkids.com), filling out our Contact Us form located under the Customer Support link or calling 1-800-521-2010.

If the service representative is unable to resolve the issue, you will be provided instructions on how to return the product and have it replaced under Warranty. Return of the product under Warranty must adhere to the following rules: If VTech believes that there may be a defect in the materials or workmanship of the product and can confirm the purchase date and location of the product, we will at our discretion replace the product with a new unit or product of comparable value. A replacement product or parts assumes the remaining Warranty of the original product or 30 days from the date of replacement, whichever provides longer coverage.

**THIS WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL, WRITTEN, STATUTORY, EXPRESS OR IMPLIED. IF VTECH CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY AND TO THE REPLACEMENT SERVICE AS DETERMINED BY VTECH IN ITS SOLE DISCRETION.**

To the extent permitted by law, VTech will not be responsible for direct, special, incidental or consequential damages resulting from any breach of Warranty.

This Warranty is not intended to persons or entities outside the United States of America. Any disputes resulting from this Warranty shall be subject to the final and conclusive determination of VTech.