

vtech®

User's Manual



TOUCH LEARNING SYSTEM

MobiGo™



Tangled



Disney elements © Disney

Dear Parent,

At **VTech**®, we know how much you enjoy staying on top of the hottest trends and having the most high-tech gadgets around. We also know that your kids feel the same way. With that in mind, we developed **MobiGo**™, a revolutionary way to make learning fun with touch!

MobiGo™ is the next generation of learning. Kids can control how they play, and develop the skills of using touch applications. As kids tap, flick, spin, and drag their way through exciting learning games, they'll experience the same technology and fun as parents do with their touch-screen devices.

When playing with **MobiGo**™, kids can look at, listen to and touch the screen wherever they go to discover a world of fun, while developing knowledge of numbers, letters, spelling, and music which we know is important to you. Learning on the go is now easier than ever with **MobiGo**™.

At **VTech**®, we are dedicated to helping your children uncover their talents. We thank you for your trust in our products that encourage active minds through imaginative play.

Sincerely,

Your friends at **VTech**®

To learn more about **MobiGo**™ and other **VTech**® toys, visit www.vtechkids.com

INTRODUCTION

Rapunzel has been locked in her tower for a very long time. When Flynn Rider climbs through her window, it's time for an adventure. Join Rapunzel and Flynn as they explore the kingdom and watch the floating lights. It's Rapunzel's dream come true!

GETTING STARTED



Insert the cartridge

Make sure the unit is turned off. Insert the MobiGo™ cartridge with the label side facing up, and push it until it clicks into place. Press the ON button to turn on MobiGo™.

User Profile

Personalize your MobiGo™ by entering your name and creating a user profile. The profile stores your progress and high score information, which can then be uploaded to the web. However, only one user profile can be stored at a time. Other users can still play the MobiGo™ by touching the guest icon on the profile screen, but their records will not be saved.

To select your user profile, touch your name on the profile screen. To change the profile name, touch the ABC button.

Basic Operation

The easiest and most common way to play with your MobiGo™ is by using the touch screen. However, there are also a few important hard keys that you'll need to use from time to time.

The Hard Keys

Exit Button

During a game, press this button to exit the game, or press it within a menu to go back to the previous screen.

Help Button

Press this button when you need help in a game.

QWERTY Keyboard

Slide the screen up to reveal the keyboard. Use it to enter your name in the user profile or to give the answers in some letter-related games.

The Touch Screen

The Main Menu

When a cartridge is plugged in, the main menu will appear, showing all of the available games plus the Options icon. Touch a game to select it.



Options

Select Options from the main menu to turn the background music on or off.

ACTIVITIES

Level

Choose Easy or Difficult level before each game.



Tower Painting

Rapunzel loves to paint. It's one of her favorite things to do. You can paint the murals in Rapunzel's tower too!

Flick left or right to view the murals, and tap a mural to paint it. Tap the cup to change your color. Rub an object to fill it in. When you're finished, tap the check mark to go back to the gallery.

Some murals are hidden. When you've finished painting all the murals, the hidden murals will be displayed one-by-one.



Curriculum: Creativity

Tangled in the Market

Rapunzel and Flynn want to explore the kingdom's marketplace, but Rapunzel's hair keeps getting caught.

Help Rapunzel and Flynn get to the different shops - and then to the little girls who will braid Rapunzel's hair - by figuring out which obstacles Flynn needs to move. Tap the location where you want Flynn to go. Then, touch the obstacle and drag your finger in the direction you want to move it.

After the little girls braid Rapunzel's hair, help decorate the braid! Touch a flower and put it in Rapunzel's hair. Touch the check mark when you're done.

Curriculum: Problem Solving



Pascal's Letters

While Rapunzel and Flynn read in the bookstore, Pascal wants to explore by himself. Watch where he goes and guess the letter on the book cover, or the beginning letter of the word.

Use the keyboard to play. Press the correct letter on the keyboard to answer.

Curriculum: Letters, Vocabulary



Let the Dance Begin!

Rapunzel and Flynn see townspeople dancing. Rapunzel wants to dance too!

Watch the dancers and remember the path they follow. Then, touch the screen and move your finger to repeat the dance.

Curriculum: Memory



The Lanterns

On her birthday, Rapunzel's dream has finally come true. She watches the floating lights on a gondola with Flynn.

Keep the lanterns of the right color in the air. Flick the lanterns up to make them fly higher.

Curriculum: Colors



WEB CONNECTIVITY

Connect **MobiGo™** to the internet to download new games and follow your child's learning progress online. Refer to the **MobiGo™** console manual for connection details.

CARE & MAINTENANCE

1. Keep your **MobiGo™** clean by wiping it with a slightly damp cloth. Never use solvents or abrasives.
2. Keep it out of direct sunlight and away from direct sources of heat.
3. Remove the batteries when not using it for an extended period of time.
4. Avoid dropping it. NEVER try to dismantle it.
5. Always keep **MobiGo™** away from water.

WARNING

A very small percentage of the public, due to an existing condition, may experience epileptic seizures or momentary loss of consciousness when viewing certain types of flashing colors or patterns. While the **MobiGo™ Touch Learning System** does not contribute to any additional risks, we do recommend that parents supervise their children while they play video games. If your child experiences dizziness, altered vision, disorientation, or convulsions, discontinue use immediately and consult your physician. Please note that focusing on an LCD screen at close range and handling directional pad controls for a prolonged period of time may cause fatigue or discomfort. We recommend that children take a 15 minute break for every hour of play.

WARNING: All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

ATTENTION : pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches et étiquettes. Ils ne font pas partie du jouet.

Note: Please keep the user's manual as it contains important information.

TROUBLESHOOTING

Please note that if you try to insert or remove a MobiGo™ cartridge without first turning the unit **OFF**, you may experience a malfunction. If this happens, and the unit does not respond to pressing the **ON/OFF** buttons, disconnect the AC adaptor from the main unit or remove the batteries. Then, reconnect the adaptor, or reinstall the batteries.

TECHNICAL SUPPORT

If you have a problem that cannot be solved by using this manual, we encourage you to visit us online or contact our Consumer Services Department with any problems and/or suggestions that you might have. A support representative will be happy to assist you.

Before requesting support, please be ready to provide or include the information below:

- The name of your product or model number (the model number is typically located on the back or bottom of your product).
- The actual problem you are experiencing.
- The actions you took right before the problem started.

Internet: www.vtechkids.com

Phone: 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada

COPYRIGHT NOTICES

Copyright 2010 **VTech**® Electronics North America, L.L.C. All Rights Reserved. **VTech**® and the **VTech**® logo are registered trademarks of **VTech**®. **MobiGo**™ is trademark of **VTech**® Electronics North America, L.L.C. All other trademarks are property of their respective owners.

IMPORTANT NOTE:

Creating and developing **MobiGo**™ **Touch Learning System** products is accompanied by a responsibility that we at **VTech**® take very seriously. We make every effort to ensure the accuracy of the information that forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

DISCLAIMER AND LIMITATION OF LIABILITY

VTech® Electronics North America, L.L.C. and its suppliers assume no responsibility for any damage or loss resulting from the use of this handbook.

VTech® Electronics North America, L.L.C. and its suppliers assume no responsibility for any loss or claims by third parties that may arise through the use of this software. **VTech**® Electronics North America, L.L.C. and its suppliers assume no responsibility for any damage or loss caused by deletion of data as a result of malfunction, dead battery, or repairs. Be sure to make backup copies of important data on other media to protect against data loss.

COMPANY : **VTech**® Electronics North America, L.L.C.

ADDRESS : 1155 West Dundee Rd, Suite 130, Arlington Heights, IL 60004 USA

TEL NO.: 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada

NOTE:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This Class B digital apparatus complies with Canadian ices-003.

Cet appareil numérique de la classe b est conforme à la norme nmb-003 du Canada.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

