

**vtech**<sup>®</sup>

**User's Manual**

# **Swim & Spray Musical Orca<sup>™</sup>**



© 2016 VTech  
All rights reserved  
**Printed in China**  
91-003214-010 ©

Dear Parent,

Ever notice the look on your baby's face when they learn something new through their own discovery? These self-accomplished moments are a parent's greatest reward. To help fulfill them, **VTech**<sup>®</sup> created the **Infant Learning**<sup>®</sup> series of toys.

These unique interactive learning toys directly respond to what children do naturally – play! Using innovative technology, these toys react to baby's interactions, making each play experience fun and unique as they learn age-appropriate concepts like first words, numbers, shapes, colors and music. More importantly, **VTech**<sup>®</sup>'s **Infant Learning**<sup>®</sup> toys develop baby's mental and physical abilities by inspiring, engaging and teaching.

At **VTech**<sup>®</sup>, we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting **VTech**<sup>®</sup> with the important job of helping your child learn and grow!

Sincerely,

 
Your friends at **VTech**<sup>®</sup>

To learn more about the **VTech**<sup>®</sup> toys, visit [vtechkids.com](http://vtechkids.com)

# INTRODUCTION

Thank you for purchasing the **VTech® Swim & Spray Musical Orca™** learning toy.

The **VTech® Swim & Spray Musical Orca™** is a playful bath toy that likes to spray water. Twist the starfish to activate fun sounds, phrases and music. Pour water on the orca or dive the orca under the water for fun responses and see the water spray out of the snorkel.

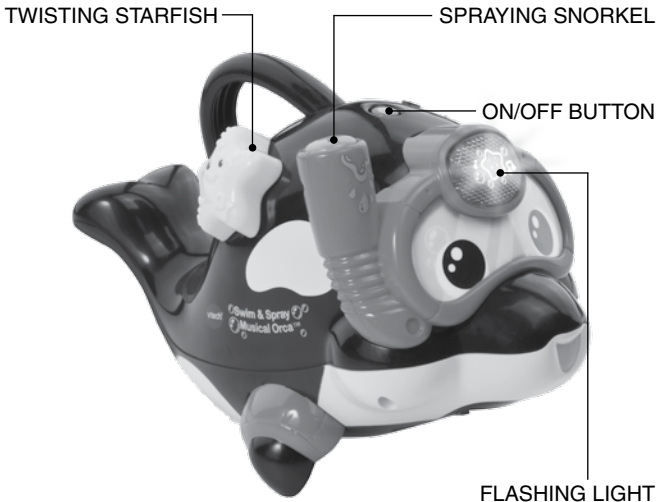

# INCLUDED IN THIS PACKAGE

- One VTech® Swim & Spray Musical Orca™ learning toy
- One user's manual

## WARNING:

All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

 
## ATTENTION:

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches et étiquettes. Ils ne font pas partie du jouet.

## NOTE:

Please keep user's manual as it contains important information.

Unlock the packaging locks:

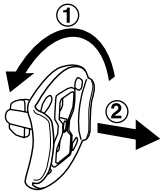


- ① Rotate the packaging locks 90 degrees counter-clockwise.
- ② Pull out the packaging locks.

# GETTING STARTED
 
## BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit. Use a screwdriver to loosen the screw.
3. Install 3 new 'AA' (AM-3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure.
5. When closing the battery cover ensure that the screw is securely tightened. This will avoid any water leakage.

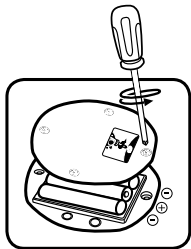

## BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

With the **VTech® Swim & Spray Musical Orca™**, safety comes first. To ensure your child's safety, please ensure the battery cover is securely locked into position to avoid injury.

**WE DO NOT RECOMMEND THE USE OF RECHARGEABLE BATTERIES.**

 
## WARNING:

- Batteries must be changed by an adult.
- Only use this product in water between 10 and 45 degrees Celsius, 50 and 104 degrees Fahrenheit.
- This product cannot be used in salt water.
- Do not leave this product submerged in water for a long period of time.
- This product should only be operated in water when fully assembled in accordance with the instructions.
- To prevent drowning, never leave a child unattended in the bath.
- Use a thermometer to check the temperature of the water before sitting a child in the bath. Toddlers have very sensitive skin and can burn easily if the water is too hot.
- When finished playing, remove the unit from the water and pour out any remaining water. Rinse the unit with clean water and wipe with a dry cloth. Suspend the unit in an upright position to dry.

## PRODUCT FEATURES

### 1. ON/OFF BUTTON

To turn the unit **ON**, press the **ON/OFF BUTTON**. To turn the unit **OFF**, press the **ON/OFF BUTTON** a second time.

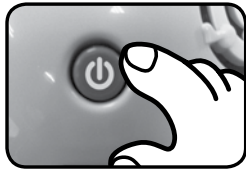

## 2. WATER SENSOR

The **WATER SENSOR** is located on the top of the orca's head. To activate the water spraying effect, pour water on the orca's head, just above the mask, when the unit is first turned on.



Please note the following:

- Adult supervision is recommended when the spraying water is activated.
- Keep the speaker above the water for optimal sound quality. When the speaker is submerged in the water the sound will be muffled.
- The bottom of the orca must be submerged in the water to activate the motor that sprays the water.
- Do not submerge the water sensor in the water. If the water sensor is submerged, it will not work properly.

## 3. SPRAYING SNORKEL

The **SPRAYING SNORKEL** is located next to the light-up mask. For the spraying to work properly, the snorkel must be above the water. If the snorkel is submerged or covered, it will not spray water.



 
## 4. AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech® Swim & Spray Musical Orca™** will automatically power-down after approximately one minute without input. The unit can be turned on again by pressing any button.


**Note: If the unit repeatedly powers down or the light flashes then fades out, we suggest changing the batteries.**

# ACTIVITIES

1. Press the **ON/OFF BUTTON** to turn the unit on. You will hear fun sounds, a song and a phrase. The light will flash with the sound.

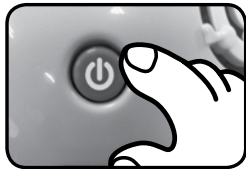

 2. Twist the **STARFISH** to hear fun phrases, sounds, songs and melodies. When a melody is playing, pour water on the orca's head to activate the water sensor and hear fun sounds play over the melody. The light will flash with the sound.

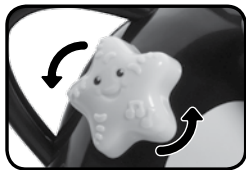

3. When the orca is floating on the water, pour water on the orca's head to activate the **WATER SENSOR** and hear fun sounds and watch the water spray out of the snorkel. The light will flash with the sound.



4. Dive the orca under the water for more than two seconds, then bring it back up to the surface of the water to hear playful phrases and melodies. The light will flash with the sound.



## MELODY LIST:

1. Row, Row, Row Your Boat
2. Good Morning Merry Sunshine
3. My Bonnie Lies Over the Ocean
4. Sailing, Sailing
5. Down by the Riverside
6. Lavender's Blue
7. I've Been Working on the Railroad
8. Jack and Jill
9. Little Robin Red Breast
10. Old King Cole
11. Humpty Dumpty
12. Pat-a-Cake
13. Froggy Went a Courtin'
14. Little Boy Blue
15. Alouette
16. Ring Around the Rosy
17. Three Little Kittens
18. Take Me Out to the Ball Game
19. Twinkle, Twinkle Little Star
20. Ta-ra-ra Boom De-Ay

## SUNG SONG LYRICS

### SONG 1

I'm an Orca, the oceans my home,  
We'll sing songs and play games all day long.

### SONG 2

Play in the water,  
Watch me splash.  
Now underwater I go!

### SONG 3

I splish and splash, all around the bath with you.  
Water, water everywhere!

# CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Make sure you empty the water out of all the elements of the unit and rinse thoroughly before drying so no sediment or cleaning products are left on the unit.
5. Make sure to dry all the elements of the unit before storing.
6. Do not drop the unit on hard surfaces.

# TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our web site at [www.vtechkids.com](http://www.vtechkids.com) and filling out our Contact Us form located under the Customer Support link. A service representative will be happy to help you.

## **IMPORTANT NOTE:**

Creating and developing **Infant Learning** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our web site at [www.vtechkids.com](http://www.vtechkids.com) and filling out our Contact Us form located under the Customer Support link with any problems and/or suggestions that you might have. A service representative will be happy to help you.

**Note:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Caution:** changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

*CAN ICES-3 (B)/NMB-3(B)*



## PRODUCT WARRANTY

This Warranty is applicable only to the original purchaser, is non-transferable and applies only to "VTech" products or parts. This product is covered by a 3-month Warranty from the original purchase date, under normal use and service, against defective workmanship and materials. This Warranty does not apply to (a) consumable parts, such as batteries; (b) cosmetic damage, including but not limited to scratches and dents; (c) damage caused by use with non-VTech products; (d) damage caused by accident, misuse, unreasonable use, immersion in water, neglect, abuse, battery leakage, or improper installation, improper service, or other external causes; (e) damage caused by operating the product outside the permitted or intended uses described by VTech in the owner's manual; (f) a product or part that has been modified (g) defects caused by normal wear and tear or otherwise due to the normal aging of the product; or (h) if any VTech serial number has been removed or defaced.

Prior to returning a product for any reason, please notify the VTech Consumer Services Department, by sending an email to [vtechkids@vtechkids.com](mailto:vtechkids@vtechkids.com) or calling 1-800-521-2010. If the service representative is unable to resolve the issue, you will be provided instructions on how to return the product and have it replaced under Warranty. Return of the product under Warranty must adhere to the following rules:

If VTech believes that there may be a defect in the materials or workmanship of the product and can confirm the purchase date and location of the product, we will at our discretion replace the product with a new unit or product of comparable value. A replacement product or parts assumes the remaining Warranty of the original product or 30 days from the date of replacement, whichever provides longer coverage.

**THIS WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL, WRITTEN, STATUTORY, EXPRESS OR IMPLIED. IF VTECH CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY AND TO THE REPLACEMENT SERVICE AS DETERMINED BY VTECH IN ITS SOLE DISCRETION.**

To the extent permitted by law, VTech will not be responsible for direct, special, incidental or consequential damages resulting from any breach of Warranty.

**This Warranty is not intended to persons or entities outside the United States of America. Any disputes resulting from this Warranty shall be subject to the final and conclusive determination of VTech.**