

vtech[®]

Parent's Guide

 **Kidizoom**[®]
SELFIECAM



BC

INTRODUCTION

Thank you for purchasing the **Kidizoom® Selfie Cam** by **VTech®**!

This compact and lightweight camera, with a built-in rechargeable battery, is designed to take great photos, selfies, videos, play games and more!

With a rotatable camera lens and the included **Selfie Stick**, your child can take great selfies anytime! **Kidizoom® Selfie Cam** even includes fun fantasy photo and video effects! That's not all; your child can even use included apps like **Make Up Studio** to beautify their shots! With the included micro USB cable, your child can upload their creations to a computer and share them with friends and family! Snap it! Beautify it! Share it! Enjoy using **Kidizoom® Selfie Cam**!

INCLUDED IN THIS PACKAGE

- One **Kidizoom® Selfie Cam** (with built-in rechargeable Li-ion polymer battery*)
- One micro USB cable
- One selfie stick
- One neck strap
- One parent's guide



WARNING: All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.


ATTENTION : Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes et vis d'emballage. Ils ne font pas partie du jouet.

NOTE:


- Please keep this parent's guide as it contains important information.
- The battery in this product must not be disposed of with household waste.
- The battery is recyclable; please follow your local recycling regulations.

* Battery is non-replaceable.

PRODUCT LAYOUT AND BUTTONS

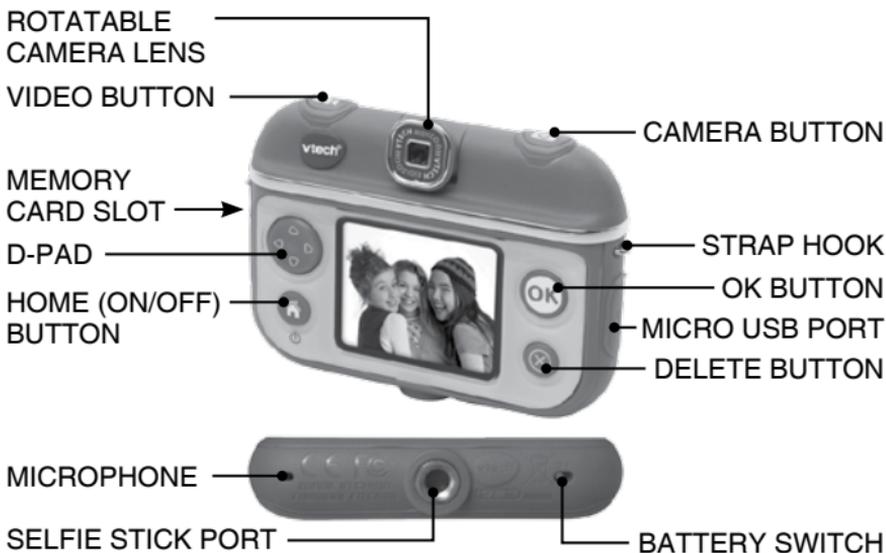

NOTE: SPEAKER is located on the back of the **Selfie Cam**.

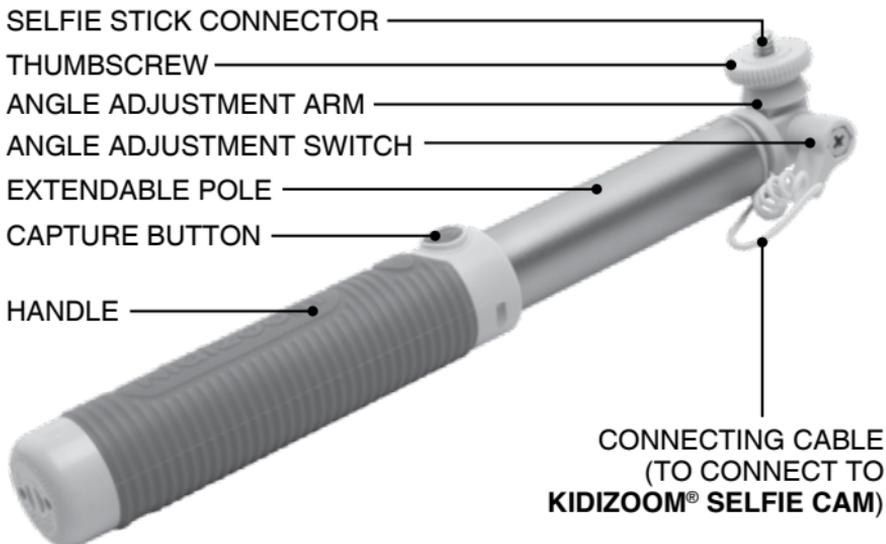

NOTE: The **THUMBSCREW** on the Selfie Stick adjusts the length of the **SELFIE STICK CONNECTOR** so you can securely mount the camera facing in any direction. To prevent damaging the **Selfie Cam**, do not detach the **THUMBSCREW**.

Battery Switch

When the switch is set to the **OFF** position , the battery will be disconnected, the **Selfie Cam** will not function and the battery will not charge. When the switch is set to the **ON** position , the battery will be reconnected, the **Selfie Cam** will function and the battery can be charged.

NOTE:

You may need a small tool (such as a paperclip) to move the switch to the **ON** or **OFF** position.

It is not necessary to move the switch to the **OFF** position  in daily use. Only move the switch to the **OFF** position  when the **Selfie Cam** is not in use for an extended period of time.

Camera Button

Press this button to switch to **Camera Mode**; where you can take photographs and selfies.

Video Button

Press this button to switch to **Video Mode**; where you can record videos.

Home (ON/OFF) Button

Press this button to turn the **Selfie Cam ON**. Hold this button down for approximately 2 seconds to turn the **Selfie Cam OFF**.

While the **Selfie Cam** is **ON**, press this button to go to the **Home Menu** or to go back to the previous menu.

OK Button

Press this button to confirm a selection.

NOTE: The **OK BUTTON** can also be used to take photos when in **Camera Mode** and to start and stop recording videos in **Video Mode**.

Delete Button

Press this button to delete the selected file or cancel the effect in **Camera Mode** or **Video Mode**.

D-Pad

Press these buttons to make a selection.

Memory Card Slot

Insert a microSD card here for memory expansion.

Micro USB Port

Connect to a computer with the included micro USB cable to transfer files and to charge the **Selfie Cam**.

Capture Button (Selfie Stick)

When the **Selfie Cam** is connected to the **Selfie Stick**, press this button to take photos in **Camera Mode** and to start and stop recording videos in **Video Mode**.

Connecting Cable (Selfie Stick)

Plug this into the micro USB port of the **Selfie Cam** to connect to the **Selfie Stick**.

PRODUCT SPECIFICATION

Display	1.41" color LCD
Photo Resolution	640 X 480 (0.3 MP)
Video Resolution	640 X 480 (Only available when using a memory card. Video effects are not supported at this resolution) 320 X 240 (default resolution) 160 X 120
Focus Range	1.5 feet - ∞
Storage Capability (Based on a 2GB capacity memory card)	Photos: 13,100 Video (160 X 120): 30 minutes (5+ files) Video (320 X 240): 30 minutes (2+ files) Video (640 X 480): 15 minutes (1 file) NOTE: The above amounts are approximations. The actual length and capacity of files varies depending on the shooting environment.
Internal Memory	128MB built-in memory (shared with program data, actual memory available for user storage will be less).
External Memory Card Format and Capacity	A microSD or microSDHC card (not included) with a capacity of 1GB to 32GB is recommended.
File Format	Photos: Standard Baseline JPEG Video: AVI (Motion JPEG)
Connectivity	Micro USB 2.0 cable (included) for connection to a computer.

Battery	Rechargeable Li-ion Polymer battery (non-replaceable).
Optimum Operating and Charging Temperature	32°F-104°F (0 - 40°C)

NOTE:

Keep the rubber cover of the micro USB port and memory card slot tightly closed when they are not in use.


STORAGE CAPACITY

		0.3 MP Photos	Video in 160 X 120 (minutes)	Video in 320 X 240 (minutes)	Video in 640 X 480 (minutes)
Internal Memory		600	6	2.5	N/A
External Memory Card	2GB	17,400	160	65	17
	4GB	34,800	320	130	34
	8GB	69,600	640	260	68
	16GB	139,200	1280	520	136
	32GB	278,400	2,560	1,040	272

NOTE: The above amounts are approximations. The actual length and capacity of files varies depending on the shooting environment. The video length limit per file is 30 minutes, or a file size no larger than 2GB.

GETTING STARTED

When using your **Kidizoom® Selfie Cam** for the first time, you will need to switch the **Battery Switch** (located at the bottom of the **Selfie Cam**) to the **ON** position . You may need a small tool (such as a paperclip) to move the switch to the **ON** position .

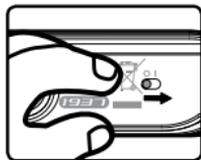

When the **Battery Switch** is in the **OFF** position  it will not be possible to charge the battery or use the **Selfie Cam**.

NOTE: It is not necessary to move the **Battery Switch** to the **OFF** position  in daily use. Only move the switch to the **OFF** position  when the **Selfie Cam** is not in use for an extended period of time.

BATTERY RECHARGING

NOTE: Adult operation required.

Connect the **Selfie Cam** to your computer using the included micro USB cable to charge the battery.

- Make sure that the **Battery Switch** is in the **ON** position  before charging.
- Pull up the rubber cover of the **MICRO USB PORT** on the side of the **Selfie Cam**.
- Insert the micro USB cable (small end) into the **MICRO USB PORT** of the **Selfie Cam**.
- Insert the large end of the micro USB cable into the USB port of your computer. A USB port is usually marked with this symbol: 
- Once the connection is successful, you will see the battery recharging symbol  appear on the screen of the **Selfie Cam**.
- Be sure to check the charging progress of the **Selfie Cam** regularly throughout the recharge.
- When the battery is fully charged, a message will be displayed on the screen of the **Selfie Cam**. The screen will then automatically turn off. You may now disconnect the **Selfie Cam** from your computer.

NOTE: It will take approximately 3 hours to fully charge the battery. The actual charging time depends on the power supply, the remaining charge and the ambient temperature of the charging environment. The optimum ambient temperature is 32°F to 104°F (0 - 40°C). If your **Selfie Cam** needs longer than 3 hours to fully charge, please try charging from a different USB power source.

BATTERY LIFE

The time the battery lasts between charges varies depending on how frequently the **Selfie Cam** is used. Like other electronic devices, more frequent usage will mean that the battery will drain faster. Some activities will be more demanding on the battery, such as photo and video taking. For continuous photo or video taking, the battery will last for approximately 2-3 hours. For average usage, the battery should last for approximately 8-12 hours. The remaining battery capacity will be displayed in the right top corner of the screen. When the battery level is

low, it is recommended to recharge the battery before further use. When the battery is depleted, the **Selfie Cam** will not turn on and will need to be recharged.

POWER SAVING (AUTOMATIC SHUT OFF)

To preserve battery life, the **Kidizoom® Selfie Cam** will automatically turn off after a short period of time without user input. When recording a video, the **Selfie Cam** will not automatically turn off until the recording has finished.

BATTERY MAINTENANCE

- Charge the battery regularly for optimum performance, even when the **Selfie Cam** is not in use. For example, fully charge the **Selfie Cam** at least once every 6 months.
- Move the **Battery Switch** to the **OFF** position  when the **Selfie Cam** is not in use for an extended period of time. Move the **Battery Switch** to the **ON** position  before charging the battery.

BATTERY NOTICE

Misuse of batteries can lead to them bursting, causing a fire or chemical burns. Please read the below precautions:

- Do not disassemble.
- Do not crush and do not expose the battery to any shock or force such as hammering, dropping or stepping on it.
- Do not short circuit.
- Do not expose to high temperatures or place near a heat source. Do not leave in direct sunlight for any length of time.
- Do not dispose of in fire.
- Do not handle damaged or leaking batteries.
- Keep the battery out of the reach of children.
- Keep the battery dry.
- Examine the battery charging cord periodically for conditions that may result in the risk of fire, electric shock, or injury to persons (such as damage to the output cord, housing, or other parts) and that, in an event of such conditions, the battery charging cord should not be used until properly repaired or replaced.
- If you find the time between charges is considerably shortened with no change in usage, the battery could be nearing the end of its life. Please dispose of the used battery as described in this manual.

The battery life varies from battery to battery depending on storage, operating conditions and environment.

QUICK INSTALLATION GUIDE

Attaching and Connecting Kidizoom® Selfie Cam to the Selfie Stick

1. Align the **SELFIE STICK PORT** on the **Kidizoom® Selfie Cam** to the **SELFIE STICK CONNECTOR** of the **Selfie Stick**. Screw on clockwise, ensuring a firm attachment.



2. Insert the end of the **Selfie Stick's CONNECTING CABLE** to the **MICRO USB PORT** of the **Kidizoom® Selfie Cam**.



3. When the **Kidizoom® Selfie Cam** is mounted securely on the **Selfie Stick** and connected, press the **CAPTURE BUTTON** while in **Camera** or **Video Mode** to take a photo or to start and stop recording a video.
4. To elongate the **Selfie Stick**, pull the **ANGLE ADJUSTMENT ARM** outwards. To retract the **Selfie Stick**, push the **ANGLE ADJUSTMENT ARM** inwards.
5. To adjust the angle of the **Selfie Cam**, loosen the **ANGLE ADJUSTMENT SWITCH**, then rotate the **ANGLE ADJUSTMENT ARM**. Tighten the switch when you have finished.

Warning: Using the **Kidizoom® Selfie Cam Selfie Stick** is at the user's own risk. Be aware of your surroundings at all times. **VTech®** claims no responsibility for any misuse or failure to follow these guidelines.

NOTE:

- Be careful of people and objects surrounding you every time you prepare to elongate the **Selfie Stick**.

- When the **Selfie Stick** is not in use, be sure to retract the **Selfie Stick** and disconnect the **CONNECTING CABLE** from the **Selfie Cam**.
- The **THUMBSCREW** on the Selfie Stick adjusts the length of the **SELFIE STICK CONNECTOR** so you can securely mount the camera facing in any direction. To prevent damaging the **Selfie Cam**, do not detach the **THUMBSCREW**.

Neck Strap Attachment

Step 1:

Locate the thread loop on the end of the strap. Insert it into the **STRAP HOOK** on the **Selfie Cam**.




Step 2:

Pull open the lock catch and feed the end of the strap up through the loop and pull it all the way through.



Step 3:

Make sure the loop is securely tightened around the bar, then fasten the lock catch.

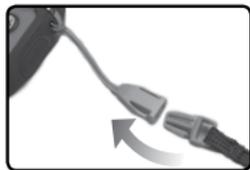

Step 4:

Repeat step 1-3 to attach the other end of the strap to the other **STRAP HOOK**.




MEMORY CARD INSTALLATION

Kidizoom® Selfie Cam supports the below memory cards for memory expansion.

- microSD 
- microSDHC 

The microSD Logo and microSDHC logo are trademarks of SD-3C, LCC.

- Make sure the **Selfie Cam** is turned **OFF**.
- Locate the **MEMORY CARD SLOT** on the side of the **Selfie Cam**.
- Pull up the rubber cover.
- Insert your microSD or microSDHC card (not included) as illustrated. The memory card will automatically be set as the default storage location for all files.
- To remove the memory card from the slot, push the card once and it will eject.

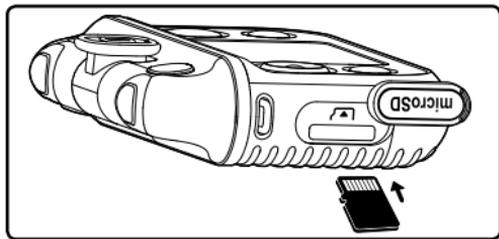

NOTE: If a memory card is being used, the data stored in the internal memory cannot be seen until the memory card has been removed. To prevent accidental data loss, be sure to back up all important data from your memory card before using it.


TO BEGIN USING KIDIZOOM® SELFIE CAM

Make sure that the **Battery Switch** is in the **ON** position  and that the battery has been fully charged before using the **Selfie Cam**.

NOTE: It is not necessary to move the **Battery Switch** to the **OFF** position  when used daily.

Press the **HOME (ON/OFF) BUTTON**  to turn the **Selfie Cam** on. When turning the **Selfie Cam** on for the first time, you will need to select the language. Press **Up** or **Down** on the **D-PAD**  to select your desired language and press the **OK BUTTON**  to confirm.

Next, you will need to set the date and time. Press **Up** or **Down** on the **D-PAD**  to select the correct day, month, year, hour and minute. Press **Left** or **Right** on the **D-PAD**  to jump to the previous or next setting item. Finally, press the **OK BUTTON**  to confirm the setting.

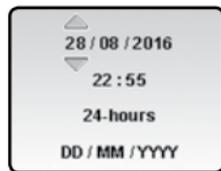

If you wish to change the language, date and time later, you can return to the **Settings Menu**.

NOTE: If the battery level becomes too low, the battery will need to be recharged and the date and time need to be reset.

QUICK OPERATION GUIDE

Take Photos

Press the **CAMERA BUTTON**  to go to **Camera Mode**. In **Camera Mode**, press the **OK BUTTON**  or the **CAMERA BUTTON**  to take a photo. Press **Left** or **Right** on the **D-PAD**  to select different photo effects.

Record Videos

Press the **VIDEO BUTTON**  to go to **Video Mode**. In **Video Mode**, press the **OK BUTTON**  or the **VIDEO BUTTON**  to start and stop recording. Press **Left** or **Right** on the **D-PAD**  to select different cartoon themes or effects.

Home Menu

In the **Home Menu**, you can access all activities on the **Kidizoom® Selfie Cam**. Press the **HOME BUTTON**  to display the **Home Menu**, then press **Left** or **Right** on the **D-PAD**  to select an activity, pressing the **OK BUTTON**  to confirm.



There are 7 activities in the **Home Menu**:

- **Camera** 
- **Videos** 
- **Playback** 
- **Games** 
- **Make Up Studio** 
- **Music Slide Show** 
- **Settings** 

View Photos or Videos

Select the **Playback Icon** in the **Home Menu** to view your photos and videos. The latest photo or video will be displayed on screen first. Press **Up** or **Down** on the **D-PAD**  to view the next or previous file. To delete the current file, press the **DELETE BUTTON**  to display the **Delete Menu** and select the check mark ✓ to confirm. To delete all files, press **Down** on the **D-pad**  when in the **Delete Menu**, select the check mark ✓ to continue, and then follow the instructions on screen to confirm.

To turn your **Selfie Cam OFF**, hold down the **HOME (ON/OFF) BUTTON**  for 2 seconds. The **Selfie Cam** will also automatically turn off after a short period of time without user input.

CONNECT TO A COMPUTER FOR FILE TRANSFERRING

You can connect **Kidizoom® Selfie Cam** to a PC or Mac computer using the included micro USB cable. Once connected, you can transfer files between the **Selfie Cam** and computer. Please follow the below steps to make the connection.

- Pull up the rubber cover of the micro USB port on the side of your **Selfie Cam**.
- Insert the micro USB cable (small end) into the micro USB port on the **Selfie Cam**.
- Insert the larger end of the micro USB cable into a USB port on the computer. A USB port is usually marked with this symbol: 
- You will see a removable drive called **VTech 1937** on your computer,

please use this to transfer files to and from the **Selfie Cam**. There is another removable drive called **VT SYSTEM**, which is for the storage of system data only. Do not use the **VT SYSTEM** drive.

- If there is a memory card in your **Selfie Cam**, the removable drive of the memory card will appear instead of the **VTech 1937**.

NOTE: Once the **Selfie Cam** is connected to your computer, do not disconnect it while files are transferring. Only when your **Selfie Cam** has completed transferring files should you eject it from your computer. Once ejected, you can then physically disconnect the **Selfie Cam** from your computer.

To avoid any potential damage to your **Kidizoom® Selfie Cam**, ensure that the micro USB rubber cover is fully covering the micro USB port of your **Selfie Cam** whenever possible.

To back up photo or video files taken by Kidizoom® Selfie Cam:

- Locate and open the **DCIM** folder in the removable drive **VTech 1937** or the memory card on your computer.
- Your photo and video files will be stored here. Drag and drop these files to a location on your computer to back them up.

To transfer photo or video files to Kidizoom® Selfie Cam:

- Select the photo or video files you would like to transfer from your computer first.
- Locate and open the **DOWNLOAD** folder in the removable drive **VTech 1937** or the memory card on your computer, then drag and drop the files you wish to transfer to your **Selfie Cam** into the **PHOTO** subfolder or **VIDEO** subfolder. Please ensure that video files go into the **VIDEO** subfolder and that photo files go into the **PHOTO** subfolder.

NOTE: Do not transfer photo or video files created by other cameras to **Kidizoom® Selfie Cam**, as these file formats may not be compatible.

System Requirements:

PC Hardware Requirements:

CPU: Pentium® 4 or above

Memory: 256MB RAM

300MB Hard disk space

Monitor Resolution: 1024 x 768

USB Port required

PC Software Requirements:

Microsoft® Windows® XP, Windows Vista®, Windows® 7, Windows® 8 or Windows® 10 Operating System

Macintosh Hardware Requirements:

Macintosh Computer with an Intel® processor

Memory: 512 MB RAM

300 MB Hard disk space

USB Port required

Macintosh Software Requirements:

Mac OS X version 10.6, 10.7, 10.8, 10.9, 10.10 or 10.11

The Microsoft® and Windows® logos are trademarks of the Microsoft Corporation in the United States and other countries. Intel® and Pentium® are trademarks of the Intel Corporation in the United States and other countries. Macintosh and Mac logos are trademarks of Apple Inc. in the United States and other countries. All other trademarks are the property of their respective owners.

ACTIVITIES

Camera

Press the **CAMERA BUTTON**  or select the **Camera Icon**  in the **Home Menu** to enter **Camera Mode**.

- While holding the **Selfie Cam** steady, press the **CAMERA BUTTON**  or **OK BUTTON**  to take a photo.
- Press **Left** or **Right** on the **D-PAD**  to cycle through different photo effects. Or press **Down** on the **D-PAD**  to display the **Photo Effects Menu** to select a photo effect by type.
- The **Self-Timer Mode** activates a countdown before taking a photo.
- The **Face Detection Mode** automatically takes a selfie when faces are detected. The **Selfie Cam** will then activate a countdown and take a photo. Please ensure that light conditions are good for the best results. If your **Selfie Cam** does not detect a face, it will still take a photo automatically after a few seconds.
- You can take a collage of photos by selecting the **Photo Collage Mode**. First, press **Left** or **Right** on the **D-PAD**  to select a style, then take photos of you and your friends in each of the frames. To exit, press the **DELETE BUTTON**.

NOTE: The **Self-Timer** can be set and the photo resolution can be changed in **Settings**, please refer to the **Settings** section in this manual for details.

Videos

Press the **VIDEO BUTTON**  or select the **Video Icon**  in the **Home Menu** to enter **Video Mode**.

- Press the **VIDEO BUTTON**  or the **OK BUTTON**  to start recording. Press either button once again to stop recording. A **Play Icon**  will appear after the recording has stopped, press the **OK BUTTON**  to watch the video you just recorded. While the video is playing, press the **OK BUTTON**  or **VIDEO BUTTON**  to skip the video and return to the video preview screen.
- Press **Left** or **Right** on the **D-PAD**  to cycle through different video cartoon themes and effects.
- The **Self-Timer Mode** activates a countdown before recording a video.

NOTE: The **Self-Timer** can be set and the video resolution can be changed in **Settings**, please refer to the **Settings** section in this manual for details.

Playback

Select the **Playback Icon**  on the **Home Menu** to view the photos and videos you have taken.

- The latest photo or video you have taken will be shown first. Press **Up** or **Down** on the **D-PAD**  to select the next or previous file.
- When a video file is selected, press the **OK BUTTON**  to play it.
- When a photo is selected, press the **OK BUTTON**  to see a closer view of the photo. You can then use the **D-PAD**  to pan across the photo. Press the **OK BUTTON**  again to return the view to normal.
- Press the **DELETE BUTTON**  to display the **Delete Menu**. Use the **D-PAD**  to select your choice and then press the **OK BUTTON**  to confirm.
- While watching a video file, press **Left** or **Right** on the **D-PAD**  to rewind or fast forward. Press the **OK BUTTON**  to pause or resume the video.

Make Up Studio

In the **Make Up Studio**, there are two activities. Press **Left** or **Right** on the **D-PAD**  to select an activity and then press the **OK BUTTON**  to begin.

NOTE: The **Make Up Studio** activities only support photos which are taken within the activity (using the face outline). Photos taken in **Camera Mode** or downloaded from a computer cannot be used here.

1. Hair Salon

In **Hair Salon**, you can edit your photos to include hairstyles, head wear, glasses, necklaces and earrings.

A face outline will be displayed on the screen.

To begin, align your face with the face outline on screen and press the **OK BUTTON**  to take a photo. Or, press **Up** or **Down** on the **D-PAD**  to select a previously taken photo and press the **OK BUTTON**  to confirm.




Hint:

Try aligning your eyes to the eye position of the face outline first. Then, adjust your position until the rest of your face fits within the remainder of the outline. Try to keep as much of your face inside the outline as possible for the best results. Once you are in position, remember to look into the Camera Lens when taking your photo.

The **Hair Salon Menu** will appear once a photo has been taken.

- Use the **D-PAD**  to select the effect you would like to add and press the **OK BUTTON**  to confirm.

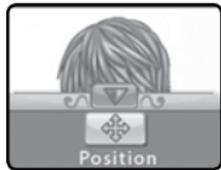

NOTE: To change to the **Advanced Settings** of a specific effect, press **Up** on the **D-PAD**  when the effect is selected. The **Advanced Settings Menu** will then appear. Use the **D-PAD**  to select an option and press the **OK BUTTON**  to confirm.

Here are the Advanced Settings for the different effects:

Effect Type	Advanced Settings	Description	Operation
Hairstyles 	Position 	To move the position of the chosen hairstyle.	Use the D-PAD  to move the position of the chosen hairstyle.
Headwear 	Size 	To enlarge or shrink the size of the head wear.	Press Up or Down on the D-PAD  to enlarge or shrink the size of the head wear.
	Position 	To move the position of the head wear.	Use the D-PAD  to move the position of the chosen head wear.
Glasses 	Size 	To enlarge or shrink the size of the glasses.	Press Up or Down on the D-PAD  to enlarge or shrink the size of the glasses.
	Position 	To move the position of the glasses.	Use the D-PAD  to move the position of the chosen glasses.
Earrings 	Adjust 	To adjust the distance between the earrings.	Press Left or Right on the D-PAD  to decrease or increase the distance between the earrings.
	Position 	To move the position of the earrings.	Use the D-PAD  to move the position of the chosen earrings.
Necklaces 	No Advanced Settings		

2. Beauty Parlor

In **Beauty Parlor**, you can add different makeup effects to a photo. The effects include eye shadow, blush, lipstick, mascara and party effects.

To start, align your face with the face outline on the screen and press the **OK BUTTON** to take a photo.



Or, press **Up** or **Down** on the **D-PAD**  to select

a previously taken photo and then press the **OK BUTTON** to confirm.

The **Beauty Parlor Menu** will appear once a photo has been taken or selected.

- Use the **D-PAD**  to select an effect you would like to add and press the **OK BUTTON** to confirm.

NOTE: To change to the **Advanced Settings** of a specific effect, press **Up** on the **D-PAD**  when the effect is selected. The **Advanced Settings Menu** will then appear. Use the **D-PAD**  to select an option and press the **OK BUTTON**  to confirm.

Here are the **Advanced Settings** for the different effects:

Effect Type	Advanced Settings	Description	Operation
Eye Shadow 	Shape 	To change the shape of the selected eye shadow.	Press Left or Right on the D-PAD  to change the shape.
	Adjust 	To adjust the distance between the left and right eye shadow.	Press Left or Right on the D-PAD  to decrease or increase the distance between the left and right eye shadow.
	Position 	To move the position of the effect.	Use the D-PAD  to move the position of the effect.

Blush 	Shape 	To change the shape of the selected blush.	Press Left or Right on the D-PAD  to change the shape.
	Adjust 	To adjust the distance between the left and right blush.	Press Left or Right on the D-PAD  to decrease or increase the distance between the left and right blush.
	Position 	To move the position of the effect.	Use the D-PAD  to move the position of the effect.
Lipstick 	Shape 	To change the shape of the selected lipstick.	Press Left or Right on the D-PAD  to change the shape.
	Size 	To enlarge or shrink the size of the lipstick.	Press Up or Down on the D-PAD  to enlarge or shrink the size of the lipstick.
	Position 	To move the position of the effect.	Use the D-PAD  to move the position of the effect.
Mascara 	Adjust 	To adjust the distance between the left and right mascara.	Press Left or Right on the D-PAD  to decrease or increase the distance between the left and right mascara.
	Position 	To move the position of the effect.	Use the D-PAD  to move the position of the effect.
Party Effect 	Position 	To move the position of the effect.	Use the D-PAD  to move the position of the effect.

Music Slide Show

In **Music Slide Show**, you can view all of the fantastic photos you have taken with cool transition effects and background music.

- Press the **OK BUTTON**  to view the **Slide Show Settings Menu** to set the following items:

	Items	Options
1	Background Music	Music 1
		Music 2
		Music 3
		Music 4
		Music 5
		Music 6
		Off
2	Slide Speed	Slow
		Normal
		Fast
		Flipbook
3	Transition	Off
		On
4	Shuffle Photos	Off
		On

Games

There are 3 built-in **Games** on the **Kidizoom® Selfie Cam**. Select the **Game Icon**  on the **Home Menu** to enter the **Game Menu**. Use the **D-PAD**  to select a game and then press the **OK BUTTON**  to confirm.

Cake Mania

The **Cake Master** likes to try different ingredients to make special cakes! Help her collect the ingredients she needs and see what kind of special

cakes she can make for her customers!

Control: Move the **Selfie Cam** to place the target cursor over the ingredient you need, and press the **OK BUTTON** (OK) to collect it.



Honey Bee Adventure

The **Honey Bee** works hard every day to collect pollen and nectar from the flowers. There are lots of obstacles on the **Honey Bee's** journey home! Help him collect pollen and nectar from the flowers, avoiding any obstacles on the way back!



Control: The **Honey Bee** will continuously float down towards the bottom of the screen. Press the **OK BUTTON** (OK) (or **Up** on the **D-PAD** (D-PAD)) to move the **Honey Bee** upwards and try to collect as much pollen and nectar as you can by flying over the center of each flower. Avoid the obstacles along the way.

Free Play Mode: Play continuously for up to 10 minutes. Collect as much pollen and nectar as you can to get the high score!

Hungry Monster

Feed the **Hungry Monster**! Use the **D-PAD** (D-PAD) to move ingredients into position to make food for the **Hungry Monster**. Press the **OK BUTTON** (OK) to place the ingredients onto the grid. Place them in the correct sequence to make the monster's food. Be careful though, placing ingredients in the wrong position will not make food and will take up space on the grid. If the grid is full and no more ingredients can be placed, the game will end! In **Normal Mode** there is a time limit, so make sure you feed the **Hungry Monster** before time runs out!



Control: Use the **D-PAD** (D-PAD) to move ingredients and press the **OK BUTTON** (OK) to place them.

Free Play Mode: Play continuously for up to 10 minutes. Make as much monster food as you can to get the high score!

Settings

Select the **Settings Icon** in the **Home Menu** to enter the **Selfie Cam's Settings**.

In **Settings**, use the **D-PAD**  to make a selection and press the **OK BUTTON**  to confirm. Press the **HOME (ON/OFF) BUTTON**  to exit **Settings**.

You can adjust the following items:

Volume  : To increase or decrease the **Volume**.

Self-Timer  : To turn the **Self-Timer** for taking photos or videos **ON** or **OFF**.

When the **Self-Timer** is **ON**, there will be a countdown before a photo or video is taken.

NOTE: The **Self-Timer** will turn **OFF** automatically every time the **Selfie Cam** is switched **OFF**.

Memory  : Here you can see the memory status of the internal memory or external memory card. You can also choose to format the memory or to perform a factory reset of the **Selfie Cam**. Select an option and then follow the instructions on screen to complete the process.

NOTE:

- Formatting the memory will erase all of the data stored, including all photos and videos.
- If a memory card is being used, then the data stored in the internal memory cannot be seen until the memory card has been ejected.
- When the memory is getting full, or when the file indexes have been used up, you should back up all **Selfie Cam** files to your computer. Then, delete all of the files on your **Selfie Cam** to free up space.

Video Resolution  : There are 3 video resolutions to choose from.

160 X 120: This is the smallest resolution, meaning you can record and save more videos.

320 X 240: The video quality is better, but will take up more memory so less video can be recorded and saved.

640 X 480: Best video quality, but the video size will be even larger. Overall recording time may be reduced as a result.

NOTE:

- The 640 X 480 video resolution is only available to select when using a memory card.
- Only the 320 X 240 and 160 X 120 video resolutions support video cartoon themes and effects.

Indoor Light Frequency 

Here you can set the **AC power frequency** according to the region you're in when traveling. If it is not set correctly, you may see some flickering

on the screen and on the photos and videos you take when in an indoor environment.

NOTE: Please leave your **Selfie Cam** set to the default value unless you are traveling.

Date & Time

The current date and time can be set here. When in the **Date & Time Menu**, press **Up** or **Down** on the **D-PAD**  to scroll through the options and to select the current month, day, year, hour and minute, as well as the date and time format.

Language

Here you can change the **Language** on the **Selfie Cam**.

CARE & MAINTENANCE

1. Keep the rubber cover of the micro USB port and **Memory Card Slot** closed tightly to prevent dust or water from getting in.
2. Keep the **Selfie Cam** clean by wiping it with a slightly damp cloth.
3. Keep the **Selfie Cam** out of direct sunlight and away from any direct heat source.
4. Do not drop the **Selfie Cam** on a hard surface and do not expose it to moisture or immerse it in water.

WARNING

- A very small percentage of the public, due to an existing condition, may experience epileptic seizures or a momentary loss of consciousness when viewing certain types of flashing colors or patterns.
- While **Kidizoom® Selfie Cam** does not contribute to any additional risks, we do recommend that parents supervise their children while they play games. If your child experiences dizziness, altered vision, disorientation, or convulsions, discontinue use immediately and consult your doctor.
- Please note that focusing on at close range and handling a **Kidizoom® Selfie Cam** as a game controller for a prolonged period of time may cause fatigue or discomfort. We recommend that children take a 15 minute break for every hour of play.

TROUBLESHOOTING

Go through this section if you experience difficulty in operating **Kidizoom® Selfie Cam**.

Problem	Solution
The Selfie Cam has stopped working	<ol style="list-style-type: none">1. Turn the Battery Switch OFF for 30 seconds.2. Turn the Battery Switch ON again and then press the HOME (ON/OFF) BUTTON  to turn on the Selfie Cam. It should now work properly.3. If it doesn't work, recharge the battery and try again. (Refer to the Battery Recharging section for details)
Screen display is abnormal	<ol style="list-style-type: none">1. Turn the Battery Switch OFF for 30 seconds.2. Turn the Battery Switch ON again and then press the HOME (ON/OFF) BUTTON  to turn on the Selfie Cam. The screen display should be normal again.
Image taken is not clear	<ol style="list-style-type: none">1. Make sure the lighting conditions of the shooting environment are good.2. Check to see if the camera lens is clean. If you find some dust or dirt on it, please see the steps to clean the lens in Care & Maintenance.
Cannot connect to a computer	<ul style="list-style-type: none">• Check the connections of the micro USB cable between the Selfie Cam and the computer, ensuring that they are firm.• Turn the Battery Switch OFF for 30 seconds. Turn the Battery Switch ON and connect to the computer again.
Unable to view a downloaded video or photo file	<p>Check if the downloaded files are in the correct directory in the Kidizoom® Selfie Cam. Photos should be put in the DOWNLOAD/PHOTO folder, and videos should be put in the DOWNLOAD/VIDEO folder when Kidizoom® Selfie Cam is connected to a computer. Kidizoom® Selfie Cam only supports the below formats:</p> <p>Photos in Standard Baseline JPEG and Videos in AVI (Motion JPEG) created by Kidizoom® Selfie Cam.</p>

TECHNICAL SUPPORT

If you have a problem that cannot be solved by using this manual, we encourage you to visit us online or contact our Consumer Services Department with any problems and/or suggestions that you might have. A support representative will be happy to assist you. Before requesting support, please be ready to provide or include the information below:

- The name of your product or model number (the model number is located on the back of the display panel).
- The actual problem you are experiencing.
- The actions you took right before the problem started.

Internet : www.vtechkids.com

Phone : 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada

FREQUENTLY ASKED QUESTIONS

Question 1:

I have bought a **Kidizoom® Selfie Cam**, but it will not work with my PC, my PC is looking for a driver. I have searched the internet and cannot find a **VTech® Kidizoom® Selfie Cam** driver. What can I do?

Answer:

There is no separate driver needed for the **Kidizoom® Selfie Cam**. It uses a standard USB mass storage device driver. Such a driver comes standard on all Windows® operating systems starting with Windows® 2000 Service Pack 3 (including Windows® XP, Vista and upwards) and Mac OS® 9.0 or above. If your computer meets these OS requirements and is still looking for a driver, please contact your PC manufacturer for further assistance. For earlier operating systems that do not support mass storage, a system upgrade or mass storage device driver may be available. Again, please check with your PC manufacturer.

Question 2:

What is the ISO value (light sensitivity) of the **Kidizoom® Selfie Cam**?

Answer:

The **Kidizoom® Selfie Cam** uses an auto-ISO value. It auto adjusts the exposure time and light sensitivity depending on the lighting environment.

Question 3:

Why won't my **Kidizoom® Selfie Cam** turn **ON**?

Answer:

Please make sure the **Battery Switch** is **ON** and the battery is charged.

Question 4:

Why are my pictures sometimes grainy and fuzzy? Is there anything I can do to improve the picture quality?

Answer:

In a poorly lit environment, the frame rate (shutter speed) drops to allow for a longer exposure time. The downside of this is that any movement in the frame, or of the hand holding the **Selfie Cam**, can result in greater blur. Furthermore, the camera sensor will soften the edges in low light to counteract the darkness by reducing the image noise. This too can sometimes result in a blurred picture. Try to improve the lighting to get better results.

Question 5:

Why are the videos grainy and fuzzy when viewing on the computer screen?

Answer:

Please check if the video player of your computer is set to display the actual resolution and scale of your videos. Viewing the videos on an enlarged screen will result in a poor display quality.

Also, you can set the video resolution of **Kidizoom® Selfie Cam** to 320 X 240 or 640 X 480 if there is a memory card installed. The video quality of this option is better than 160 X 120.

Question 6:

Can you delete a group of pictures at one time, or do they have to be deleted one at a time on the **Selfie Cam**?

Answer:

If you connect **Kidizoom® Selfie Cam** to your computer and access it as an external drive, you can select multiple pictures to delete at any one time.

Question 7:

If you accidentally delete the pictures by reformatting, is there any way to get them back?

Answer:

Unfortunately, if you delete the pictures by formatting the internal storage memory, there's no way to retrieve them.

Question 8:

I am trying to transfer my pictures to my computer. I followed the instructions (connecting the micro USB cable to the **Selfie Cam** and computer) and the new drive appears. However, no pictures are automatically downloading. Is there something I need to do at startup to get the pictures downloaded and saved?

Answer:

The picture transfer operation does not start by itself. After you have

connected the micro USB cable to your computer and the drive appears ready, you can open the drive, look under the folder **DCIM** and you should find the images you captured with the **Kidizoom® Selfie Cam**. Moreover, if you wish to upload images to be viewed on **Kidizoom® Selfie Cam**, you can do so by moving the JPEG image files into the folder **DOWNLOAD/PHOTO**.

NOTE: Do not transfer photo or video files created by other cameras to **Kidizoom® Selfie Cam**, as these file formats may not be compatible.

DISCLAIMER AND LIMITATION OF LIABILITY

VTech® Electronics North America, L.L.C. and its suppliers assume no responsibility for any damage or loss resulting from the use of this handbook.

VTech® Electronics North America, L.L.C. and its suppliers assume no responsibility for any loss or claims by third parties that may arise through the use of this product. **VTech®** Electronics North America, L.L.C. and its suppliers assume no responsibility for any damage or loss caused by deletion of data as a result of malfunction, dead battery, or repairs.

Company: VTech® Electronics North America, L.L.C.

Address: 1156 W. Shure Drive, Suite 200, Arlington Heights, IL 60004 USA

Phone: 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada

IMPORTANT NOTE:

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our web site at www.vtechkids.com and filling out our Contact Us form located under the Customer Support link with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used

in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

CAN ICES-3 (B)/NMB-3(B)


Caution : Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Shielded cables must be used with this unit to ensure compliance with the Class B FCC limits.



WARNING:

CHOKING HAZARD-Small part.
Not for children under 3 yrs.

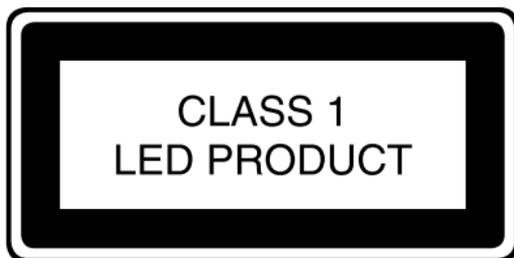



PRODUCT WARRANTY

This Warranty is applicable only to the original purchaser, is non-transferable and applies only to "VTech" products or parts. This product is covered by a 3-month Warranty from the original purchase date, under normal use and service, against defective workmanship and materials. This Warranty does not apply to (a) consumable parts, such as batteries; (b) cosmetic damage, including but not limited to scratches and dents; (c) damage caused by use with non-VTech products; (d) damage caused by accident, misuse, unreasonable use, immersion in water, neglect, abuse, battery leakage, or improper installation, improper service, or other external causes; (e) damage caused by operating the product outside the permitted or intended uses described by VTech in the owner's manual; (f) a product or part that has been modified (g) defects caused by normal wear and tear or otherwise due to the normal aging of the product; or (h) if any VTech serial number has been removed or defaced.

Prior to returning a product for any reason, please notify the VTech Consumer Services Department by going to our web site at www.vtechkids.com, filling out our Contact Us form located under the Customer Support link or calling 1-800-521-2010.

If the service representative is unable to resolve the issue, you will be provided instructions on how to return the product and have it replaced under Warranty. Return of the product under Warranty must adhere to the following rules: If VTech believes that there may be a defect in the materials or workmanship of the product and can confirm the purchase date and location of the product, we will at our discretion replace the product with a new unit or product of comparable value. A replacement product or parts assumes the remaining Warranty of the original product or 30 days from the date of replacement, whichever provides longer coverage.

THIS WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL, WRITTEN, STATUTORY, EXPRESS OR IMPLIED. IF VTECH CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY AND TO THE REPLACEMENT SERVICE AS DETERMINED BY VTECH IN ITS SOLE DISCRETION.

To the extent permitted by law, VTech will not be responsible for direct, special, incidental or consequential damages resulting from any breach of Warranty.

This Warranty is not intended to persons or entities outside the United States of America. Any disputes resulting from this Warranty shall be subject to the final and conclusive determination of VTech.

**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com

