

vtech[®]

Parent's Guide

Mix & Match-a-Saurus[™]




91-003684-000 US

INTRODUCTION

Thank you for purchasing the **Mix & Match-a-Saurus™**!

Dino comes with three emotion tiles, three music tiles and three character tiles. Create 27 different combinations of emotions, music styles and characters and place them on Dino's back to customize how you want to play with him!

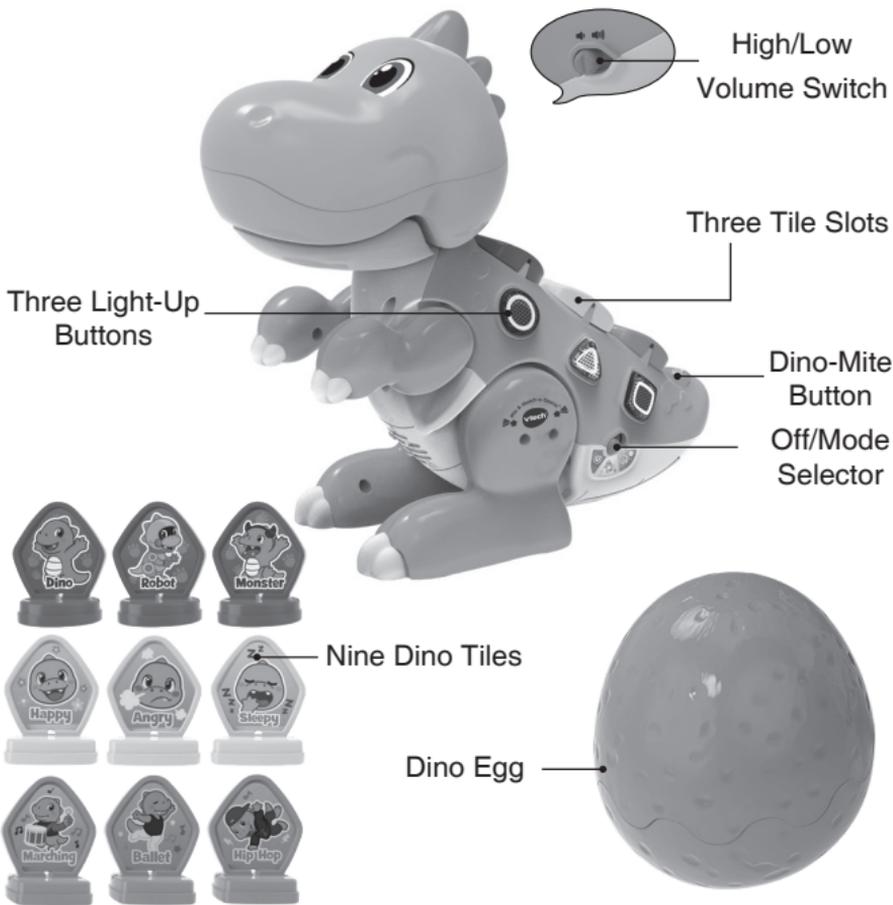

INCLUDED IN THIS PACKAGE

- One **Mix & Match-a-Saurus™**
- Nine dino tiles
- One dino egg
- One parent's guide

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE:

Please keep this parent's guide as it contains important information.

ATTENTION :


Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes et vis d'emballage. Ils ne font pas partie du jouet.

NOTE :

Il est conseillé de conserver ce guide des parents car il comporte des informations importantes.

GETTING STARTED

Unlock the packaging lock:

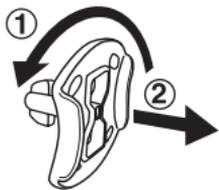


- ① Rotate the packaging lock 90 degrees counterclockwise.
- ② Pull out the packaging lock and discard.

BATTERY INSTALLATION

NOTE: For best performance, remove all factory-installed batteries from the **Mix & Match-a-Saurus™** and use new, alkaline batteries.

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover at the bottom of the unit and open it with a screwdriver.
3. Install 4 new AA size batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure.

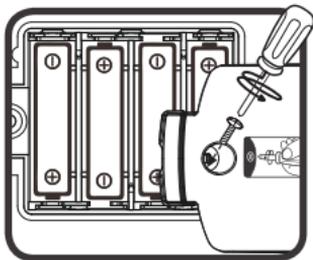

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

PRODUCT FEATURES

1. Off/Mode Selector

Slide the **Off/Mode Selector** to turn the unit **On** and choose an activity. To turn the unit off, slide the **Off/Mode Selector** to **Off** position.



2. High/Low Volume Switch

Slide the **High/Low Volume Switch** to select **Low** or **High** volume.



3. Light-Up Buttons

If there's no **Dino Tile** inserted on Dino's back, press the **Light-Up Button** to learn colors and shapes. If there is a **Dino Tile** inserted, press the buttons to hear phrases about the corresponding tile.



4. Dino-Mite Button

Press the **Dino-Mite Button** to see Dino dance in different styles with different songs.



5. Three Tile Slots

Insert the red character tiles in the round slot, the yellow emotion tiles in the triangle slot and the blue music style tiles in the square slot.



6. Nine Dino Tiles

Each **Dino Tile** represents a characteristic, emotion or music style. Customize Dino by putting the tiles on his back. Once all three slots are filled, Dino will dance and sing according to the combination on his back. There are 27 total combinations to discover.

Red **Dino Tiles** include: dino, robot and monster characteristics.



Yellow **Dino Tiles** include: happy, angry and sleepy emotions.



Blue **Dino Tiles** include: marching, ballet and hip hop music styles.



7. Dino Egg

When done playing, store all of the **Dino Tiles** in the **Dino Egg**.

8. Automatic Shut Off

To preserve battery life, the **Mix & Match-a-Saurus™** will shut off automatically after several minutes without any input. The unit can be turned on again by sliding the **Off/Mode Selector** or by pressing the **Light-Up Buttons** or **Dino-Mite Button**. The unit will also automatically turn off when the batteries are very low.

ACTIVATE NORMAL PLAY MODE

The **Mix & Match-a-Saurus™** is in a try-me mode in the packaging. There are two ways to activate normal play mode:

- 1) Turn the unit **On**. Move the **High/Low Volume Switch** from **High** to **Low**. You will hear two beeps indicating the unit has entered normal mode.
- 2) When the unit is off, move the **High/Low Volume Switch** from **High** to **Low** and then turn the unit **On**.

ACTIVITIES

1. Dino Dances

In this activity, customize Dino by putting the **Dino Tiles** on his back to change his characteristics, emotions and music styles. When Dino's back is filled, he'll sing and dance according to which **Dino Tiles** were inserted. There are 27 different combinations.

Press the **Light-Up Buttons** to learn about colors and shapes or repeat the responses of the inserted **Dino Tile**. Press the **Dino-Mite Button** to see Dino sing and dance based on the inserted tiles.

2. Talk With Dino

Let's play a game with Dino! Put the **Dino Tiles** on Dino's back to hear what he says about the inserted tile. Press the three **Light-Up Buttons** to learn about colors and shapes or repeat the responses. Press the **Dino-Mite Button** to see Dino sing and dance based on the inserted tiles.

SING-ALONG SONG LYRICS

General Songs:

Opening Song

I'm a dinosaur.

I'll sing and show my dance moves.

I can't wait to play with you!

Rewarding Song 1

You are so great, and your moves are awesome, too!
Thanks for playing with me.
Thanks for being you!

Rewarding Song 2

Playing with you is so much fun.
Put in more tiles and let's do it again!

Mode Song 1

We'll be silly and have a great time.
Singing, dancing, even busting a rhyme!

Mode Song 2

I am your dino friend and I wanna talk with you!
Put in some tiles, and we'll play some games, too!

Hip Hop Songs:

Song 1 (Happy + Dino + Hip Hop)

I'm a happy dino and I'm here to say,
I love playing with you each and every day.
Our dancing's fly, our flow is fun.
We can be friends with everyone!

Song 2 (Happy + Robot + Hip Hop)

I'm a happy robot, beep, beep, beep.
I like to move to the robot beat.
Come on now and dance with me,
Dance like a robot, beep, beep, beep.

Song 3 (Happy + Monster + Hip Hop)

Me a happy monster, yes I am.

Let's dance, let's groove, get ready to jam.

Move like a monster, big and strong.

It makes me so happy when you dance along.

Song 4 (Angry + Dino + Hip Hop)

I'm a really angry dinosaur.

Don't get too close 'cause I'm ready to roar!

I may seem sweet, but not today.

'Cause I'm roarin' mad, I just had to say!

Song 5 (Angry + Robot + Hip Hop)

Beep, beep, beep, I'm an angry robot.

I'm so, so mad, I'm getting hot.

I need some space, beep, beep, beep, boop!

Give me a minute, and I'll reboot.

Song 6 (Angry + Monster + Hip Hop)

Me an angry monster, me feel so mad.

'Cause my day wasn't good, it was really bad.

But I'll stomp around and sing this tune,

And know me will feel better soon.

Song 7 (Sleepy + Dino + Hip Hop)

I'm a sleepy dinosaur, ready to snore.

When I get so tired, I make a sleepy roar.

I just need a quick dino-nap, a little snooze.

See you soon!

Song 8 (Sleepy + Robot + Hip Hop)

I'm a sleepy robot, ready to sleep.

Sometimes I wanna stay up, beep, beep, beep, beep.

But it's time to power down, and rest my head.

To get fully charged, I have to go to bed.

Song 9 (Sleepy + Monster + Hip Hop)

Me a sleepy monster, ready for some rest.

All day I made scary faces, did me very best.

All I want to do is catch up on my sleep.

Close my eyes, and snore some monster sized zzzzzs!

Marching Songs:

Song 1 (Happy + Dino + Marching)

Oh when I'm glad,

I like to march.

Oh when I'm glad, I like to march.

Yes, I am happy when I am marching.

And always when I am with you!

Song 2 (Happy + Robot + Marching)

Human, won't you march.

Human, won't you march.

Human, won't you march with me?

Human, won't you march.

Human, won't you march.

Human, won't you march with me?

Singin fee, fi, fiddly-i-o, fee, fi, fiddly-i-ooooo.

Fee, fi, fiddly-i-o.

Marching makes me so happy!

Song 3 (Happy + Monster + Marching)

Happy marching monster, that is me!
Hello, and how are you?
I hope you're feeling wonderful.
Please join me on my march.

Song 4 (Angry + Dino + Marching)

I'm a mad dino, stomp, stomp, stomp.
I'll march it out, stomp, stomp, stomp.
Let it out, march around.
I feel so much better now!

Song 5 (Angry + Robot + Marching)

The robot on the bus is marching mad.
Marching mad.
Marching mad.
The robot on the bus is marching mad.
All through the town.

Song 6 (Angry + Monster + Marching)

I'm a monster and I'm mad, hoorah, hoorah.
I'm a monster and I'm mad, hoorah, hoorah.
Me so mad, so I march mad.
When I get mad, sometimes I feel bad.
But I'll keep marching on, and I know,
I'll feel less mad soon, boom, boom, boom.

Song 7 (Sleepy + Dino + Marching)

Sleepy, sleepy dinosaur.
Can I rest and dino-snore?

Song 8 (Sleepy + Robot + Marching)

I am a bot running on low,
But I can march.
For a little bit, bot, boop.
Powering down.

Song 9 (Sleepy + Monster + Marching)

Rock a bye monster.
No time to sleep.
When the band starts,
Time to march your feet.

Ballet Songs:

Song 1 (Happy + Dino + Ballet)

Haydn Serenade

Song 2 (Happy + Robot + Ballet)

Schumann Happy Farmer

Song 3 (Happy + Monster + Ballet)

Beethoven Minuet in G

Song 4 (Angry + Dino + Ballet)

Alouette

Song 5 (Angry + Robot + Ballet)

Mozart Symphony No. 25

Song 6 (Angry + Monster + Ballet)

Beethoven Symphony No. 5

Song 7 (Sleepy + Dino + Ballet)

Bach/Gounod Ave Maria

Song 8 (Sleepy + Robot + Ballet)

Tchaikovsky Dance of the Sugar Plum Fairy

Song 9 (Sleepy + Monster + Ballet)

Brahms' Lullaby

CARE & MAINTENANCE

1. Keep your **Mix & Match-a-Saurus™** and the **Dino Tiles** clean by wiping them with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our website at vtechkids.com and filling out our Contact Us form located under the Customer Support link. A service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **VTech**[®] products is accompanied by a responsibility that we at **VTech**[®] take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our website at vtechkids.com and filling out our Contact Us form located under the Customer Support link with any problems and/or suggestions that you might have. A service representative will be happy to help you.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Supplier's Declaration of Conformity

Trade Name: VTech®
Model: 5187
Product name: Mix & Match-a-Saurus™
Responsible Party: VTech Electronics North America, LLC
Address: 1156 W. Shure Drive, Suite 200,
Arlington Heights, IL 60004
Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

CAN ICES-3 (B)/NMB-3(B)

**CLASS 1
LED PRODUCT**

**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com

**Read our complete warranty policy online at
*vtechkids.com/warranty***



TM & © 2019 VTech Holdings Limited.
All rights reserved.
Printed in China.
91-003684-000 