

vtech[®]

User's Manual

Paint & Learn Art Easel™



© 2008 VTech

Printed in China

91-001599-000-000 (美)


Dear Parent,

Ever notice the look on your baby's face when they learn something new through their own discovery? These self-accomplished moments are a parent's greatest reward. To help fulfill them, **VTech**[®] created the **Infant Learning**[®] series of toys.

These unique interactive learning toys directly respond to what children do naturally – play! Using innovative technology, these toys react to baby's interactions, making each play experience fun and unique as they learn age-appropriate concepts like first words, numbers, shapes, colors and music. More importantly, **VTech**[®]'s **Infant Learning**[®] toys develop baby's mental and physical abilities by inspiring, engaging and teaching.

At **VTech**[®], we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting **VTech**[®] with the important job of helping your child learn and grow!

Sincerely,

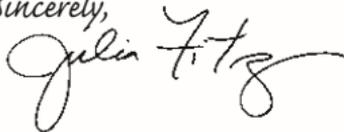


Julia Fitzgerald
Vice President, Marketing
Vtech Electronics, NA

To learn more about the **Infant Learning**[®] and other **VTech**[®] toys, visit www.vtechkids.com

INTRODUCTION

Thank you for purchasing the **VTech® Paint & Learn Art Easel™** learning toy.

The **VTech® Paint & Learn Art Easel™** is designed to stimulate your baby's vivid imagination. Pages of learning fun and colorful pictures teach letters, numbers, animals and shapes. Entertaining songs, upbeat melodies and amusing phrases complete this canvas of creativity!

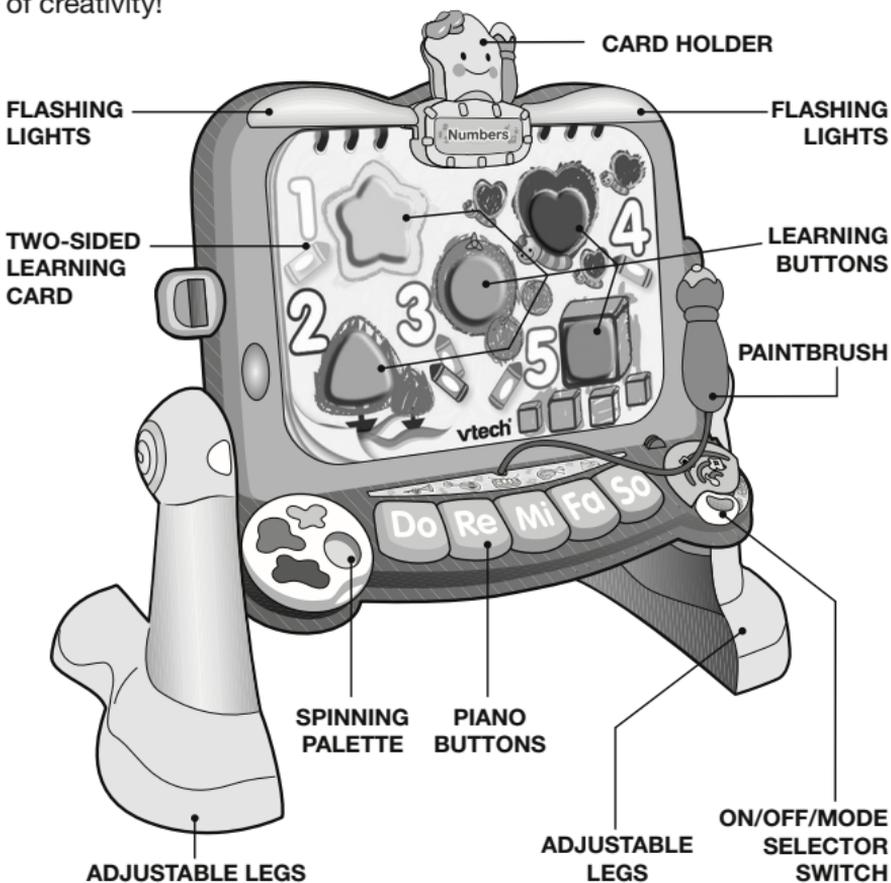

INCLUDED IN THIS PACKAGE


- One VTech® Paint & Learn Art Easel™
- One user's manual.

WARNING: All packing materials, such as tape, plastic sheets, wire ties and tags are not part of this toy, and should be discarded for your child's safety.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit. Use a coin or a screwdriver to loosen the screw.
3. Install 2 new 'AA' (UM-3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure the battery cover.

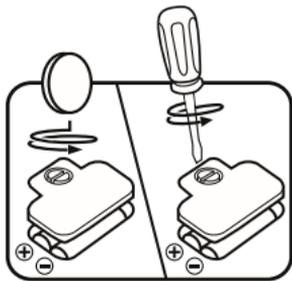

BATTERY NOTICE


- Install batteries correctly observing the polarity (+, -) signs to avoid leakage.
- Do not mix old and new batteries.
- Do not mix batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Remove the batteries from the equipment when the unit will not be used for an extended period of time.
- Always remove exhausted batteries from the equipment.
- Do not dispose of batteries in fire.
- Do not attempt to recharge ordinary batteries.
- The supply terminals are not to be short-circuited.
- Only batteries of the same and equivalent type as recommended are to be used.

WE DO NOT RECOMMEND THE USE OF RECHARGEABLE BATTERIES.

With the **VTech® Paint & Learn Art Easel™**, safety comes first. To ensure your child's safety, please only assemble this product by an adult. Please ensure that the adjustable legs are securely locked into position to avoid injury.


ASSEMBLY INSTRUCTIONS

Attach the adjustable legs at the preferred height. Place the leg over the tab or tabs on the easel, then push the leg onto the easel until you hear a click. Repeat for the other leg. To release the lock, push the white buttons at the top of each leg.

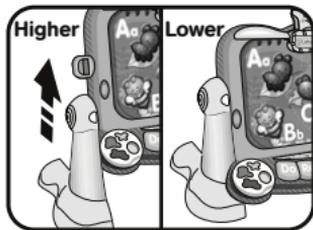

PRODUCT FEATURES

1. To turn the unit **ON**, slide the **ON/OFF/MODE SELECTOR SWITCH** to the **LEARNING MODE** or **MUSIC MODE** position. To turn the unit **OFF**, slide the **ON/OFF/MODE SELECTOR SWITCH** to the **OFF** position.

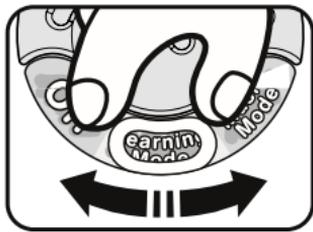

2. **AUTOMATIC SHUT-OFF:**

To preserve battery life, the **VTech® Paint & Learn Art Easel™** will automatically power-down after approximately 45 seconds without input. The unit can be turned on again by pressing any button or spinning the palette.


ACTIVITIES

Slide the **ON/OFF/MODE SELECTOR SWITCH** to the **Learning Mode** or **Music Mode** position to turn the unit on. You will hear funny sound effects, amusing phrases and entertaining songs. The lights will flash with the sounds.

LEARNING MODE

To enter the **Learning Mode**, slide the **ON/OFF/MODE SELECTOR SWITCH** to the **Learning Mode** position.


1. When there is no page on the easel, press the balloons with either the pen or your hand to learn colors.

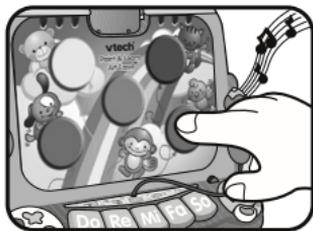


2. Place the Numbers card on the easel and press the shapes by hand to learn numbers and objects. Use the pen to hear amusing nursery rhyme songs about numbers.




3. Place the Letters card on the easel and press the insects with your hand to learn letters and first words. Use the pen to hear fun nursery rhyme songs about letters.

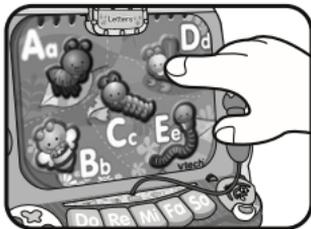

4. Spin the palette on the left-hand side of the easel to hear cheerful phrases, songs and melodies.

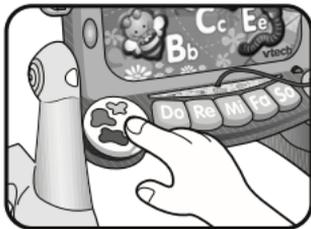


5. Press the piano keys to learn colors and listen to short instrumental tunes while learning corresponding instruments.

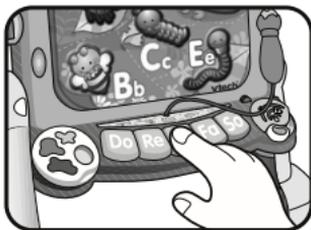


MUSIC MODE

To enter the **Music Mode**, slide the **ON/OFF/MODE SELECTOR SWITCH** to the **Music Mode** position.


1. When there is no page on the easel, press the balloons by hand to hear melodies.

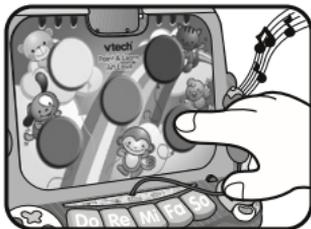


2. Press the pictures by hand on any of the learning cards to hear cheerful melodies or to jam funny sound effects on top of the melodies.

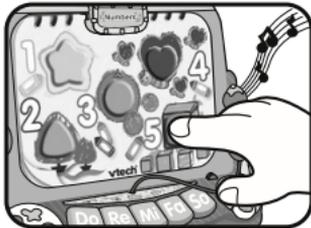


3. Spin the palette to hear an amusing voice as well as Rock & Roll, Jazz, Classical and Hip Hop short tunes. Spin the palette again to accelerate the tempo of the melody being played.

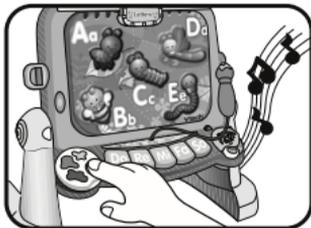

4. Press the piano keys to play notes Do, Re, Mi, Fa, and So. When there is no card on the easel, press the piano keys to hear a melody played one note at a time. Place the Letters or Numbers card on the easel and press the piano keys to change the instruments playing the melody.

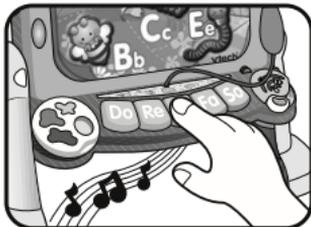

5. Use the pen to hear melodies played section by section. The pen can also be used to touch the pictures on the learning cards and jam funny sound effects over the melodies.

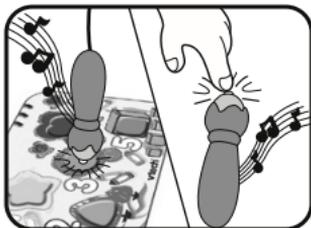

MELODY LIST

1. Twinkle, Twinkle, Little Star
2. Row, Row, Row Your Boat
3. Pop! Goes the Weasel
4. Shoo, Fly
5. The Glow Worm
6. Animal Fair
7. This Old Man

CARE & MAINTENANCE

1. Keep the unit and learning cards clean by wiping with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

For information on this product's warranty, please call **VTech**[®] at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada.

IMPORTANT NOTE:

Creating and developing **Infant Learning** products is accompanied by a responsibility that we at **VTech**[®] take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

THIS CLASS B DIGITAL APPARATUS COMPLIES WITH CANADIAN ICES-003.

CET APPAREIL NUMÉRIQUE DE LA CLASSE B EST CONFORME À LA NORME NMB-003 DU CANADA.

Caution : Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.