

vtech[®]
baby


Instruction Manual

Glow Little Owl™



INTRODUCTION

Thank you for purchasing the **Glow Little Owl™**. The owl features a calming light-up tummy and plays soothing songs, melodies and nature sounds, creating a peaceful and soothing environment. The owl also responds to baby's cries by playing soothing music.

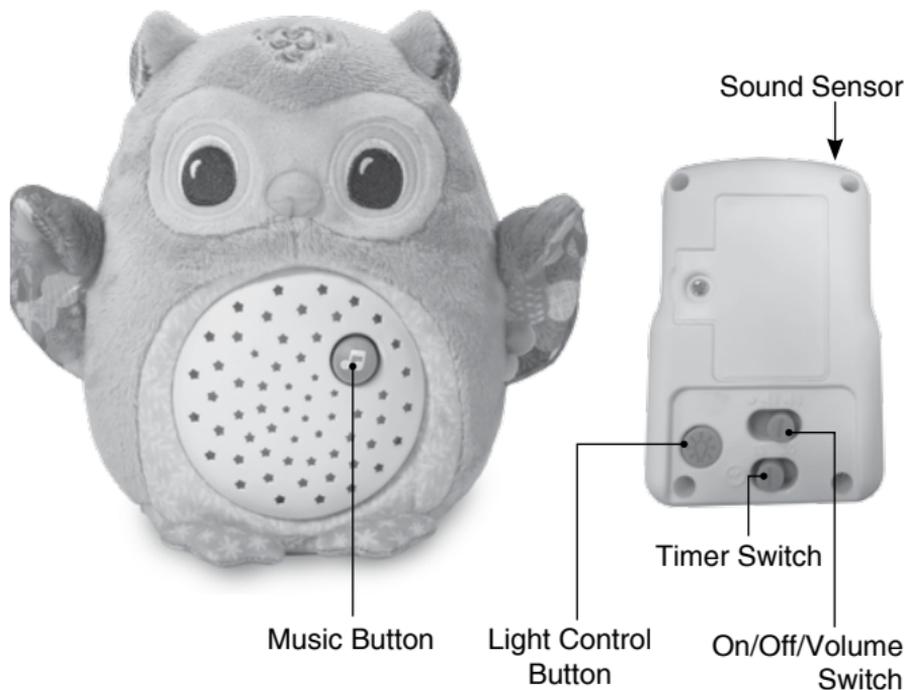

INCLUDED IN THE PACKAGE

- **Glow Little Owl™**
- Quick Start Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.

ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

NOTE

Il est conseillé de sauvegarder ce manuel d'instructions car il comporte des informations importantes.

WARNING

Keep this soft toy out of the sleeping environment for babies under twelve months to avoid suffocation risk.


ATTENTION

Garder cette peluche hors de l'environnement de sommeil des bébés de moins de douze mois pour éviter tout risque de suffocation.

GETTING STARTED

Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the back of the **Electronic Module**, use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

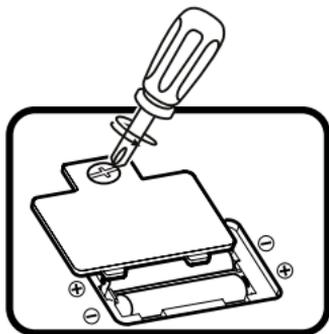

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.



ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.
Tenir les piles ou accumulateurs hors de portée des enfants.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.

- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.


RECHARGEABLE BATTERIES:

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

PRODUCT FEATURES


1. On/Off/Volume Switch

To turn the unit **On**, slide the **On/Off/Volume Switch** located on the **Electronic Module** to the Low volume  or High volume  position. You will hear a sound, a phrase, three songs and 15 melodies. To turn the unit **Off**, slide the **On/Off/Volume Volume Switch** to the **Off** ● position.

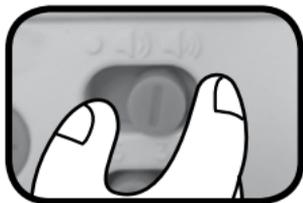


2. Light Control Button

Press the **Light Control Button** to adjust the light intensity levels.

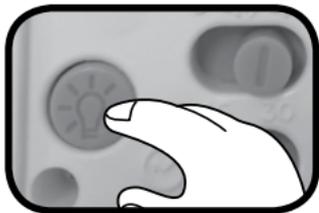

3. Timer Switch

Slide the **Timer Switch** to select 15 or 30 minutes. Once the chosen time has ended, the unit will automatically power down.

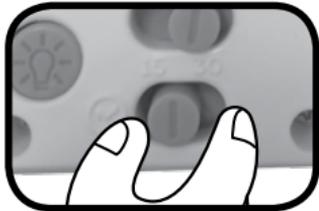

4. Sound Sensor

The **Glow Little Owl™** is equipped with a special sound sensor. Once the selected time setting has ended, the unit will automatically shut off. The sensor will reactivate the program if it detects that your baby's cry has continued for approximately four seconds without interruption. The unit will reactivate and play melodies. The sound sensor cannot be reactivated after being triggered more than 10 times in a row.

5. Automatic Shut-Off

To preserve battery life, the **Glow Little Owl™** will automatically power down after the selected time. The unit can be turned on again by pressing the **Music Button** or when the **Sound Sensor** detects baby's cry.


NOTE

This product is in try-me mode in the packaging. To activate normal play, turn the unit **Off**, then turn the unit back **On**. If the unit powers down or if the light fades out during play, please install a new set of batteries.

ACTIVITIES

1. Music Button

Press the **Music Button** to hear 3 soothing songs followed by soft melodies, nature sounds and gentle white noise. The light will fade in and out slowly with the sound. Press the **Music Button** again to pause the sounds. This will put the owl into sleep mode. Press the **Music Button** again to reactivate the sound.

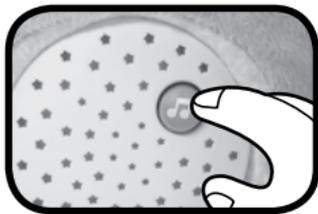

MELODIES

1. Au Clair de la Lune
2. Three Little Kittens
3. Mary Had a Little Lamb
4. Mulberry Bush
5. My Bonnie Lies Over the Ocean
6. On Top of Old Smokey
7. Pussy Cat, Pussy Cat
8. Ride a Cock Horse to Banbury Cross
9. Are You Sleeping?
10. Did You Ever See a Lassie?
11. To a Wild Rose
12. Give My Regards to Broadway
13. London Bridge
14. Lavender's Blue
15. Hickory, Dickory, Dock
16. Für Elise - Beethoven
17. Serenade - Haydn
18. String Quintet in C (Adagio) - Schubert
19. Dance of the Sugar Plum Fairy - Tchaikovsky
20. Greensleeves
21. Spring Song - Mendelssohn
22. Cello Suite No. 1 in G Major - Bach
23. Sonata No.16 - Mozart
24. Kinderszenen - Schumann
25. Canon in D - Pachelbel
26. Blue Danube Waltz - Strauss
27. Swan Lake Waltz - Tchaikovsky
28. Morning Mood - Greig
29. Sleeping Beauty Waltz - Tchaikovsky
30. Ode To Joy - Beethoven
31. Lullaby - Brahms
32. Rock-a-bye Baby
33. Hush Little Baby

SONG LYRICS

Song 1

Lullaby and sleep tight,
Up above the moon is bright.
Stars twinkle and dance,
Sleep and dream till you wake.

Song 2

Sleepy time baby, cuddle up tight,
The stars are all out twinkling bright,
Close your eyes, it's warm and snug,
Dream along baby till you wake for a hug.

Song 3

Hush little baby,
Time to sleep,
I'll sing to you till you fall asleep.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.
5. The owl is hand washable. Please remove the **Electronic Module** before cleaning and follow the washing instructions on the tag.



TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

IMPORTANT NOTE:

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S. or **1-877-352-8697** in Canada, or by going to our website at **vtechkids.com** and filling out our **Contact Us** form located under the **Customer Support** link. Creating and developing VTech products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions that you might have. A service representative will be happy to help you.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television

reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Supplier's Declaration of Conformity

47 CFR § 2.1077 Compliance Information

Trade Name:	VTech®
Model:	566900
Product Name:	Glow Little Owl™
Responsible Party:	VTech Electronics North America, LLC
Address:	1156 W. Shure Drive, Suite 200 Arlington Heights, IL 60004
Website:	vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

CAN ICES-003(B)/NMB-003(B)

**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com
vtechkids.ca

Read our complete warranty policy online at
vtechkids.com/warranty
vtechkids.ca/warranty

