

**VTECH**<sup>®</sup>

**LITTLE SMART**

**SPIN 'n GRIN™ Snail**

**USER'S MANUAL**



© VTECH  
Printed in China  
91-01305-000 (美)

***Dear Parent:***

*At VTech® we know that a child has the ability to do great things.*


*That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. Whether it's introducing numbers and letters, identifying colors and shapes, or stimulating senses with lights and music, all VTech® infant and toddler learning products encourage your child's natural growth and discovery skills.*

*When it comes to providing electronic learning products that enlighten, entertain, and develop minds, at VTech® we see the potential in every child.*

# INTRODUCTION

Thank you for purchasing the **VTECH® LITTLE SMART Spin ‘n Grin™ Snail** learning toy! This product is one of a family of high quality **LITTLE SMART®** electronic learning toys. We at **VTECH®** are committed to providing the best possible products to entertain and educate your child. Should you have any questions or concerns, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-800-267-7377 in Canada.

The **LITTLE SMART Spin ‘n Grin™ Snail** is an interactive learning toy designed for toddlers 12 months and up. With a turning head, bobbing eyes, and spinning shell, this friendly pull-toy comes to life as it moves across the floor. Flashing lights, silly bug sound effects, and ten built-in melodies provide more sensory stimulation and reward. The **LITTLE SMART Spin ‘n Grin™ Snail** also features big buttons that introduce baby to basic colors through sight and sound. All in all, it's hours of spinning fun for little ones on the run!

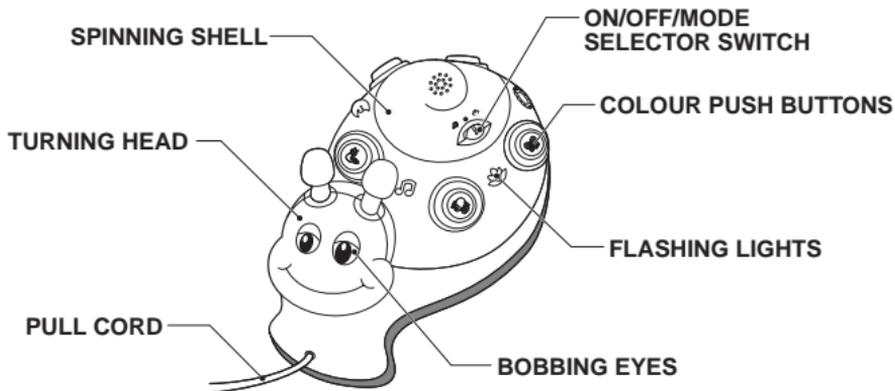

# INCLUDED IN THIS PACKAGE

- One VTECH® LITTLE SMART Spin 'n Grin™ Snail learning toy.
- One instruction manual.

**WARNING: All packing materials, such as tape, plastic sheets, wire ties and tags are not part of this toy, and should be discarded for your child's safety.**

## BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Turn the unit upside down to locate the battery cover on the bottom of the **SPINNING SHELL**. (see figure 1)
3. Use a screwdriver or coin to loosen the screw. (see figure 2)
4. Adjust the position to open the battery cover.
5. Install 2 new "AA" (UM-3/LR6) batteries following the diagram inside the battery box. (The use of new, alkaline batteries is recommended for maximum performance.)
6. Replace the battery cover and tighten the screw to secure the battery cover. (see figure 3)

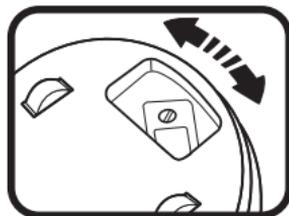


Figure 1

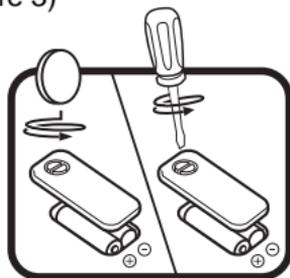


Figure 2

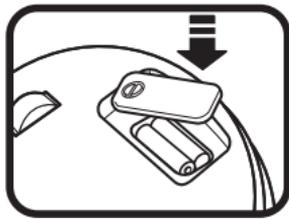


Figure 3

## **BATTERY NOTICE**

- Install batteries correctly observing the polarity (+,-) signs to avoid leakage.
- Do not mix old and new batteries.
- Do not use batteries of different types.
- Remove exhausted or new batteries from the equipment when the unit will not be used for an extended period of time.
- Do not dispose of batteries in fire.
- Do not attempt to recharge ordinary batteries.
- The supply terminals are not to be short-circuited.

## **WE DO NOT RECOMMEND THE USE OF RECHARGEABLE BATTERIES.**

**NOTE:** If for some reason the program/activity stops working, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.


If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-800-267-7377 in Canada, and a service representative will be happy to help you.

# TO BEGIN PLAY

1. To begin play, slide the **ON/OFF/ MODE SELECTOR SWITCH** to the **TALKING MODE ( 😊 )** or **MUSIC MODE ( 🎵 )** position. You will hear a short tune.



2. Lights will flash randomly with all the talking, music and sound effect activities.

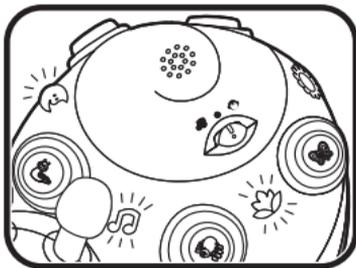

3. To adjust the volume, locate the **VOLUME CONTROL SWITCH** on the bottom of the unit. Slide it to the ( 🎧 ) position for **LOW VOLUME** or to the ( 🔊 ) position for **HIGH VOLUME**.



4. To turn the unit **OFF**, slide the **ON/OFF/MODE SELECTOR SWITCH** to the **OFF (●)** position.




**Note:** To preserve battery life, the **LITTLE SMART Spin 'n Grin™ Snail** learning toy will automatically power-down after several minutes without input. The unit can be turned on again by pressing any button or by pulling the toy.


## ACTIVITIES

### A. TALKING MODE


1. Slide the **ON/OFF/MODE SELECTOR SWITCH** to the **TALKING MODE (☺)** position. You will hear a short tune.

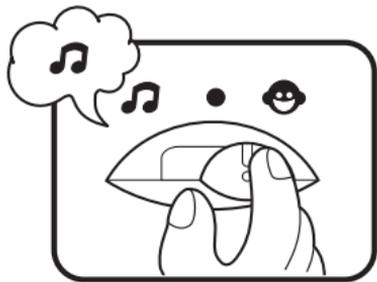

2. Press one of the **COLOR PUSH BUTTONS** to hear the color identified followed by a fun bug sound effect .

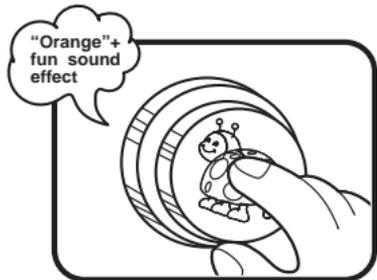

3. Pull the toy to hear randomly played silly melodies. See the head and eyes move and the shell spin .

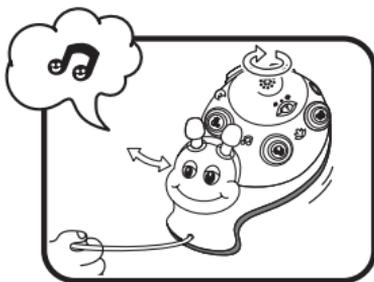


## B. MUSIC MODE


1. Slide the **ON/OFF/MODE SELECTOR SWITCH** to the **MUSIC MODE ( 🎵 )** position. You will hear a short tune.




2. Press one of the **COLOR PUSH BUTTONS** to hear a fun bug sound effect followed by one of two melodies.

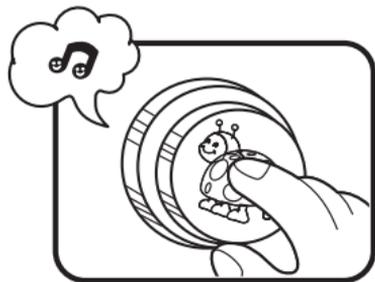

3. Press the color push button again while the melody is playing. You will hear silly melody play.

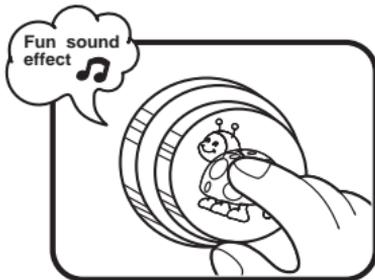

4. Pull the toy to hear randomly played silly melodies. See the head and eyes move and the shell spin.

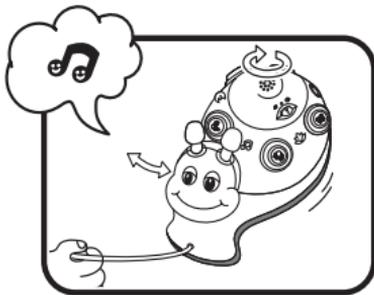

### **TEN BUILT-IN MELODIES:**

- Yankee Doodle
- Sailing Sailing
- Hickory Dickory Dock
- Camptown Races
- Row Row Row Your Boat
- Looby Loo
- Skip To My Lou
- All Around the Mulberry Bush
- Rock-a-bye Baby
- Bicycle Built For Two

## **CARE AND MAINTENANCE**

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not being used for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

### **IMPORTANT NOTE**

Creating and developing Infant/Toddler products is accompanied by a responsibility that we at **VTECH**<sup>®</sup> take very seriously. We make every effort to ensure the accuracy of the information which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-800-267-7377 in Canada with any problems and/or suggestions that you might have. A service representative will be happy to help you.

#### **Note:**

This equipment generates and uses radio frequency energy and if not installed and used properly, that is, in strict accordance with the manufacturer's instructions, it may cause interference to radio and television reception. It has been type tested and found to comply within the limits for a Class B computing device in accordance with the specifications in Sub-part J of Part 15 FCC Rules, which are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference with radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- reorient the receiving antenna
- relocate this product with respect to the receiver
- move this product away from the receiver