

vtech[®]

User's Manual

Tug & Teach Sailboat™



© 2011 VTech
Printed in China
91-002539-000-000 (美)

Dear Parent,

Ever notice the look on your baby's face when they learn something new through their own discovery? These self-accomplished moments are a parent's greatest reward. To help fulfill them, VTech® created the **Infant Learning**® series of toys.

These unique interactive learning toys directly respond to what children do naturally – play! Using innovative technology, these toys react to baby's interactions, making each play experience fun and unique as they learn age-appropriate concepts like first words, numbers, shapes, colors and music. More importantly, VTech®'s **Infant Learning**® toys develop baby's mental and physical abilities by inspiring, engaging and teaching.

At VTech®, we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting VTech® with the important job of helping your child learn and grow!

Sincerely,


Your friends at VTech®

To learn more about the **Infant Learning**® series and other VTech® toys, visit www.vtechkids.com

INTRODUCTION

Thank you for purchasing the **VTech® Tug & Teach Sailboat™** learning toy.

Set sail on an adventure of learning and imaginative play with the **VTech® Tug & Teach Sailboat™!** Press the hippo or the life ring button to hear a variety of playful sounds, phrases and songs. Pull on the dolphin to hear a variety of voice, sound or musical responses and watch as the dolphin is pulled back toward the sailboat. Let's sail upon the sea, splashing so merrily.

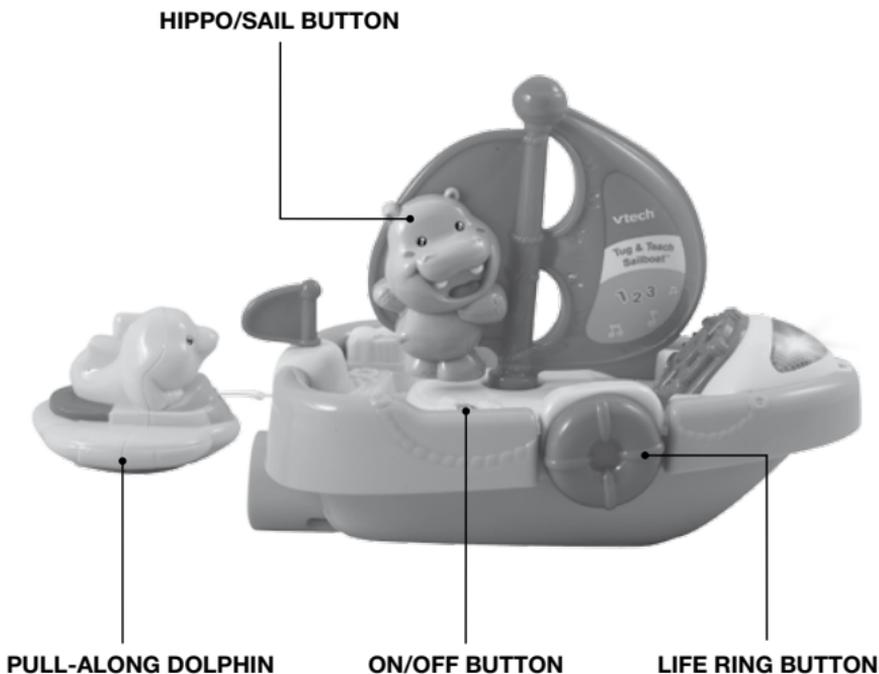

INCLUDED IN THIS PACKAGE

- One VTech® Tug & Teach Sailboat™ learning toy
- One instruction manual

WARNING:

All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

ATTENTION :

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches et étiquettes. Ils ne font pas partie du jouet.


NOTE:

Please keep instruction manual as it contains important information.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit. Use a screwdriver to loosen the screw.
3. Install 2 new 'AAA' (AM-4/LR03) batteries following the diagram inside the battery box.
4. Replace the battery cover and tighten the screw to secure.
5. When closing the battery cover, ensure that the screw is tightened securely to avoid water leakage.

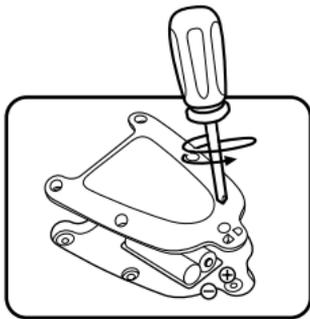

BATTERY NOTICE

- The use of new alkaline batteries is recommended for maximum performance.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged (if removable).
- Rechargeable batteries are only to be charged under adult supervision (if removable).
- Do not mix old and new batteries.
- Do not mix batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium)
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- The toy is not to be connected to more than the recommended number of power supplies.
- Do not dispose of batteries in fire.

WE DO NOT RECOMMEND THE USE OF RECHARGEABLE BATTERIES.

PRODUCT FEATURES

1. ON/OFF BUTTON

To turn the unit **ON**, press the **ON/OFF BUTTON**. To turn the unit **OFF**, press the **ON/OFF BUTTON** a second time.



2. AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech® Tug & Teach Sailboat™** will automatically power-down after approximately 30 seconds without input. The unit can be turned on again by pressing any button.


Please note: When the speaker fills up with water, the volume may decrease and the sailboat may not float upright. To correct the problem, remove the sailboat from the water and allow the water to drain away from the speaker. Return the product to the water and continue playing.

WARNING:


- Batteries must be changed by an adult.
- Only use this product in water between 10 and 45 degrees celsius, 50 and 104 degrees Fahrenheit.
- This product cannot be used in salt water.
- Do not leave this product submerged in water for a long period of time.
- This product should only be operated in water when fully assembled in accordance with the instructions.
- To prevent drowning, never leave a child unattended in the bath.
- Use a thermometer to check the temperature of the water before sitting a child in the bath. Toddlers have very sensitive skin and can burn easily if the water is too hot.
- When finished playing, remove the unit from the water and pour out any remaining water. Rinse the unit with clean water and wipe with a dry cloth. Suspend the unit in an upright position to dry.

ACTIVITIES


1. Press the **on/off button** to turn the unit on. You will hear a variety of fun sounds, a sung song and playful phrase. The light will flash with the sound.

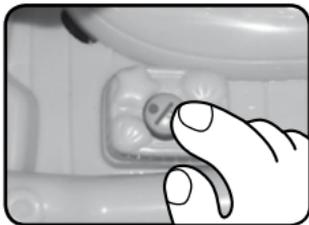


2. Pull the **dolphin** to hear fun sound effects, sailing songs, melodies and playful phrases. Pull the dolphin while a melody is playing to hear a fun sound and increase the tempo of the melody. The dolphin will propel itself back to the sailboat and the light will flash with the sound.

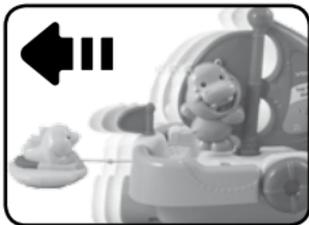

3. Press the **hippo/sail button** to hear fun sounds, short tunes and playful melodies. Press the sail several times quickly to hear a variety of fun sounds. The light will flash with the sound.

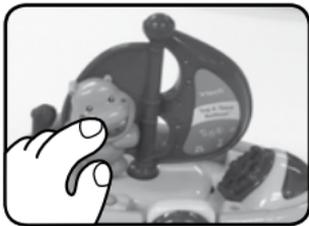

4. Press down on the **life ring button** to hear fun sounds, learning phrases and short tunes. The light will flash with the sound.

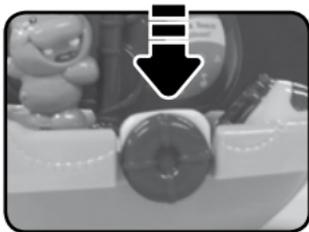

MELODY LIST

1. Sailing, Sailing
2. Alouette
3. My Bonnie Lies Over the Ocean
4. Polly Wolly Doodle
5. This Old Man
6. Twinkle, Twinkle Little Star

SUNG SONG LYRICS

SONG 1

Let's sail upon the sea,
Splashing so merrily.
Let's sail upon the sea,
So fun, just you, me and the sea!

SONG 2

Sailing fast and slow,
Bounding over the sea.
Sailing merrily!

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Make sure to empty the water out of all the elements of the unit and rinse thoroughly before drying so no sediment or cleaning products are left on the unit.
4. Make sure to dry all the elements of the unit before storing.
5. Remove the batteries when the unit will not be in use for an extended period of time.
6. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

For information on this product's warranty, please call **VTech®** at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada.

IMPORTANT NOTE:

Creating and developing **Infant Learning** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S., or 1-877-352-8697 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If

this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

THIS CLASS B DIGITAL APPARATUS COMPLIES WITH CANADIAN ICES-003.
CET APPAREIL NUMÉRIQUE DE LA CLASSE B EST CONFORME À LA NORME NMB-003 DU CANADA.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

