


Sing & Learn Musical MIC™

User's Manual

BATTERY INSTALLATION

1. Make sure the unit is turned OFF.
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw.
3. Install 3 new 'AAA' (UM-4/LR03) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure the battery cover.

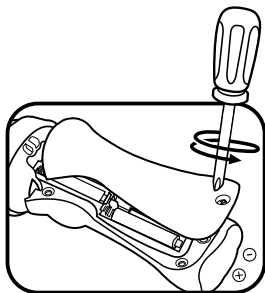

BATTERY NOTICE


- The use of new alkaline batteries is recommended for maximum performance.
- Install batteries correctly observing the polarity (+, -) signs to avoid leakage.
- Do not mix old and new batteries.
- Do not mix batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Remove the batteries from the equipment when the unit will not be used for an extended period of time.
- Always remove exhausted batteries from the equipment.
- Do not dispose of batteries in fire.
- Do not attempt to recharge ordinary batteries.
- The supply terminals are not to be short-circuited.
- Only batteries of the same and equivalent type as recommended are to be used.

WE DO NOT RECOMMEND THE USE OF RECHARGEABLE BATTERIES.

PRODUCT FEATURES

1. ON/OFF/MODE SELECTOR SWITCH

To turn the unit ON, slide the ON/OFF/MODE SELECTOR SWITCH to the MUSIC MODE [🎵] or the MICROPHONE MODE [🎤] position. To turn the unit OFF, slide the ON/OFF/MODE SELECTOR SWITCH to the OFF [●] position.

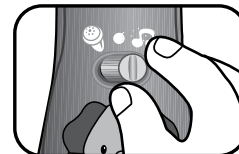

2. AUTOMATIC SHUT-OFF

To preserve battery life, the VTech® Sing & Learn Musical MIC™ will automatically power-down after approximately 30 seconds without input. The unit can be turned on again by pressing any button.

ACTIVITIES

1. Slide the **on/off/mode selector switch** to turn the unit on and choose a mode of play.
2. Turn the **animal dial** to hear animal names, animal sounds and melodies in the music mode and animal sounds in the microphone mode. The light will flash with the sound.
3. Press the **arrow button** to hear a variety of songs in the music mode and random melodies in the microphone mode. The light will flash with the sound.
4. Press the **puppy button** to hear a short phrase and random melody with the puppy barking along in the music mode and fun sounds in the microphone mode. The light will flash with the sound.
5. Press the **style button** in the music mode to hear the style introduced followed by a random melody. Press the style button when a melody is playing to hear the style introduced then the melody will play in the related style. Press the style button in the microphone mode to hear the style introduced followed by a short tune. The light will flash with the sound.
6. Press the **animal button** to hear animal sounds and random melodies in the music mode and animal sounds in the microphone mode. The light will flash with the sound.

MELODY LIST

- | | |
|------------------------------|-----------------------------|
| 1. Bingo | 9. Farmer in the Dell |
| 2. Three Little Kittens | 10. Home on the Range |
| 3. Three Blind Mice | 11. Happy Farmer |
| 4. Listen to the Mockingbird | 12. Froggie Went a Courtin' |
| 5. Chicken Reel | 13. Pop! Goes the Weasel |
| 6. Old Grey Mare | 14. Ring Around the Rosy |
| 7. Hey Diddle Diddle | 15. Jack and Jill |
| 8. Baa, Baa, Black Sheep | |

SONG LYRICS

SONG 1 (to the tune of Old MacDonald Had a Farm)

Old MacDonald had a farm, E-I-E-I-O.
And on his farm he liked to sing, do-re-mi-fa-so.

SONG 2

Clap your hands and dance around.
Move your body to the beat.

SONG 3

Skipping, hopping, twirling, dancing too.
The music makes me want to move and get in the groove.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

For information on this product's warranty, please call **VTech®** at 1-800 521-2010 in the U.S. or 1-877-352-8697 in Canada.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

THIS CLASS B DIGITAL APPARATUS COMPLIES WITH CANADIAN ICES-003.
CET APPAREIL NUMÉRIQUE DE LA CLASSE B EST CONFORME À LA NORME NMB-003 DU CANADA.