

Disney
Junior

User's Manual

MINNIE

ABC Fashion Purse™



3-6
Years

vtech®

© Disney
Visit DisneyJunior.com

© 2015 VTech
Printed in China
91-003069-001 (US)

Dear Parent,

At **VTech**[®], we know how important the first day of school is for your child. To help prepare preschoolers for this important event, **VTech**[®] has developed the **Preschool Learning**[™] series of interactive toys.

Preschool Learning[™] features fun characters and inviting school themes that use technology to capture a child's attention and teach important preschool skills like spelling, counting and the alphabet. These vital skills are taught in a way that's both fun and highly engaging to maintain a child's interest. Children will also be introduced to fun school subjects such as art class, music class and even recess! With **Preschool Learning**[™], learning is fun from day one!

At **VTech**[®], we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting **VTech**[®] with the important job of helping your child learn and grow!

Sincerely,

Your friends at **VTech**[®]

To learn more about **VTech**[®] toys, visit vtechkids.com

INTRODUCTION

Thank you for purchasing the Disney Minnie Mouse **ABC Fashion Purse™!**

This interactive purse introduces letters, numbers, objects and music through seven fun activities. Using the zipper slider, choose an activity and use the letter and number buttons to learn and answer questions while listening to Minnie Mouse say encouraging phrases.



INCLUDED IN THIS PACKAGE


- One **VTech® ABC Fashion Purse™**
- One user's manual

WARNING: All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

ATTENTION: Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches et étiquettes. Ils ne font pas partie du jouet.

NOTE: Please keep this user's manual as it contains important information.

Unlock the packaging locks:

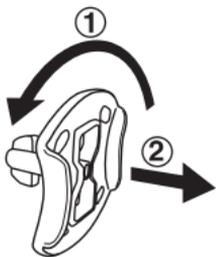


- ① Rotate the packaging lock 90 degrees counter-clockwise.
- ② Pull out the packaging lock.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is **OFF**.
2. Locate the battery cover on the back of the unit. Use a coin or screwdriver to loosen the screw.
3. Install 2 new "AA" (AM-3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure the battery cover.

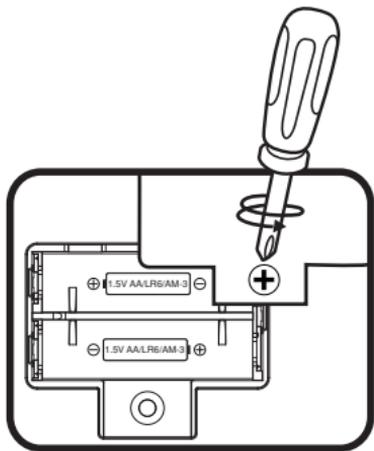

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

PRODUCT FEATURES

1. VOLUME CONTROL SWITCH



Located on the back of the product, the **VOLUME CONTROL SWITCH** can be moved to the right for higher volume or to the left for lower volume.

2. ON/OFF BUTTON



To turn the unit **ON**, press the **ON/OFF BUTTON** (⏻). Press the **ON/OFF BUTTON** again to turn the unit **OFF**.

3. ACTIVITY SLIDER



Slide the **ACTIVITY SLIDER** to the left or right to select an activity to play.

4. LIGHT-UP LETTER BUTTON



Press the **LIGHT-UP LETTER BUTTONS** to learn letters, objects, play music or select an answer in related activities.

5. LIGHT-UP HELP BUTTON



Press the **HELP BUTTON** to hear a short tune, repeat the current question or get a helpful hint.

6. NUMBER BUTTONS



Press the **NUMBER BUTTONS** to learn numbers, counting or hear piano notes.

7. AUTOMATIC SHUT-OFF

To preserve battery life, the **ABC Fashion Purse™** will automatically shut off after approximately 90 seconds without input. The unit can be turned on again by pressing the **ON/OFF BUTTON**. The unit will also automatically turn off when the batteries are very low.

ACTIVITIES

ACTIVITY 1: LETTERS



Go on a learning adventure with Minnie Mouse! Move the **ACTIVITY SLIDER** to the first position to enter this activity. Press any of the **LIGHT-UP LETTER BUTTONS** to learn about letters and the sounds they make.

ACTIVITY 2: OBJECTS



Minnie Mouse is cleaning out her purse. Move the **ACTIVITY SLIDER** to the second position to enter this activity. Press any of the **LIGHT-UP LETTER BUTTONS** to learn about the objects on the **LIGHT-UP LETTER BUTTON** or how to spell the object's name.

ACTIVITY 3: LETTER QUIZ



Minnie Mouse is organizing her purse. Move the **ACTIVITY SLIDER** to the third position to enter this activity. After the opening response, you will be asked to find a specific letter on the purse. Press the correct **LIGHT-UP LETTER BUTTON** to answer the question. After you answer five questions correctly, you will be asked more difficult questions about letter order.

ACTIVITY 4: FIND IT



Minnie Mouse is looking for specific objects in her purse. Move the **ACTIVITY SLIDER** to the fourth position to enter this activity. After the opening response, you will be asked to find specific objects by their name or the sounds they make. Press the correct **LIGHT-UP LETTER BUTTON** to answer the question.

ACTIVITY 5: SUPER SPELLER



Minnie Mouse is writing a message to Mickey. Move the **ACTIVITY SLIDER** to the fifth position to enter this activity. After the opening response, you will hear a word and how to spell it. Watch carefully as the buttons light-up to spell the word. Then, press the **LIGHT-UP LETTER BUTTONS** in the correct order to spell the word.

ACTIVITY 6: COUNTING



The polka-dots on Minnie Mouse's purse are lighting up! Move the **ACTIVITY SLIDER** to the sixth position to enter this activity. After the opening response, the lights will light-up one-by-one. Count the lights, and press the correct **NUMBER BUTTON** to answer the question.

ACTIVITY 7: MUSIC TIME



Time for a song! Move the **ACTIVITY SLIDER** to the seventh position to enter this activity. Press any of the **LIGHT-UP LETTER BUTTONS** to play a melody. Press the **HELP BUTTON** to repeat a melody or a **NUMBER BUTTON** to play a piano note.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

IMPORTANT NOTE

Creating and developing **VTech® Preschool Learning** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:
(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION.
CAN ICES-3 (B)/NMB-3(B)



PRODUCT WARRANTY

This Warranty is applicable only to the original purchaser, is non-transferable and applies only to "VTech" products or parts. This product is covered by a 3-month Warranty from the original purchase date, under normal use and service, against defective workmanship and materials. This Warranty does not apply to (a) consumable parts, such as batteries; (b) cosmetic damage, including but not limited to scratches and dents; (c) damage caused by use with non-VTech products; (d) damage caused by accident, misuse, unreasonable use, immersion in water, neglect, abuse, battery leakage, or improper installation, improper service, or other external causes; (e) damage caused by operating the product outside the permitted or intended uses described by VTech in the owner's manual; (f) a product or part that has been modified (g) defects caused by normal wear and tear or otherwise due to the normal aging of the product; or (h) if any VTech serial number has been removed or defaced.

Prior to returning a product for any reason, please notify the VTech Consumer Services Department, by sending an email to vtechkids@vtechkids.com or calling 1-800-521-2010. If the service representative is unable to resolve the issue, you will be provided instructions on how to return the product and have it replaced under Warranty. Return of the product under Warranty must adhere to the following rules:

If VTech believes that there may be a defect in the materials or workmanship of the product and can confirm the purchase date and location of the product, we will at our discretion replace the product with a new unit or product of comparable value. A replacement product or parts assumes the remaining Warranty of the original product or 30 days from the date of replacement, whichever provides longer coverage.

THIS WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL, WRITTEN, STATUTORY, EXPRESS OR IMPLIED. IF VTECH CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY AND TO THE REPLACEMENT SERVICE AS DETERMINED BY VTECH IN ITS SOLE DISCRETION.

To the extent permitted by law, VTech will not be responsible for direct, special, incidental or consequential damages resulting from any breach of Warranty.

This Warranty is not intended to persons or entities outside the United States of America. Any disputes resulting from this Warranty shall be subject to the final and conclusive determination of VTech.