

# Using the V-MOTION™ Wireless Controller

( This is an update to page 8 of the User's Manual )

Thank you for purchasing the V-MOTION™ Active Learning System. Please read the User's Manual carefully before playing.


## Connecting to the Console - One-Player Mode




- Locate the **PLAYER 1/OFF/PLAYER 2** Switch on the bottom of the controller. Move the switch to **PLAYER 1**. (Figure 3)  
**Note:** When only one wireless joystick is connected, please set the controller to **PLAYER 1**.
- Make sure the controller's Motion Sensor Signal is directly facing the **V-MOTION™** console . (Figure 4)
- When the direction lights and the light on the **V-MOTION™** console stop blinking, the connection is complete. (Figure 5)
- Move the **PLAYER 1/OFF/PLAYER 2** Switch to **OFF** when controller is not in use. (Figure 6)




(Figure 3)

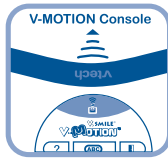

(Figure 4)

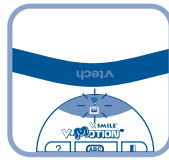


(Figure 5)

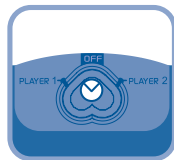

(Figure 6)

## Connecting to the Console - Two-Player Mode

- Locate the **PLAYER 1/OFF/PLAYER 2** Switch on the bottom of the controller. Move the switch to **PLAYER 2**. (Figure 7)
- Repeat the steps above to be sure the controller is connected for **PLAYER 2**.

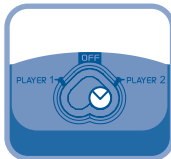

(Figure 7)

If you have a problem that cannot be solved by using this manual, we encourage you to visit us online or contact our Consumer Services Department with any problems and/or suggestions that you might have. A support representative will be happy to assist you.

91-002299-001-000 (US)

vtech