



Parent's Guide

Time to be a Hero Learning Tablet



© 2017 Frog Box/Entertainment One UK Limited
91-003448-001 ©

INTRODUCTION

Thank you for purchasing the **VTech® Time to be a Hero Learning Tablet!**

Join Catboy, Owlette and Gekko as they go into the night to save the day! The **VTech® Time to be a Hero Learning Tablet** features six exciting activities that help reinforce learning of letters, phonics, rhyming, matching and problem solving! With fun animations, cool sound effects, character voices and more, your child will love joining this learning adventure with the PJ Masks!



INCLUDED IN THIS PACKAGE

- One VTech® Time to be a Hero Learning Tablet
- One Parent's Guide

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.


NOTE: Please keep this parent's guide as it contains important information.

ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes et vis d'emballage. Ils ne font pas partie du jouet.

NOTE : Il est conseillé de conserver ce guide des parents car il comporte des informations importantes.

Unlock the packaging locks:

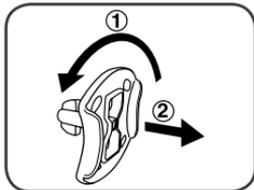


- ① Rotate the packaging lock 90 degrees counter-clockwise.
- ② Pull out the packaging lock.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit. Use a coin or screwdriver to loosen the screw.
3. Install 2 new AA (LR6/AM-3) batteries into the compartment as illustrated. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure.

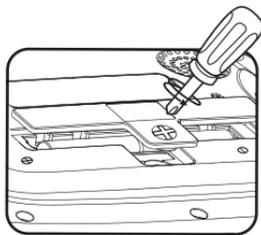

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

PRODUCT FEATURES

1. ON/OFF BUTTON

To turn the unit on, press the **On/Off Button**. Press the **On/Off Button** again to turn the unit off.

2. 6 ACTIVITY BUTTONS

Press one of the **Activity Buttons** to choose any of the six activities.



3. LETTER BUTTONS

Press the **Letter Buttons** to learn letters or to answer letter-related questions.



4. ARROW BUTTONS

Press the **Arrow Buttons** to navigate on the screen or to select an option.

5. OK BUTTON

Press the **OK Button** to confirm a selection.



6. 3 CHARACTER BUTTONS

Press the three **Character Buttons** (Catboy, Owlette, Gekko) on the tablet to play an animation of that character with a brief introduction or to play some fun phrases related to the characters in each game.



7. SETTINGS BUTTON



Press the **Settings Button** to adjust screen contrast and sound volume. There are three screen contrast options and three volume levels. Use the **Left Arrow** button to reduce the volume level or contrast, or use the **Right Arrow** button to increase the volume level or contrast and then press the **OK Button** to confirm.



8. MUSIC ON/OFF BUTTON



Press the **Music On/Off Button** to turn the background music on or off.



9. AUTOMATIC SHUT OFF

To preserve battery life, the **Time to be a Hero Learning Tablet** will automatically turn off after several minutes of inactivity. The unit can be turned on again by pressing the **On/Off** button. The unit will also automatically turn off when the batteries are very low. A warning will be displayed on screen as a reminder to change the batteries.

TO BEGIN PLAY

- Press the **On/Off** button to turn the unit **On**. A short animation will play and you will be asked to select an activity.
- Press an activity button to play, or press one of the **Character Buttons** on the tablet to play an animation or to play a fun phrase related to that character.



ACTIVITIES

1. Letter Fun

Let's explore the Picture Player together. Press any letter button to learn about letters, phonics and words.



2. Matching Phonics

Oh no! Luna Girl's moths have messed with the Picture Player and the data is not displaying properly. Owlette needs your help to fix the Picture Player by matching the letters with their letter sounds. Press a letter to answer.

There are three levels of play with varying degrees of interference hiding the letters.



3. Letter Eggs

Watch out! Romeo is launching spoiled eggs all over the city. Help the PJ Masks defend the city from the stinky rotten eggs. Type the letters as they appear to destroy the eggs before they hit the PJ Masks. There are three levels of speed for the letters.



4. Rhyming Words

Night Ninja has hidden Master Fang's sword in the park. Help Catboy find the sword.

A word will be shown at the bottom of the screen. Press the Left or Right Arrow Button to choose a tree with the word that rhymes with the word at the bottom of the screen. Then press OK to confirm. There are three levels of difficulty for the pairs of rhyming words.



5. Super Gekko Camouflage

Gekko is hiding from Night Ninja. Help him match the pattern on the wall to hide.

Press the Left or Right Arrow Button to choose the matching pattern, then press OK to confirm.

There are three levels of difficulty for the patterns.



6. Shapes Maze

Oh, no! Romeo has captured Owlette and Gekko, and Catboy needs your help to rescue them.

There are a series of doors with different shapes shown on the screen. Doors with matching shapes are linked to one another.

Press the Left or Right Arrow Button to move Catboy. Then, press the OK button to enter a door.

For example, if Catboy enters a door with a circle, he will exit from another door with a circle on it.

Continue to move Catboy until he reaches the cage where he will release Owlette and Gekko.

There are three levels of difficulty from simple to complex shapes on the doors.



CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit sit for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our website at vtechkids.com and filling out our Contact Us form located under the Customer Support link. A service representative will be happy to help you.

IMPORTANT NOTE

Creating and developing VTech® products is accompanied by a responsibility that we at VTech® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our website at vtechkids.com and filling out our Contact Us form located under the Customer Support link with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio

communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:
(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION.

CAN ICES-3 (B)/NMB-3(B)



PRODUCT WARRANTY

This Warranty is applicable only to the original purchaser, is non-transferable and applies only to "VTech" products or parts. This product is covered by a 3-month Warranty from the original purchase date, under normal use and service, against defective workmanship and materials. This Warranty does not apply to (a) consumable parts, such as batteries; (b) cosmetic damage, including but not limited to scratches and dents; (c) damage caused by use with non-VTech products; (d) damage caused by accident, misuse, unreasonable use, immersion in water, neglect, abuse, battery leakage, or improper installation, improper service, or other external causes; (e) damage caused by operating the product outside the permitted or intended uses described by VTech in the owner's manual; (f) a product or part that has been modified (g) defects caused by normal wear and tear or otherwise due to the normal aging of the product; or (h) if any VTech serial number has been removed or defaced.


Prior to returning a product for any reason, please notify the VTech Consumer Services Department by going to our website at vtechkids.com, filling out our Contact Us form located under the Customer Support link or calling 1-800-521-2010.

If the service representative is unable to resolve the issue, you will be provided instructions on how to return the product and have it replaced under Warranty. Return of the product under Warranty must adhere to the following rules: If VTech believes that there may be a defect in the materials or workmanship of the product and can confirm the purchase date and location of the product, we will at our discretion replace the product with a new unit or product of comparable value. A replacement product or parts assumes the remaining Warranty of the original product or 30 days from the date of replacement, whichever provides longer coverage.

THIS WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL, WRITTEN, STATUTORY, EXPRESS OR IMPLIED. IF VTECH CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY AND TO THE REPLACEMENT SERVICE AS DETERMINED BY VTECH IN ITS SOLE DISCRETION.

To the extent permitted by law, VTech will not be responsible for direct, special, incidental or consequential damages resulting from any breach of Warranty.

This Warranty is not intended to persons or entities outside the United States of America. Any disputes resulting from this Warranty shall be subject to the final and conclusive determination of VTech.

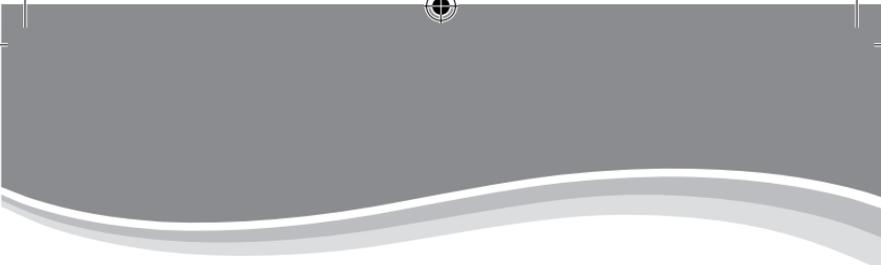

**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com



© 2017 Frog Box/Entertainment One UK Limited

TM & © 2017 VTech Holdings Limited.
All rights reserved.
Printed in China.
91-003448-001