

vtech®

User's Manual

peek-A-Boo Garden™



© 2003 VTech

Printed in China

91-02077-000-000 (英)

Dear Parent:

*Ever notice the look on your baby's face when they learn something new through their own discovery? These self-accomplished moments are a parent's greatest reward. To help fulfill them, VTech® created the **Smart Start**® series of toys.*

*These unique interactive learning toys directly respond to what children do naturally - play! Using innovative technology, these toys react to baby's interactions, making each play experience fun and unique as they learn age-appropriate concepts like first words, numbers, shapes, colors and music. More importantly, VTech®'s **Smart Start**® toys develop baby's mental and physical abilities by inspiring, engaging and teaching.*

At VTech®, we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting VTech® with the important job of helping your child learn and grow!

Sincerely,

 
Your Friends at VTech®

*To learn more about **Smart Start**® and other VTech® toys, visit www.vtech.com*

INTRODUCTION

Thank you for purchasing the **VTech® Peek-A-Boo Garden™** learning toy!

The **VTech® Peek-A-Boo Garden™** is an interactive floor toy for toddlers 9 months and up. Roll, press or pull the manipulative features to learn about letters, numbers and music from the three animal characters. The press buttons and movement of the animal characters will help reinforce the concept of cause and effect while strengthening fine motor development.

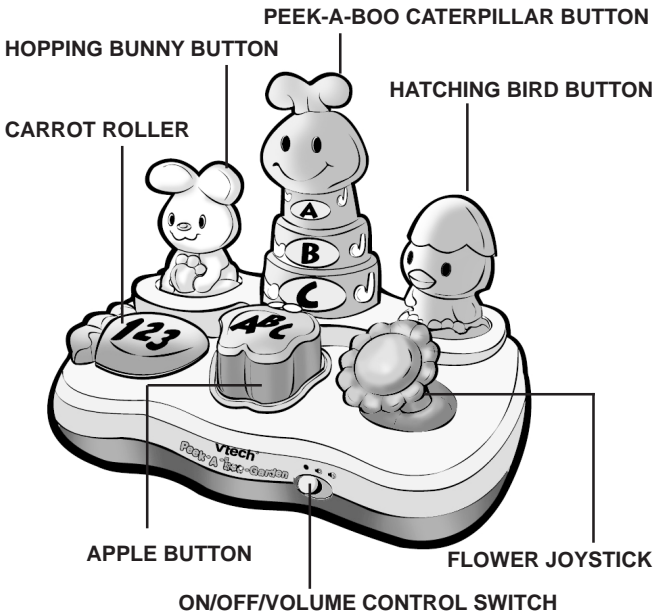

INCLUDED IN THIS PACKAGE

 
- One VTech® Peek-A-Boo Garden™ learning toy
- One instruction manual

WARNING: All packing materials, such as tape, plastic sheets, wire ties and tags are not part of this toy, and should be discarded for your child's safety.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit. Use a coin or screwdriver to loosen the screw.
3. Install 2 new "AA" (UM-3/LR06) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure the battery cover.

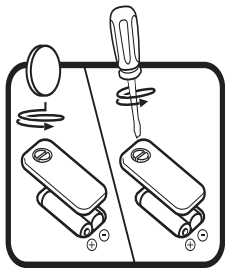

BATTERY NOTICE

- Install batteries correctly observing the polarity (+, -) signs to avoid leakage.
- Do not mix old and new batteries.
- Do not use batteries of different types.

- Remove exhausted or new batteries from the equipment when the unit will not be used for an extended period of time.
- Do not dispose of batteries in fire.
- Do not attempt to recharge ordinary batteries.
- The supply terminals are not to be short-circuited.
- Only batteries of the same and equivalent type as recommended are to be used.

WE DO NOT RECOMMEND THE USE OF RECHARGEABLE BATTERIES.

PRODUCT FEATURES

1. ON/OFF/VOLUME CONTROL SWITCH

To turn the unit **ON**, slide the **ON/OFF/VOLUME CONTROL SWITCH** to the **LOW VOLUME** (🔊) or the **HIGH VOLUME** (🔊) position. To turn the unit **OFF**, slide the **ON/OFF/VOLUME CONTROL SWITCH** to the **OFF** (●) position.

 


2. AUTOMATIC SHUT OFF


To preserve battery life, the **VTech® Peek-A-Boo Garden™** will automatically power-down after several minutes without input. The unit can be turned on again by activating any key.

ACTIVITIES


1. Roll the **carrot roller** and watch the bunny hop up and down. You will hear fun phrases introducing numbers, silly sounds and melodies. The lights will flash along with the sound response.

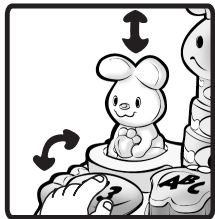

 
2. Press the **apple button** to see the caterpillar pop up segment by segment. You will hear fun phrases introducing letters, funny sounds and melodies. The lights will flash along with the sound response.

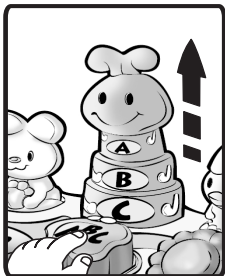

 
3. Pull the **flower joystick** to see the bird hatch from inside the egg. You will hear fun phrases introducing music and melodies. The lights will flash along with the sound response.

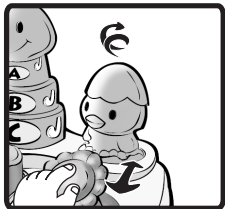

 4. Press on the three **animal characters** to hear random fun phrases encouraging you to continue playing. The lights will flash randomly with the sound.

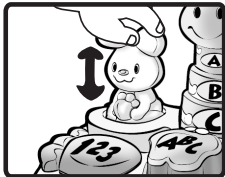

 5. Press the button again when a melody is playing to hear funny sounds play over top of the melody. The lights will flash along with the music.

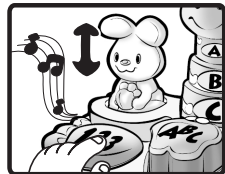

MELODY LIST:

1. Pop, Goes the Weasel

2. Skip to My Lou
3. She'll Be Coming Round the Mountain
4. Alphabet Song
5. My Bonnie
6. The Farmer in the Dell
7. Sing a Song of Sixpence
8. Turkey in the Straw
9. Ring Around the Rosy

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-800-267-7377 in Canada, and a service representative will be happy to help you.

For information on this product warranty, please call VTech® at 1-800-521-2010 in the U.S. or 1-800-267-7377 in Canada.

IMPORTANT NOTE:

Creating and developing **Smart Start**[®] products is accompanied by a responsibility that we at **VTech**[®] take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S., or 1-800-267-7377 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help