

**vtech**<sup>®</sup>

User's Manual

**Billi the Imagination Ball™**



© 2012 VTech  
Printed in China  
91-131600-001 US

Dear Parent,

At VTech®, we know how important the first day of school is for your child. To help prepare preschoolers for this important event, VTech® has developed the **Preschool Learning™** series of interactive toys.

**Preschool Learning™** features fun characters and inviting school themes that use technology to capture a child's attention and teach important preschool skills like spelling, counting and the alphabet. These vital skills are taught in a way that's both fun and highly engaging to maintain a child's interest. Children will also be introduced to fun school subjects such as art class, music class and even recess! With **Preschool Learning™**, learning is fun from day one!

At VTech®, we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting VTech® with the important job of helping your child learn and grow!

Sincerely,

Your friends at VTech®

To learn more about **Preschool Learning™** series and other VTech® toys, visit [www.vtechkids.com](http://www.vtechkids.com)

# INTRODUCTION


Thank you for purchasing the **VTech® Brillli the Imagination Ball™**!

**Brilli the Imagination Ball™** is an interactive toy that teaches your child counting, rhyming, vocabulary, and more! With his squishy texture and adorable face, your child will be engaged and entertained as they play one of five different learning activities. To select a game, simply rotate half of the ball to create a new face and Brilli will be ready for action! This ball even has a special motion sensor that knows when it has been tossed to keep track of the game and to prompt your child to continue playing!

VOLUME CONTROL  
BUTTON



NOSE BUTTON

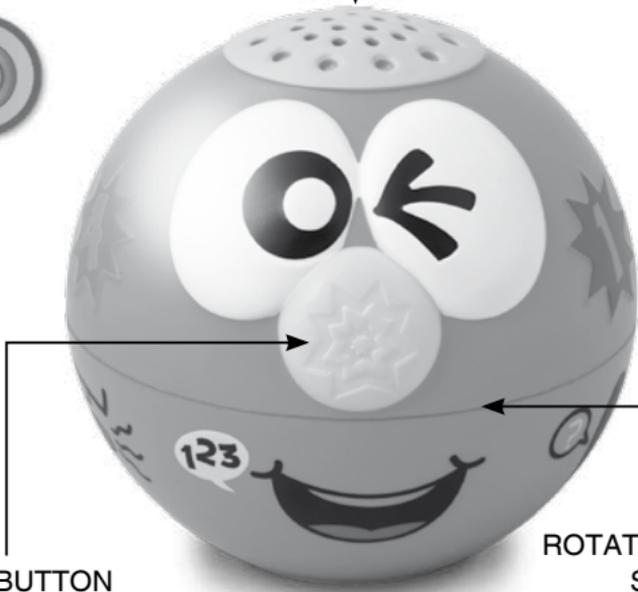

ROTATING MODE  
SELECTOR

# INCLUDED IN THIS PACKAGE

- One VTech® Brilli the Imagination Ball™ learning toy
- One instruction manual

## WARNING:

All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

## ATTENTION


Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches et étiquettes. Ils ne font pas partie du jouet.

**NOTE:** After removing from packaging, twist the top and bottom halves to activate normal play.

# GETTING STARTED

## BATTERY INSTALLATION

1. Make sure the unit is **OFF**.
2. Locate the battery cover on the bottom of the unit.
3. Use a small flathead screwdriver to open the battery cover.
4. Install 3 new "AAA" batteries following the diagram inside the battery box. (The use of new, alkaline batteries is recommended for maximum performance.)
5. Replace the battery cover and tighten to secure.

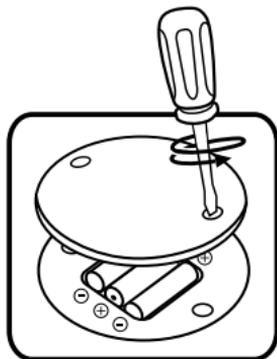

## BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type is recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

# PRODUCT FEATURES

## 1. TURN ON THE UNIT

To turn the unit on, twist the **TOP** and **BOTTOM** halves to line up Brilli's nose and a mouth, or press the **NOSE BUTTON**.



## 2. ROTATING MODE SELECTOR

Twist Brilli's **TOP** and **BOTTOM** halves to choose a game.

## 3. NOSE BUTTON

Press the **NOSE BUTTON** to answer a question. Press and hold the **NOSE BUTTON** for several seconds to turn the unit off.



## 4. AUTOMATIC SHUT-OFF

To preserve battery life, the unit will automatically turn off after several minutes of inactivity. The unit can be turned on again by turning the **ROTATING MODE SELECTOR** or pressing the **NOSE BUTTON**.

## 5. VOLUME BUTTON

Press the **VOLUME BUTTON** to choose from the three volume levels.



# ACTIVITIES

## 1. COUNTING

Twist Brilli's **TOP** and **BOTTOM** halves to line up his nose with his 1, 2, 3 mouth to enter the **COUNTING** game. Throw Brilli to count!



## 2. RHYME TIME

Twist Brilli's **TOP** and **BOTTOM** halves to line up his nose with his question mark mouth to enter the **RHYME TIME** game. Brilli will say two words, if they rhyme, press his nose. If they don't, throw him to another player.



## 3. SILLY SOUNDS

Twist Brilli's **TOP** and **BOTTOM** halves to line up his nose with his tongue to enter the **SILLY SOUNDS** game. Throw Brilli around to hear some silly sounds!



## 4. SOUNDS IN YOUR WORLD

Twist Brilli's **TOP** and **BOTTOM** halves to line up his nose with his whistling mouth to enter the **SOUNDS IN YOUR WORLD** game. Press Brilli's nose when you hear the sound that matches what he is looking for, and then throw him to the next player!



## 5. HOT POTATO

Twist Brilli's **TOP** and **BOTTOM** halves to line up his nose with his wide open mouth to enter the **HOT POTATO** game. Pass Brilli around and see who's left holding him when the music stops!



## CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on a hard surface and do not expose the unit to moisture or water.
5. This product is not submersible in water.

## TROUBLESHOOTING

If for some reason the program/activity stops working, please follow these steps:

1. Turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

## NOTE:

This equipment generates and uses radio frequency energy and if not installed and used properly, that is, in strict accordance with the manufacturer's instructions, it may cause interference to radio and television reception. It has been type tested and found to comply within the limits for a Class B computing device in accordance with the specifications in Sub-part J of Part 15 FCC rules, which are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference with radio or television reception, which can be determined by turning the equipment on and off, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

**Caution:** changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

THIS CLASS B DIGITAL APPARATUS COMPLIES WITH CANADIAN ICES-003.

CET APPAREIL NUMÉRIQUE DE LA CLASSE B EST CONFORME À LA NORME NMB-003 DU CANADA.

## **IMPORTANT NOTE:**

Creating and developing **Preschool Learning** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S., or 1-877-352-8697 in Canada with any problems and/or suggestions that you might have. A service representative will be happy to help you.