

# Disney

User's Manual

## Musical Learning Center



Visit the Disney Web site at [www.disney.com](http://www.disney.com)

© Disney  
Based on the "Winnie the Pooh" works,  
by A.A. Milne and E.H. Shepard.  
All rights reserved.

**vtech**®



**Dear Parent,**

At **VTech®** we know that a child's imagination is a truly wonderful thing and needs to be developed and nurtured. That's why we created the **Winnie the Pooh® electronic learning series™** of interactive learning toys to stimulate children's imaginations, while also teaching vital preschool concepts such as the alphabet, numbers, shapes, colors and objects.

Through the use of unique technology and engaging child-directed role-play scenarios, **Winnie the Pooh®** characters magically come to life to guide children through learning activities. These engaging characters foster children's critical reasoning skills, enhance their fine motor skills and engage them in exciting role-play activities for endless hours of learning fun.

At **VTech®** we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting **VTech®** with the important job of helping your child learn and grow!

Sincerely,

Your Friends at **VTech®**


To learn more about **Winnie the Pooh® electronic learning series™** and other **VTech®** toys, visit

[www.vtech.com](http://www.vtech.com)

# INTRODUCTION

Thank you for purchasing the **VTech® Musical Learning Center** learning toy!

The **VTech® Musical Learning Center** will introduce your child to a world of music fun! **Winnie the Pooh** and his friends invite you to join in the music concert! Pooh will help your child learn about colors, music and nature sounds with cheerful melodies making learning fun!

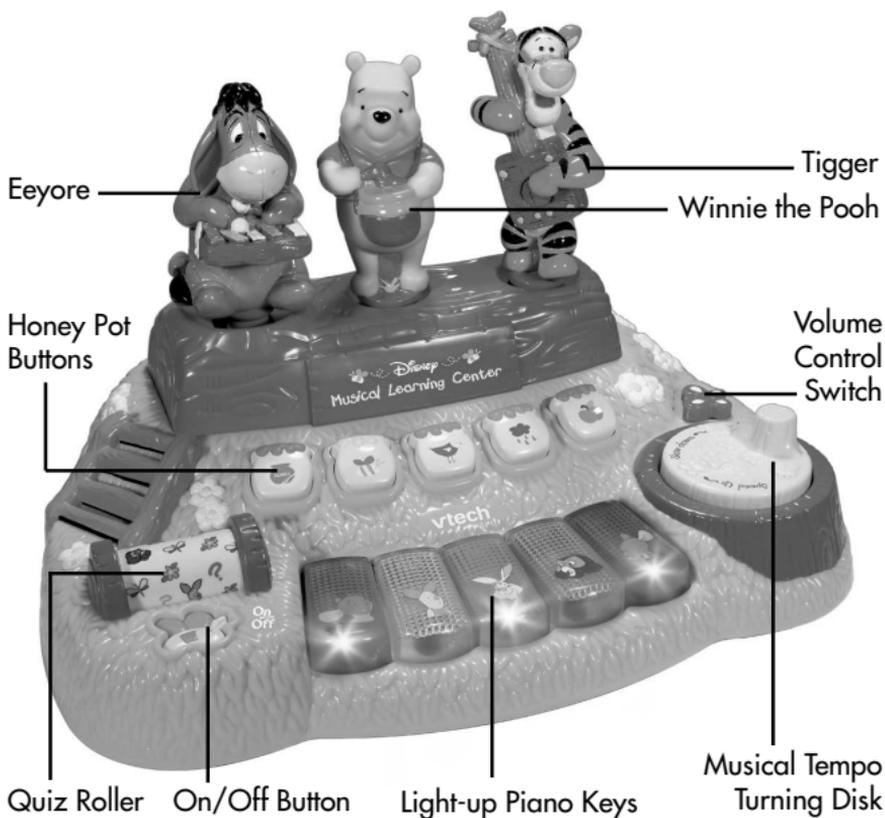

# INCLUDED IN THIS PACKAGE


- One VTech® Musical Learning Center learning toy
- One instruction manual

**WARNING:** All packing materials such as tape, plastic sheets, wire ties and tags are not part of this toy, and should be discarded for your child's safety.

## GETTING STARTED

### BATTERY INSTALLATION

1. Make sure the unit is **OFF**.
2. Locate the battery cover at the bottom of the unit. Use a coin or screwdriver to loosen the screw.
3. Install 3 new "AA" (UM-3/LR06) batteries as illustrated. (The use of new, alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure the battery cover.

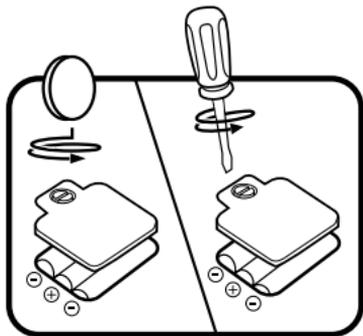

### BATTERY NOTICE

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged (if removable).
- Rechargeable batteries are only to be charged under adult supervision (if removable).
- Different types of batteries or new and used batteries are not to be mixed.
- Only batteries of the same or equivalent type as recommended are to be used.

- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- The toy is not to be connected to more than recommended number of power supplies.
- Do not dispose of battery in fire.

**WE DO NOT RECOMMEND THE USE OF RECHARGEABLE BATTERIES.**

## PRODUCT FEATURES

### ON/OFF BUTTON

1. Press the **On/Off**  **Button** to turn the unit on. **Winnie the Pooh** will welcome you to the concert.
2. Press a button to have musical fun!
3. Press the **On/Off Button** again to turn the unit off.

### VOLUME CONTROL SWITCH

Slide the butterfly **Volume Control Switch** located on the right side of the unit to adjust the volume.




### AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech® Musical Learning Center** will automatically turn off after several minutes without input. The unit can be turned on again by pressing the **On/Off Button**.

### 3D CHARACTER BUTTONS


Press one of the **3D Character Buttons** to hear a fun phrase and a song. Each character plays a different song accompanied by his own special instrument. The light-up piano buttons will flash along with the song.

Press other **3D Character Buttons** while a character is singing and they will jam along to the song with their instruments. Press them again to remove the instruments.

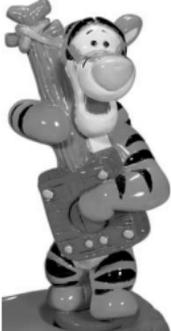• Eeyore with Xylophone	• Winnie the Pooh with Drum	• Tigger with Guitar
		

### HONEY POT BUTTONS

Press the **Honey Pot Buttons** to hear Pooh introduce the objects and animals followed by delightful melodies with fun sound effects.

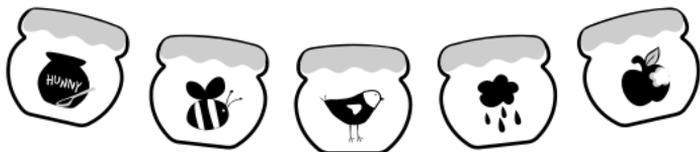

## MELODY LIST

**Honey Pot** - You are My Sunshine

**Bee** - If You're Happy and You Know It


**Bird** - Hey Diddle Diddle

**Rain** - Hickory Dickory Dock

**Apple** - Bingo

## PIANO KEYS


Press the **Light-up Piano Keys** to play one of the five melodies listed below. Keep pressing to finish the song!

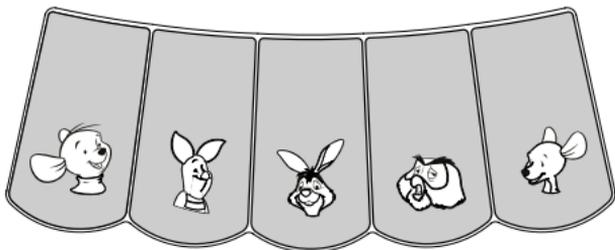

1. Ring Around the Rosie
2. The Wheels on the Bus
3. Sing a Song of Sixpence
4. Polly Put the Kettle On
5. Here We Go Round the Mulberry Bush


## MUSICAL TEMPO TURNING DISK

Turn the **Musical Tempo Turning Disk** clockwise to speed up the melody or song that is playing. Turn it counter-clockwise to slow down the music.

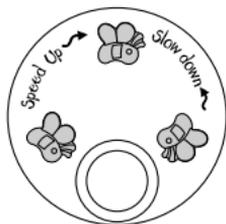

## QUIZ ROLLER

Spin the **Quiz Roller** anytime and Pooh will ask a question. Press the corresponding button to answer.

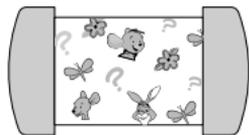

## SONG LYRICS

### • Opening Song

1

Sing ing with one friend

4

is hap py and sun ny. Sing

6

ing with two friends is swee ter than

8

hon ey.

## • Eeyore's Xylophone Song



1

4/4

If you're blue, play a song! Just watch Eey ore

5

sing a long! Play your tune and

9

in a while you'll be play ing with a smile!

Detailed description: This musical score is for 'Eeyore's Xylophone Song' in 4/4 time. It consists of three staves of music. The first staff starts with a measure rest, followed by a sequence of notes: quarter, quarter, quarter, quarter, eighth, eighth, quarter, quarter, quarter, quarter. The second staff begins with a quarter note, followed by a half note, a whole note, a quarter note, a measure rest, and a quarter note. The third staff starts with a quarter note, followed by quarter notes with eighth rests, quarter notes with eighth rests, and a quarter note with a measure rest.

## • Winnie the Pooh's Drum Song



1

4/4

Oh, my ho-ney pot is emp-ty. That doesn't soundlike fun. Un-less I play the ho-ney pot.

5

Just likea drum.

Detailed description: This musical score is for 'Winnie the Pooh's Drum Song' in 4/4 time. It consists of two staves of music. The first staff begins with a quarter rest, followed by a quarter note, a series of eighth notes with accidentals, and a quarter note. The second staff starts with a quarter note, followed by a quarter note, a quarter note, and a quarter rest.

## • Tigger's Guitar Song

1  
Tig ger's my friend who plays the gui tar.

3  
He's the ve ry best by far. He

4  
loves to jump 'round and 'round while he

5  
plays his boun cy sounds.

## CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

# TROUBLESHOOTING

If for some reason the program/activity stops working, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada.

## **IMPORTANT NOTE:**

Creating and developing **Winnie the Pooh** electronic learning products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada.

## **Note:**

This equipment induces a weak magnetic field that may affect watches, television sets or monitors. It is recommended to keep this unit away from metallic materials when playing.

## FCC NOTICE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.