

VTECH®

LITTLE SMART

My Bear-y First Steps™



USER'S MANUAL



© VTECH
Printed in China
91-01360-004 (美)

Dear Parent:


At VTECH® we know that a child has the ability to do great things.

That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. Whether it's introducing numbers and letters, identifying colors and shapes, or stimulating senses with lights and music, all VTECH® infant and toddler learning products encourage your child's natural growth and discovery skills. When it comes to providing electronic learning products that enlighten, entertain and develop minds, at VTECH® we see the potential in every child.

INTRODUCTION

Thank you for purchasing the **LITTLE SMART My Bear-y First Steps™** learning toy! This product is one of a family of high-quality **LITTLE SMART®** electronic learning toys. We at **VTECH®** are committed to providing the best possible products to entertain and educate your child. Should you have any questions or concerns, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-800-267-7377 in Canada.

The **LITTLE SMART My Bear-y First Steps™** learning toy is specifically designed for infants aged 6 months and up. The **LITTLE SMART My Bear-y First Steps™** learning toy is both a functional walker and an electronic activity panel. Your child will enjoy learning about numbers, colors, letters and music notes while learning to walk at the same time! The electronic activity panel can be easily detached from the bear's body for take-along fun!

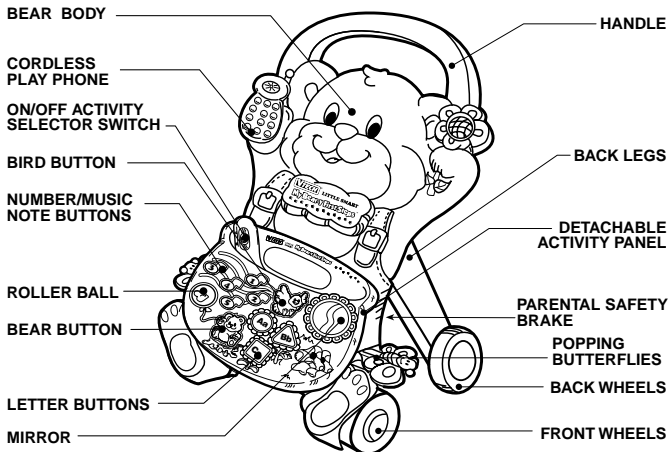


INCLUDED IN THIS PACKAGE

- One VTECH® LITTLE SMART My Bear-y First Steps™ learning toy.
- One instruction manual.

WARNING: All packing materials such as tape, plastic sheets, wire ties and tags are not part of this toy, and should be discarded for your child's safety.

BATTERY INSTALLATION

1. Make sure the unit is turned **off**.
2. Locate the battery cover on the bottom of the Detachable Activity Panel. Use a coin or screwdriver to loosen the screw.
3. Install 2 new “AA” (UM-3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure the battery cover.

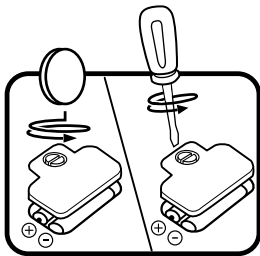

BATTERY NOTICE

- Install batteries correctly observing the polarity (+, -) signs to avoid leakage.
- Do not mix old and new batteries.
- Do not use batteries of different types.
- Remove exhausted or new batteries from the equipment when the unit will not be used for an extended period of time.
- Do not dispose of batteries in fire.
- Do not attempt to recharge ordinary batteries.
- The supply terminals are not to be short-circuited.

WE DO NOT RECOMMEND THE USE OF RECHARGEABLE BATTERIES.


NOTE: If for some reason the program/activity stops working, then please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-800-267-7377 in Canada, and a service representative will be happy to help you.





ASSEMBLY INSTRUCTIONS


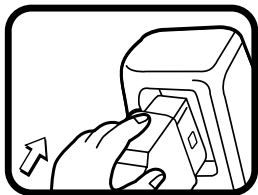
1. Place the leg into the walker as shown. Put the leg into the slot as far as it can go. Test to make sure the leg is locked securely in place.
2. Repeat this procedure with the other leg.




NOTE: Once the legs have been attached and securely locked into place, the legs cannot be removed from the walker.

 TO BEGIN PLAY

1. Slide the **ON/OFF/ACTIVITY SELECTOR SWITCH** to the **TALKING ACTIVITY** () or the **MUSIC ACTIVITY** () position to turn the unit **ON**. You will hear "Let's go!" followed by a bear laughing sound effect. All the number/music note buttons will flash.
2. To adjust the volume, slide the **VOLUME CONTROL SWITCH** located on the back of the activity panel to () for **LOW VOLUME** or () for **HIGH VOLUME**.

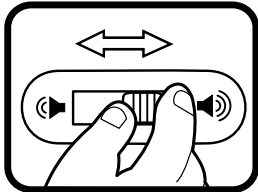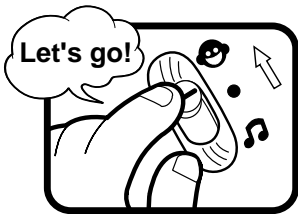

3. Slide the **ON/OFF/ACTIVITY SELECTOR SWITCH** to the **MIDDLE POSITION (●)** to turn the unit **OFF**.

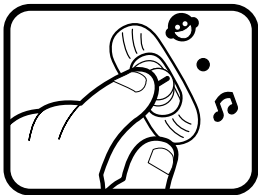

4. Place the activity panel onto the walkemelodies will play randomly.




AUTOMATIC SHUT-OFF


To preserve battery life, the **LITTLE SMART My Bear-y First Steps™** learning toy will turn off automatically after a few minutes without input. The unit can be turned on again by pressing any button.

Parental Safety Brake Instructions


1. The parental safety brake is located on the front wheel to enable and disable the walker wheels.

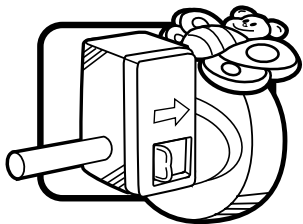

2. Slide the brake lever from left to right to disable the wheel movement.
 - Make sure the lever securely locks on the wheel.

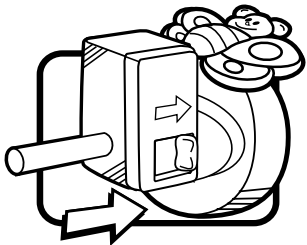


3. Slide the brake lever from right back to left to enable the wheels.

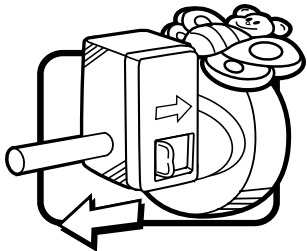


HOW TO ATTACH AND REMOVE THE ELECTRONIC ACTIVITY PANEL

1. Slide the lock up and lift up on the electronic activity panel, removing it from the walker.

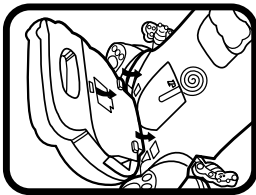

2. The electronic activity panel comes with a carry handle for easy take-along play. Your child will enjoy its portability while learning about colors, numbers, animals, shapes and more!

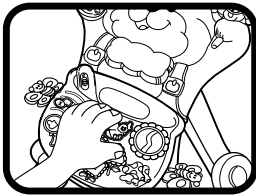


ACTIVITIES

A. Talking Activity


1. Slide the **ON/OFF/ACTIVITY SELECTOR SWITCH** to the **TALKING ACTIVITY** (😊) position. You will hear "Let's go!" followed by a bear laughing sound effect. The number/music note buttons will flash randomly with the voice and sound effect.




2. Press any **LETTER BUTTON** to hear the letter identified followed by a short tune. The number/music note buttons will flash.

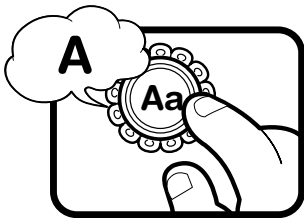


3. Press the **BEAR BUTTON** to hear "I'm a bear!" followed by a bear singing. The number/music note buttons will flash.

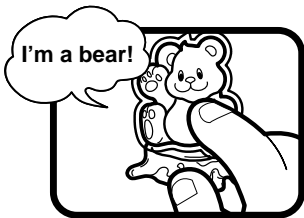


4. Press the **BIRD BUTTON** to hear "Hello bird!" followed by a bird sound effect. The number/music note buttons will flash.

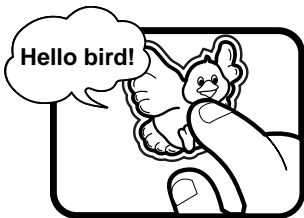

5. Press the **NUMBER/MUSIC NOTE BUTTONS** to hear the number on the corresponding button identified. The number/music note buttons will flash one by one to correspond with the counting.

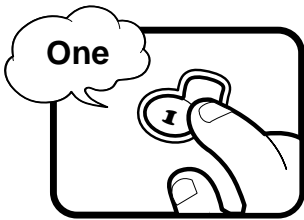


6. Slide the **ROLLER BALL** to play all of the melodies in sequence. The number/music note buttons will flash.

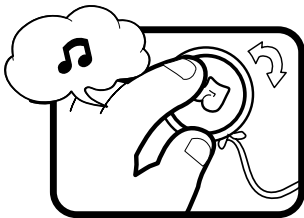


B. Music Activity


1. Slide the **ON/OFF/ACTIVITY SELECTOR SWITCH** to the **MUSIC ACTIVITY** (🎵) position to hear The Alphabet Song. All music note buttons will flash with the melody.

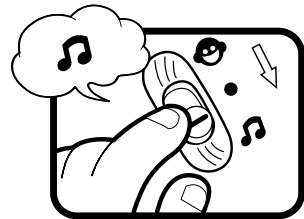


2. Press any **LETTER BUTTON** to hear the color identified followed by a short tune. The number/music note buttons will flash.

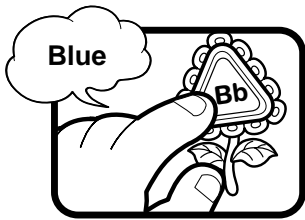


3. Press the **BEAR BUTTON** to hear the bear singing followed by a random melody. The number/music note buttons will flash.

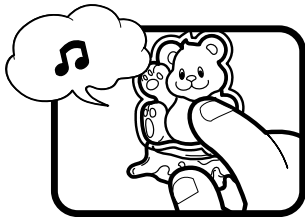


4. Press the **BIRD BUTTON** to hear a bird sound effect followed by a random melody. The number/music note buttons will flash.

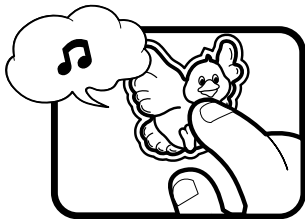

5. Press the **NUMBER/MUSIC NOTE BUTTONS** to hear a different music note. The number/music note buttons will flash.

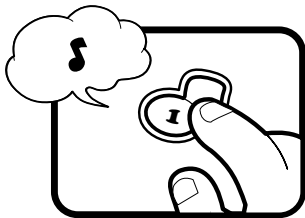

6. Slide the **ROLLER BALL** to hear a random melody one note at a time. tempo of the music is controlled by the roller ball. The number/music note buttons will flash accordingly.

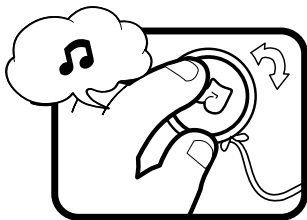

MELODY LIST:

1. Skip To My Lou
2. The Alphabet Song
3. Sing A Song Of Sixpence
4. Toyland
5. Mulberry Bush
6. Shoo Fly, Don't Bother Me
7. Toreador Song
8. Hickory Dickory Dock
9. Looby Loo
10. Are You Sleeping?

CARE AND MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

IMPORTANT NOTE

Creating and developing infant/toddler products is accompanied by a responsibility that we at **VTECH®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-800-267-7377 in Canada with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Note:

This equipment generates and uses radio frequency energy and if not installed and used properly, that is, in strict accordance with the manufacturer's instructions, it may cause interference to radio and television reception. It has been type tested and found to comply within the limits for a Class B computing device in accordance with the specifications in Sub-part J of Part 15 FCC Rules, which are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference with radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- reorient the receiving antenna
- relocate this product with respect to the receiver
- move this product away from the receiver