



LITTLE SMART

HUG-A-Ball™

USER'S MANUAL



© VTECH
Printed in China
91-01373-000 (美)

Dear Parent:


At VTECH® we know that a child has the ability to do great things.

That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. Whether it's introducing numbers and letters, identifying colors and shapes, or stimulating senses with lights and music, all VTECH® Baby Development learning products encourage your child's natural growth and discovery skills. When it comes to providing electronic learning products that enlighten, entertain and develop minds, at VTECH® we see the potential in every child.

INTRODUCTION

Thank you for purchasing the **VTECH® LITTLE SMART Hug-A-Ball™** learning toy! This product is one of a family of high-quality **LITTLE SMART®** electronic learning products. We at **VTECH®** are committed to providing the best possible products to entertain and educate your child. Should you have any questions or concerns, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-800-267-7377 in Canada.

The **LITTLE SMART Hug-A-Ball™** learning toy is a soft and cuddly plush toy designed for infants. Flashing lights, fun sound effects and six built-in melodies provide sensory stimulation for babies.

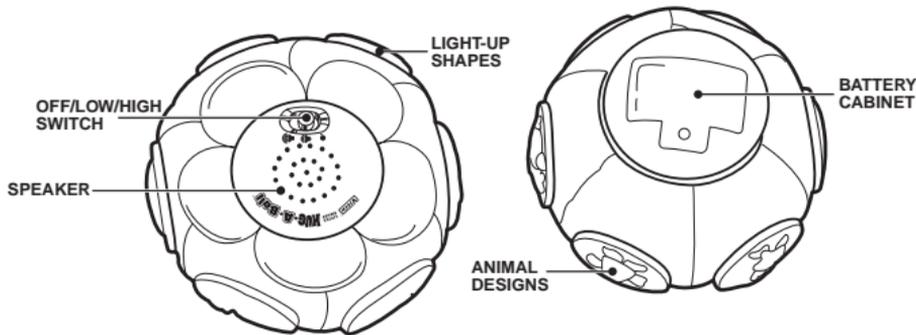


INCLUDED IN THIS PACKAGE

- One **VTECH® LITTLE SMART Hug-A-Ball™** learning toy.
- One instruction manual.

WARNING: All packing materials, such as tape, plastic sheets, wire ties and tags are not part of this toy, and should be discarded for your child's safety.

BATTERY INSTALLATION

1. Make sure the unit is turned off.
2. Locate the battery cover on the bottom of the unit. Use a screwdriver to loosen the screw.
3. Install 2 new “AA” (UM-3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure the battery cover.

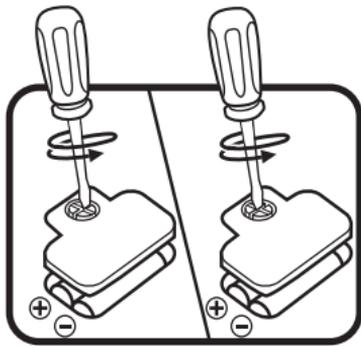

BATTERY NOTICE

- Install batteries correctly observing the polarity (+, -) signs to avoid leakage.
- Do not mix old and new batteries.
- Do not use batteries of different types.
- Remove exhausted or new batteries from the equipment when the unit will not be used for an extended period of time.
- Do not dispose of batteries in fire.
- Do not attempt to recharge ordinary batteries.
- The supply terminals are not to be short-circuited.

WE DO NOT RECOMMEND THE USE OF RECHARGEABLE BATTERIES.


NOTE: If for some reason the program/activity stops working, then please follow these steps:

1. Please turn the unit off.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit on. The unit should now be ready to play again.


If the problem persists, please call our Consumer Services Department and a representative will be happy to help you.

TO BEGIN PLAY

1. Turn the **Off/Low/High Switch** to the () position for high volume or to the () position for low volume. You will hear a short tune followed by "Hello, let's have a ball!"

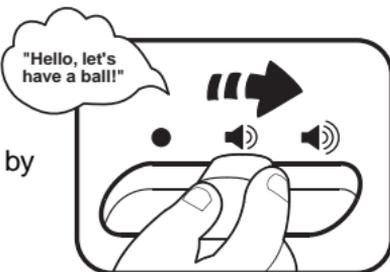


2. Move the ball to hear an animal sound effect followed by a melody or a spoken phrase. For example, when rolling the ball you will hear 1 of 6 animal sound effects followed by 1 of 6 random melodies. You may also hear "Hello, let's have a ball!" The animal lights will light up with all sound.

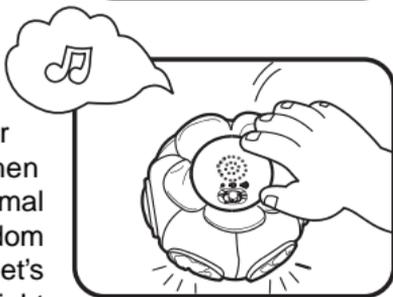

3. Turn the **Off/Low/High Switch** to () to turn the unit off.

Note: Without input after 30 seconds, the unit will turn off automatically.

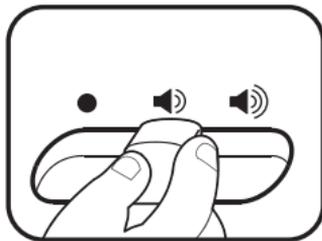

CARE AND MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not being used for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

IMPORTANT NOTE

Creating and developing Baby Development products is accompanied by a responsibility that we at **VTECH**® take very seriously. We make every effort to ensure the accuracy of the information which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-800-267-7377 in Canada with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Note:

This equipment generates and uses radio frequency energy and if not installed and used properly, that is, in strict accordance with the manufacturer's instructions, it may cause interference to radio and television reception. It has been type tested and found to comply within the limits for a Class B computing device in accordance with the specifications in Sub-part J of Part 15 FCC Rules, which are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference with radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- reorient the receiving antenna
- relocate this product with respect to the receiver
- move this product away from the receiver