

# vtech®

# User's Manual

## Touch & Teach Turtle™



© 2008 VTech

Printed in China

91-002294-000-000 (美)

Dear Parent:

Ever notice the look on your baby's face when they learn something new through their own discovery? These self-accomplished moments are a parent's greatest reward. To help fulfill them, VTech® created the **Infant Learning** series of toys.

These unique interactive learning toys directly respond to what children do naturally - play! Using innovative technology, these toys react to baby's interactions, making each play experience fun and unique as they learn age-appropriate concepts like first words, numbers, shapes, colors and music. More importantly, VTech®'s **Infant Learning** toys develop baby's mental and physical abilities by inspiring, engaging and teaching.

At VTech®, we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting VTech® with the important job of helping your child learn and grow!

Sincerely,

Your Friends at VTech®

To learn more about **Infant Learning** and other VTech® toys, visit [www.vtechkids.com](http://www.vtechkids.com)

# INTRODUCTION


Thank you for purchasing the **VTech® Touch & Teach Turtle™** learning toy!

The **VTech® Touch & Teach Turtle™** is designed with curious toddlers in mind. This cheerful turtle will stroll through pages and pages of learning fun, teaching numbers, letters, animals and shapes along the way. Entertaining music and amusing short stories will round out the fun!

HAT BUTTON

LIGHT-UP  
LEARNING BUTTONS

VOLUME  
CONTROL SWITCH

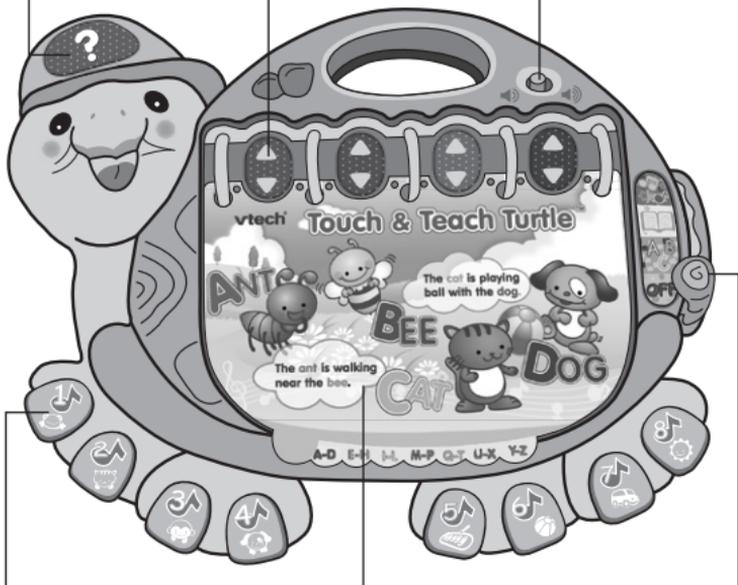

NUMBER  
BUTTONS

A-Z STORY BOOK

ON/OFF/MODE  
SELECTOR SWITCH

# INCLUDED IN THIS PACKAGE


- One VTech® Touch & Teach Turtle™ learning toy.
- One user's manual.

**WARNING:** All packing materials, such as tape, plastic sheets, wire ties and tags are not part of this toy, and should be discarded for your child's safety.

## GETTING STARTED

### BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit. Use a coin or a screwdriver to loosen the screw.
3. Install 2 new 'AA' (AM-3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure the battery cover.

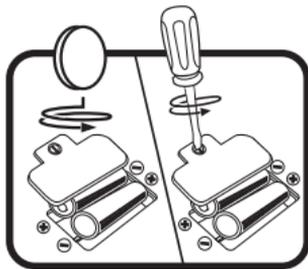

### BATTERY NOTICE

- Install batteries correctly observing the polarity (+, -) signs to avoid leakage.
- Do not mix old and new batteries.
- Do not use batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Remove the batteries from the equipment when the unit will not be used for an extended period of time.


- Always remove exhausted batteries from the equipment.
- Do not dispose of batteries in fire.
- Do not attempt to recharge ordinary batteries.
- The supply terminals are not to be short-circuited.
- Only batteries of the same and equivalent type as recommended are to be used.

**WE DO NOT RECOMMEND THE USE OF RECHARGEABLE BATTERIES.**

## PRODUCT FEATURES

### 1. ON/OFF/MODE SELECTOR SWITCH

To turn the unit **ON**, slide the **ON/OFF/MODE SELECTOR SWITCH** to the **LETTER MODE (ABC)**, **STORY MODE (📖)** or the **MUSIC MODE (🎵)** position. To turn the unit **OFF**, slide the **ON/OFF/MODE SELECTOR SWITCH** to the **OFF (OFF)** position.

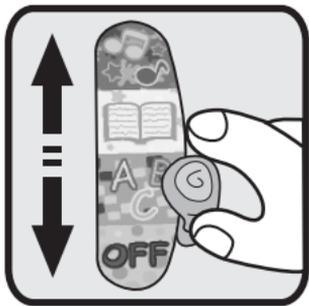

### 2. MODES OF PLAY


The three modes of play include **LETTER**, **STORY** and **MUSIC**. Slide the **MODE SELECTOR SWITCH** to choose a mode of play.

### 3. AUTOMATIC SHUT-OFF

To preserve the battery life, the **VTech® Touch & Teach Turtle™** will automatically power-down after approximately 30 seconds without input. The unit can be turned on again by pressing any button or turning a book page.

# ACTIVITIES


1. Slide the mode selector switch to choose a mode of play. You will hear a cheerful theme song, random short tunes and some phrases depending on the selected mode. The lights will flash along with the sounds.

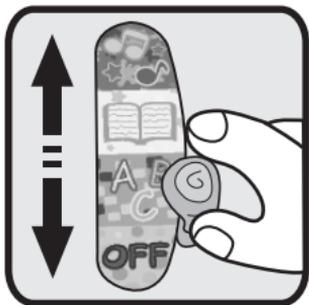


2. Turn the book pages to hear magical sounds, giggling sounds or short tunes, as well as some playful phrases. The lights will flash along with the sounds.



3. Press the light-up buttons to do the following: learn letters, shapes, animals, objects and more in **Letter Mode**; read some interesting short stories with background music in **Story Mode**; and hear a variety of sound effects and melodies in **Music Mode**. Additionally, when a melody is playing in Music Mode, press the light-up buttons to play corresponding sound effects with the tune. In all modes, the lights will flash with the sounds.

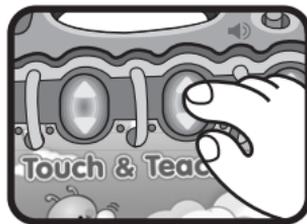

4. Press the number buttons to do the following: learn numbers 1 through 8 and hear upbeat short tunes in **Letter Mode**; hear interesting sound effects in **Story Mode**; and play melodies in **Music Mode**. While a melody is playing, press the number buttons again to play the tune one note at a time. When the melody is finished, press the number buttons again to hear piano notes. In all modes, the lights will flash with the sounds.

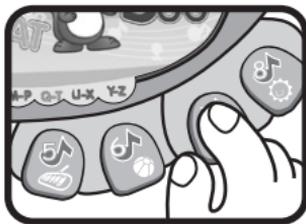

5. Press the light-up hat button to hear random questions about numbers, letters, shapes, animals or objects depending on the selected mode and turned page. Press the number buttons or the light-up buttons to answer the questions. In all modes, the lights will flash with the sounds.



## MELODY LIST:

1. Ants Go Marching
2. Pop! Goes the Weasel
3. Alouette
4. Hickory Dickory Dock
5. Sailing, Sailing
6. Glow Worm
7. Skip to My Lou
8. Here We Go Around the Mulberry Bush

## SUNG SONG LYRICS: (Tune of “Alphabet Song”)

A, B, C, come learn with me.

Letters, shapes and 1, 2, 3.

## CARE & MAINTENANCE

1. Keep the unit and book pages clean by wiping them with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

## TROUBLESHOOTING

If for some reason the program/activity stops working, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

For information on this product's warranty, please call **VTech®** at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada.

**IMPORTANT NOTE:**

Creating and developing **Infant Learning** products is accompanied by a responsibility that we at **VTech®** take very seriously. **We** make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

**Note:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

THIS CLASS B DIGITAL APPARATUS COMPLIES WITH CANADIAN ICES-003.

CET APPAREIL NUMÉRIQUE DE LA CLASSE B EST CONFORME À LA NORME NMB-003 DU CANADA.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.