


Dear Parent:

At VTech® we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. Whether it's introducing numbers and letters, identifying colors and shapes, or stimulating senses with lights and music, all VTech® infant and toddler learning products encourage your child's natural growth and discovery skills. When it comes to providing electronic learning products that enlighten, entertain, and develop minds, at VTech® we see the potential in every child.

INTRODUCTION

Thank you for purchasing the **VTech® LITTLE SMART® Light-Up Carousel™** learning toy! We at **VTech®** are committed to providing the best possible products to entertain and educate your child. Should you have any questions or concerns, please call our Consumer Services Department at 1-800-521-2010 in the U.S., 1-800-267-7377 in Canada, or (01235) 546810 in the U.K..

The **VTech® LITTLE SMART® Light-Up Carousel™** learning toy is designed specifically for children 9 months and up. This classic push-button spin toy introduces animals, shapes, numbers, and music, all in a colorful carousel design. The **LITTLE SMART® Light-Up Carousel™** learning toy includes all the decoration and fun of a real merry-go-round as well as valuable learning activities that will both delight and teach your child!

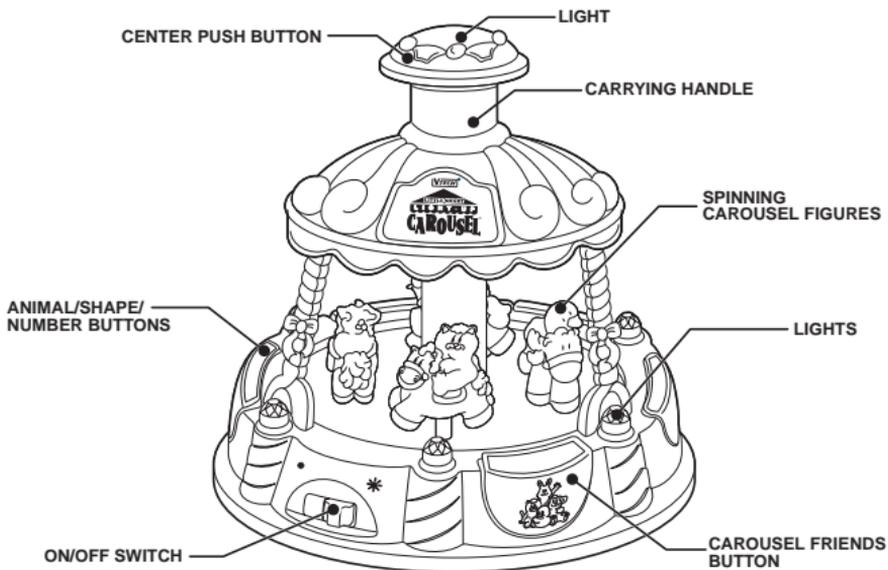


INCLUDED IN THIS PACKAGE

- One VTech® LITTLE SMART® Light-Up Carousel™ learning toy.
- One instruction manual.

WARNING: All packing materials such as tape, plastic sheets, wire ties and tags are not part of this toy, and should be discarded for your child's safety.

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit. Use a coin or screwdriver to loosen the screw.
3. Install 2 “AA” (UM-3/LR6) batteries following the diagram inside the battery box. (The use of new, alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure the battery cover.

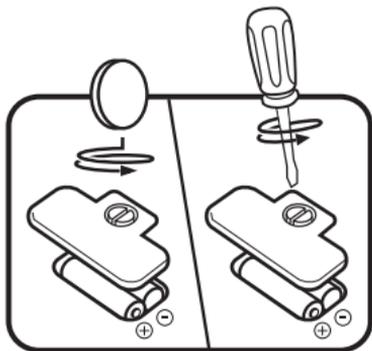

BATTERY NOTICE

- Install batteries correctly observing the polarity (+,-) signs to avoid leakage.
- Do not mix old and new batteries.
- Do not use batteries of different types.
- Remove exhausted or new batteries from the equipment when you are not going to use the unit for a long time.
- Do not dispose of batteries in fire.
- Do not attempt to recharge ordinary batteries.
- The supply terminals are not to be short-circuited.

WE DO NOT RECOMMEND THE USE OF RECHARGEABLE BATTERIES.


NOTE: If for some reason the program/activity stops working, then please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.


If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S., 1-800-267-7377 in Canada, or (01235) 546810 in the U.K. and a service representative will be happy to help you.

TO BEGIN PLAY


1. To begin play, slide the **ON/OFF SWITCH** to the **ON** position (☀). You will hear a short tune and lights will flash in rhythm with the sound.

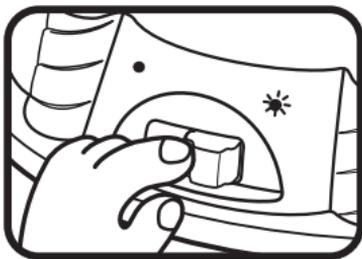

2. To adjust the volume, slide the **VOLUME CONTROL SWITCH** located on the bottom of the unit, to the Low Volume (🗲) or High Volume (🔊) position.

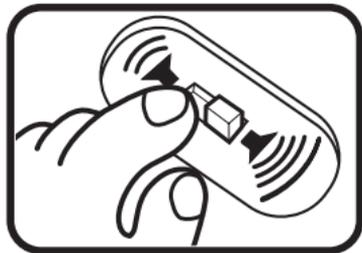

3. To turn the unit **OFF**, slide the **ON/OFF SWITCH** to the **OFF** position (●).

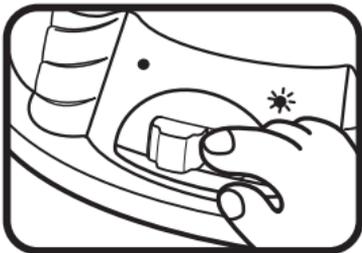

SPIN ACTIVITIES

1. With the unit turned **ON**, firmly push down and quickly release the large center button on the top of the carousel. The carousel figures will spin smoothly and lights will flash in rhythm to the melody being played. After the spinning and melody completely stop, push the center push button again to start a new spin and melody.




Five Cheerful Melodies:

- Animal Fair
 - The Merry Go Round
 - Twinkle, Twinkle, Little Star
 - Three Little Kittens
 - The Mulberry Bush
2. With the unit turned **OFF**, push and release the large center button on the top of the carousel. The carousel figures will spin smoothly without lights or melody play.


Note: The carousel will stop spinning if any of the carousel figures are blocked.

BUTTON ACTIVITIES


1. Press any of the buttons on the base of the unit while the carousel is spinning. You will hear the button animal sing along with the melody and lights will flash in rhythm with the sound. For example, press the Duck/Heart/Four button to hear the duck sing to the melody and lights.

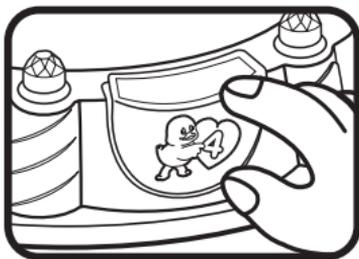

2. Press any of the four Animal/Shape/Number buttons on the base of the unit while the carousel is not spinning. You will hear the button animal identified and a sound effect. Press the same button again to hear the button shape identified and a short melody. Press the same button a third time to hear the button number identified and a short tune. Lights will flash in rhythm with the sound.

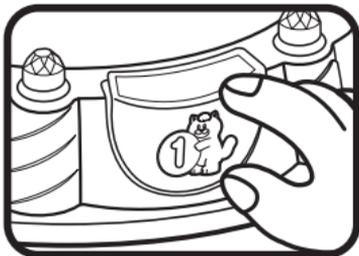

3. Press the single Carousel Friends button on the base of the unit to hear random silly sound effects. Lights will flash in rhythm with the sound.

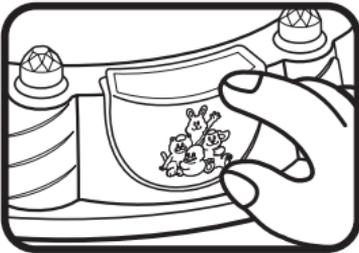

CARE AND MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

IMPORTANT NOTE:

Creating and developing Infant/Toddler products is accompanied by a responsibility that we at **VTech**® take very seriously. We make every effort to ensure the accuracy of the information which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S., 1-800-267-7377 in Canada or 01235-546810 in the U.K. with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Note:

This equipment generates and uses radio frequency energy and if not installed and used properly, that is, in strict accordance with the manufacturer's instructions, it may cause interference to radio and television reception. It has been type tested and found to comply within the limits for a Class B computing device in accordance with the specifications in Sub-part J of Part 15 FCC Rules, which are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference with radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- reorient the receiving antenna
- relocate this product with respect to the receiver
- move this product away from the receiver