

**vtech**<sup>®</sup>

**User's Manual**

# Roll & Learn Piano™



© 2005 VTech  
Printed in China  
91-02138-000 (美)

*Dear Parent:*

*Ever notice the look on your baby's face when they learn something new through their own discovery? These self-accomplished moments are a parent's greatest reward. To help fulfill them, VTech® created the **Infant Learning** series of toys.*

*These unique interactive learning toys directly respond to what children do naturally – play! Using innovative technology, these toys react to baby's interactions, making each play experience fun and unique as they learn age-appropriate concepts like first words, numbers, shapes, colors and music. More importantly, VTech®'s **Infant Learning** toys develop baby's mental and physical abilities by inspiring, engaging and teaching.*

*At VTech®, we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting VTech® with the important job of helping your child learn and grow!*

*Sincerely,*


*Your Friends at VTech®*

*To learn more about **Infant Learning** and other VTech® toys, visit [www.vtech.com](http://www.vtech.com)*

# INTRODUCTION

Thank you for purchasing the **VTech® Roll & Learn Piano™** learning toy.

The **VTech® Roll & Learn Piano™** is an interactive electronic piano for babies 6 months and up. Three-sided roller with a variety of musical instruments and two modes of play encourages exploration and learning. Three brightly colored piano keys teach a variety of curriculums including, animal names and sounds, colors and numbers. Sliding cymbals, drum and trombone buttons introduce basic instrument names, sounds and a variety of music styles. A great introduction to music for budding musicians.

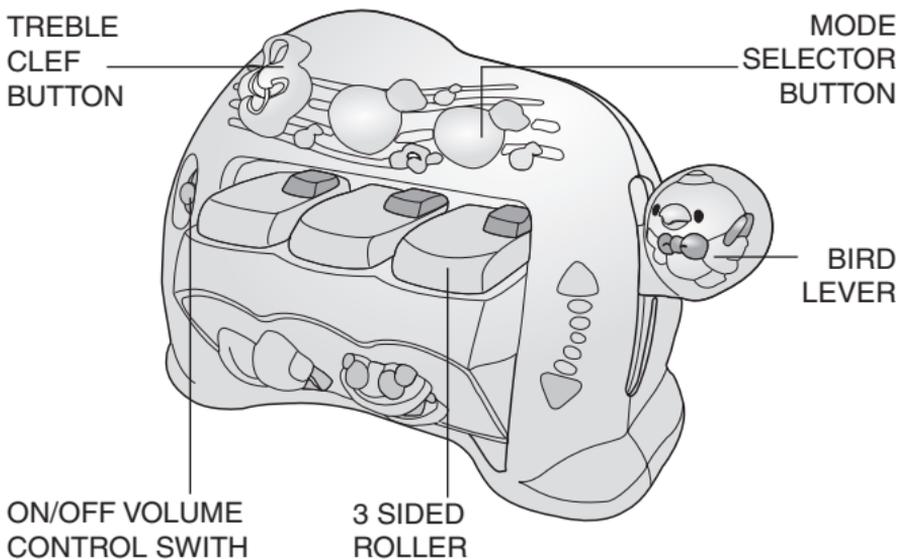

# INCLUDED IN THIS PACKAGE


- One VTech® Roll & Learn Piano™ learning toy
- One instruction manual

**WARNING:** All packing materials, such as tape, plastic sheets, wire ties and tags are not part of this toy, and should be discarded for your child's safety.

## GETTING STARTED

### BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit. Use a coin or a screwdriver to loosen the screw.
3. Install 3 new “AA” (UM-3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure the battery cover.

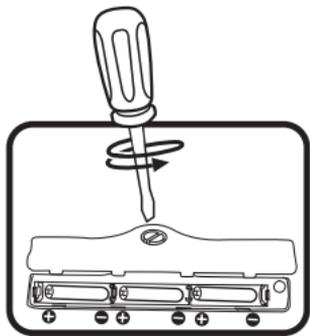

### BATTERY NOTICE

- Install batteries correctly observing the polarity (+, -) signs to avoid leakage.
- Do not mix old and new batteries.
- Do not use batteries of different types.
- Remove batteries from the equipment when the unit will not be used

for an extended period of time.

- Do not dispose of batteries in fire.
- Do not attempt to recharge ordinary batteries.
- The supply terminals are not to be short-circuited.
- Only batteries of the same and equivalent type as recommended are to be used.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.

**WE DO NOT RECOMMEND THE USE OF RECHARGEABLE BATTERIES.**

## PRODUCT FEATURES

### 1. ON/OFF/VOLUME CONTROL SWITCH

To turn the unit **ON**, slide the **ON/OFF/VOLUME CONTROL SWITCH** to the **LOW VOLUME** (  ) or **HIGH VOLUME** (  ) position. To turn the unit **OFF**, slide the **ON/OFF/VOLUME CONTROL SWITCH** to the **OFF** (  ) position.



### 2. MODES OF PLAY


The two modes of play include **LEARNING** and **MUSIC**.

### 3. AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech® Roll & Learn Piano™** will automatically power-down after approximately 30 seconds without input. The unit can be turned on again by pressing any button, pulling the bird lever or spinning the rollers.

# ACTIVITIES

1. Slide the switch to turn the unit on, you will hear a song followed by an introductory phrase. The lights will flash with the sounds.

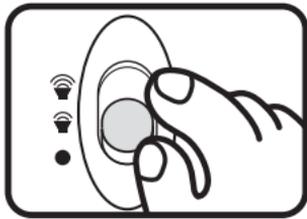

2. Press the **light-up treble clef** button to hear a song or a variety of melodies with random animal sounds. The lights will flash with the sounds.




3. Press the **big light-up music note** button to activate the learning mode. In this mode, press the buttons to learn about numbers, colors, animal names and sounds as well as instrument names and sounds. The lights will flash with the sounds.



4. Press the **small light-up music note** button to activate the music mode. In this mode, press the buttons to hear a variety of fun musical phrases, melodies and short tunes played in a variety of styles. The lights will flash with the sounds.



5. Pull the **bird lever** to hear a bird sound and to spin the roller. When the roller stops, you will hear a short tune. Press the buttons for a variety of responses. The lights will flash with the sounds.

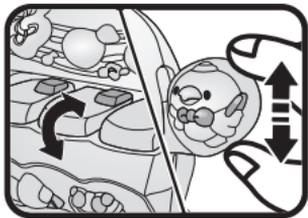

6. If there is no input to the unit after approximately ten seconds, you will hear a musical phrase. After another ten seconds if there is still no input, you will hear a short musical phrase and a short tune. If there continues to be no input to the unit, it will automatically power-down.

## MELODY LIST

1. The Entertainer
2. Rockin' Robin
3. Sing a Song of Sixpence
4. Pop! Goes the Weasel
5. Froggie Went a Courtin'
6. Sailor's Hornpipe
7. When the Saints Go Marching In
8. Oh Susanna
9. She'll Be Comin' Round the Mountain

## SONG LYRICS (To tune of If You're Happy and You Know It)

If you want to play with me, clap the beat!

If you want to dance with me, stomp your feet!

If you want to have some fun, start tapping on they keys.

If you want to sing a song, play with me!

# CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

# TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

For information on this product warranty, please call **VTech**® at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada.

## **IMPORTANT NOTE:**

Creating and developing **Infant Learning** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

## **Note:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help